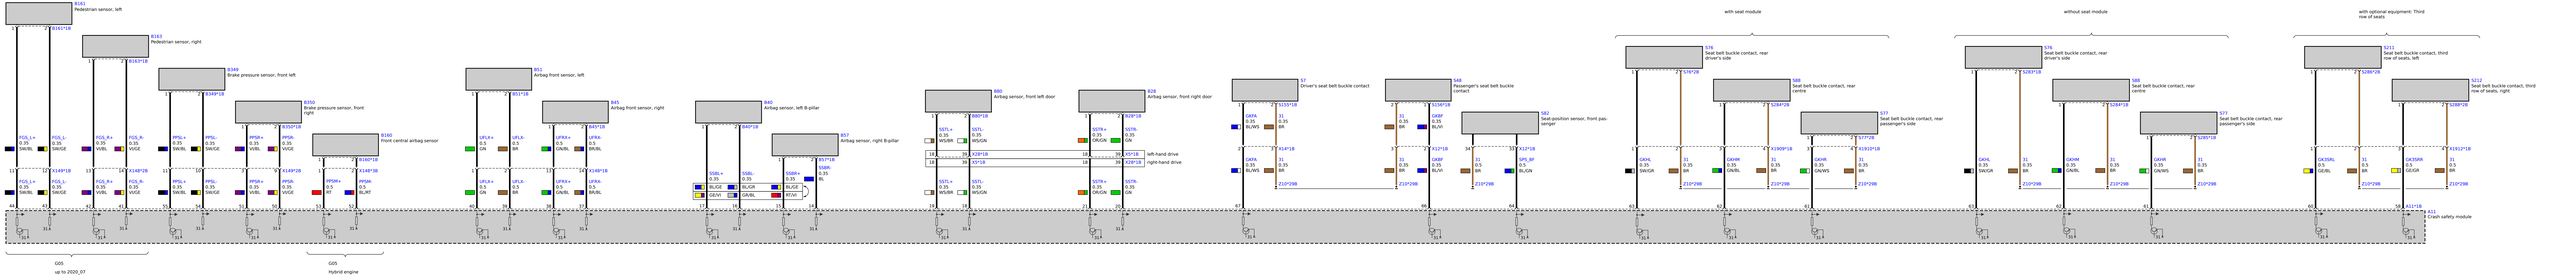
A161
Pedestrian sensor, left
B161*1B
B161
Pedestrian sensor, right
B161*1B
B140
Brake pressure sensor, front left
B140*1B
B150
Brake pressure sensor, front right
B150*1B
B160
Front central airbag sensor
B160*1B
B51
Airbag front sensor, left
B51*1B
B45
Airbag front sensor, right
B45*1B
B40
Airbag sensor, left B-pillar
B40*1B
B57
Airbag sensor, right B-pillar
B57*1B
B80
Airbag sensor, front left door
B80*1B
B39
Airbag sensor, front right door
B39*1B
left-hand drive
right-hand drive
S7
Driver's seat belt buckle contact
S48
Passenger's seat belt buckle contact
S67
Seat-position sensor, front passenger
with seat module
S76
Seat belt buckle contact, rear driver's side
S69
Seat belt buckle contact, rear centre
S77
Seat belt buckle contact, rear passenger's side
without seat module
S76
Seat belt buckle contact, rear driver's side
S68
Seat belt buckle contact, rear centre
S77
Seat belt buckle contact, rear passenger's side
with optional equipment: Third row of seats
S211
Seat belt buckle contact, third row of seats, left
S212
Seat belt buckle contact, third row of seats, right
A11
Crash safety module
G05
up to 2020_07
G05
Hybrid engine