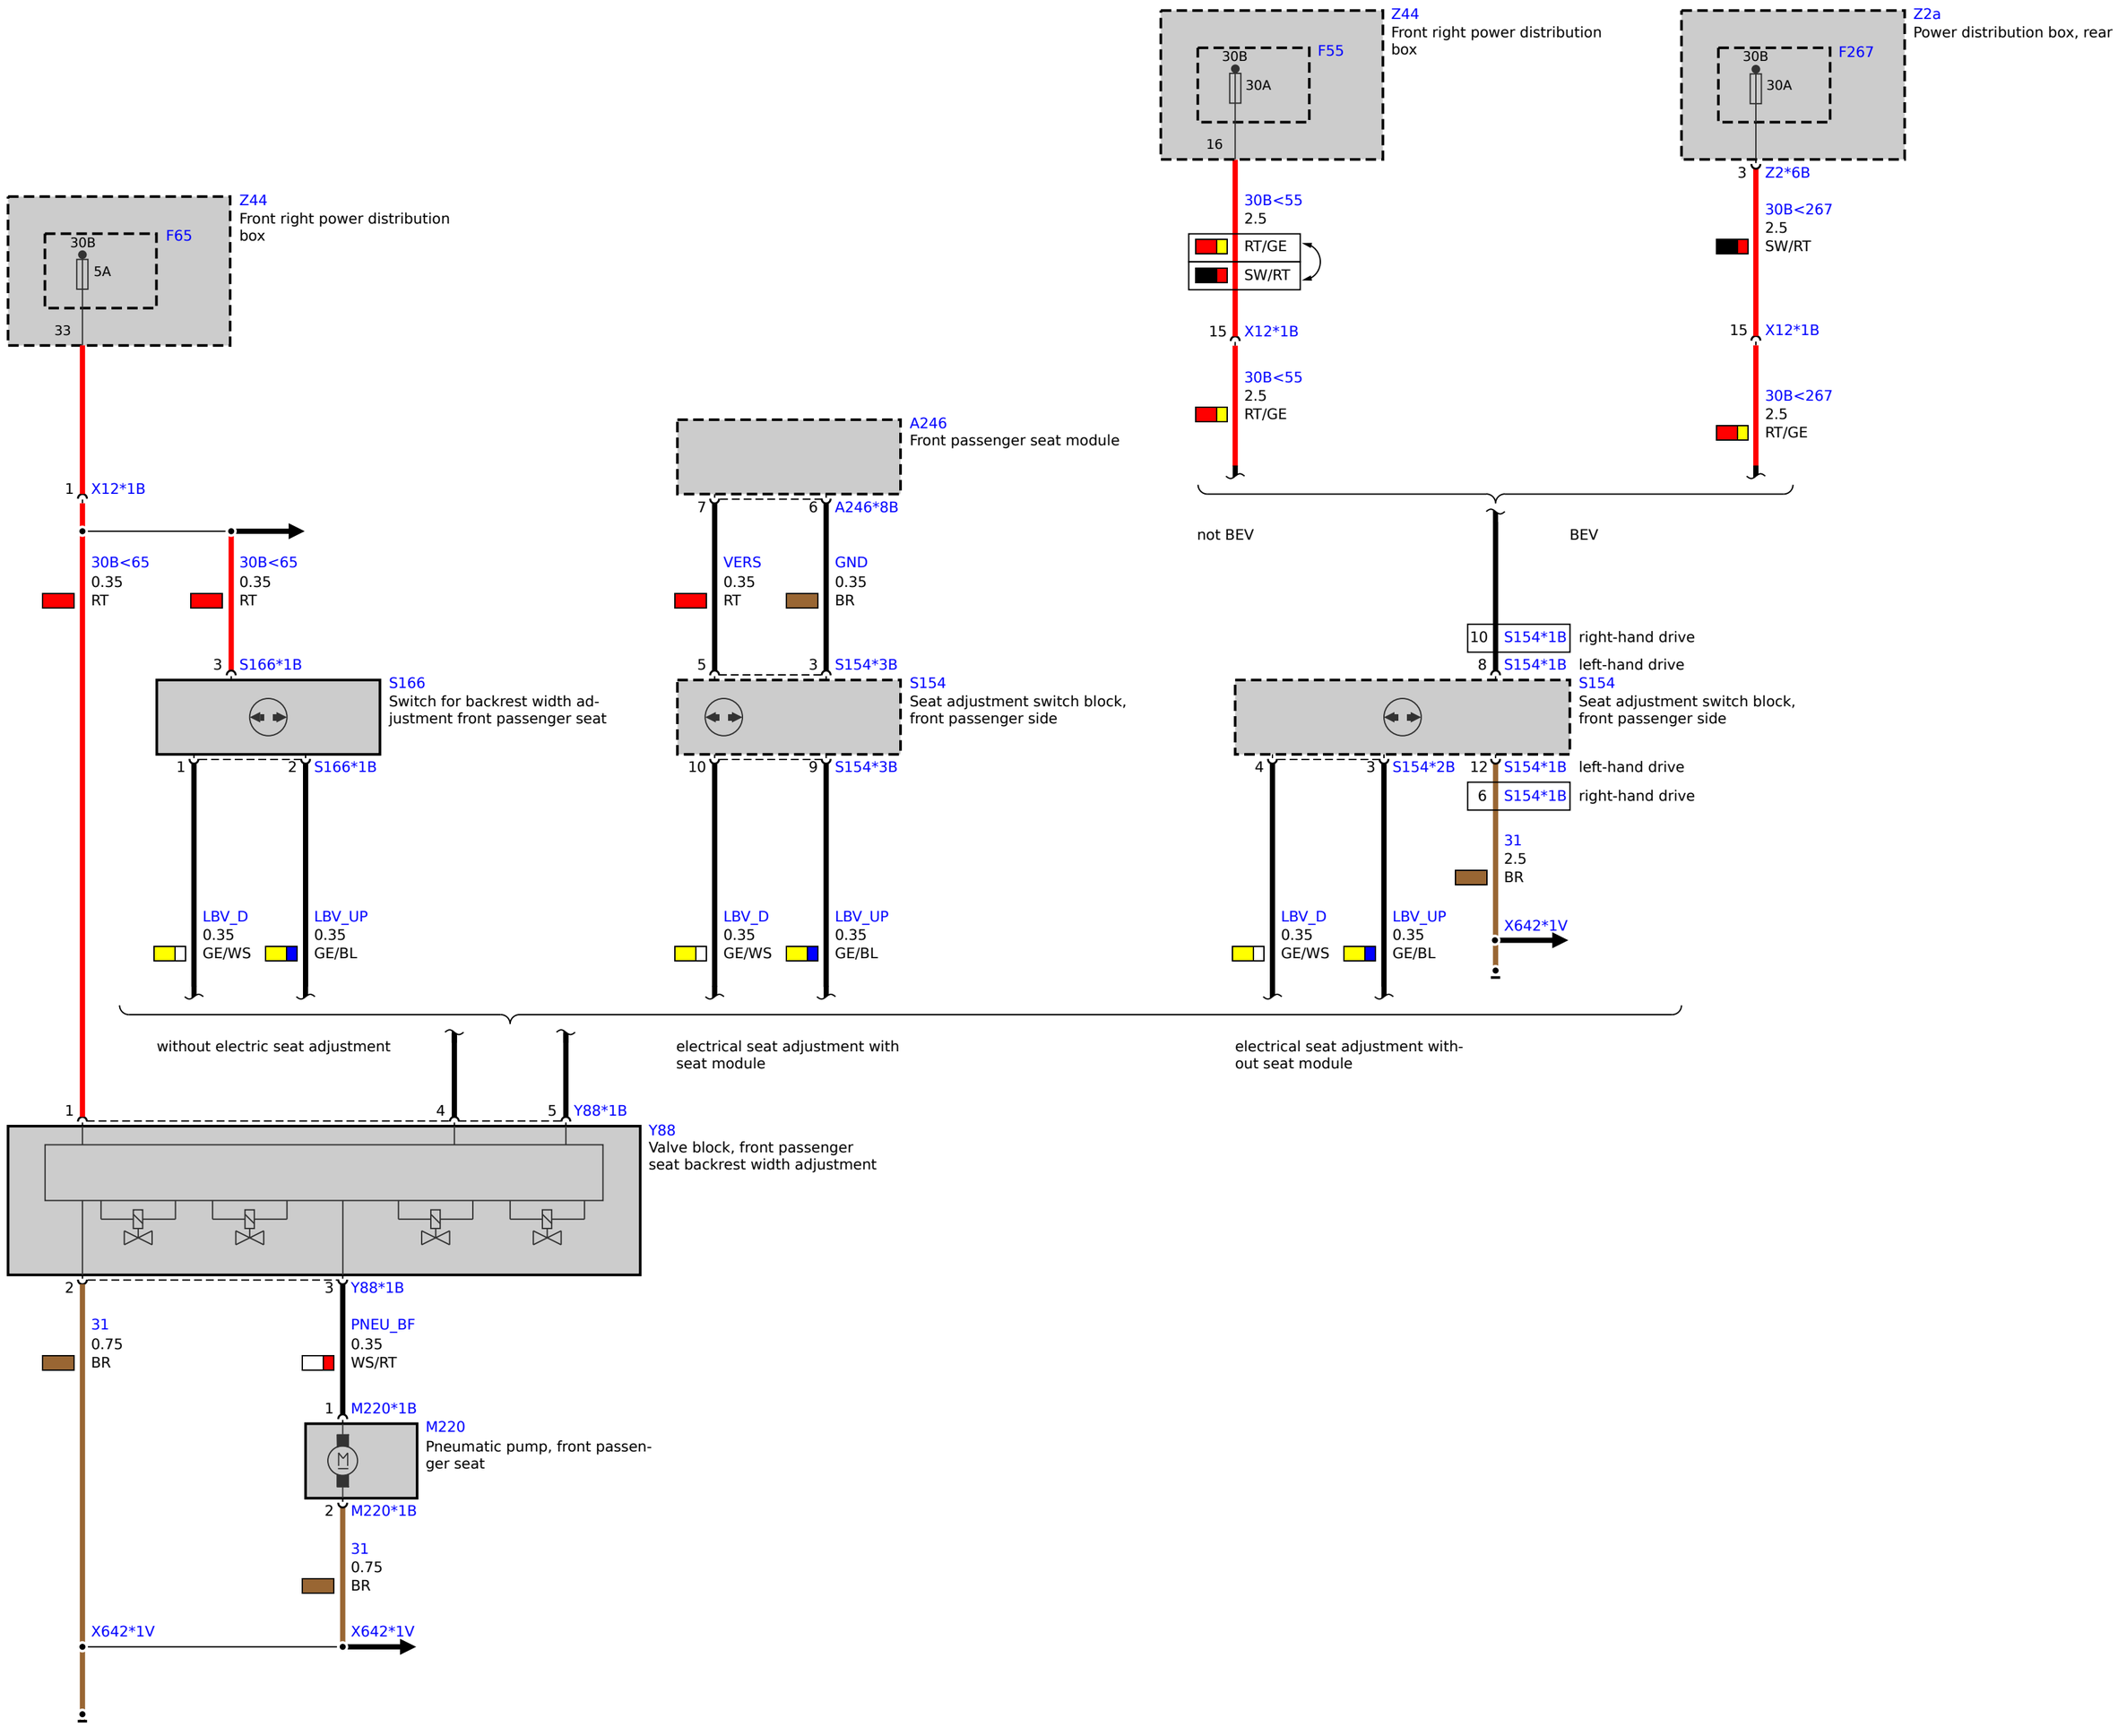
Z44
Front right power distribution box
30B
F65
5A
33
1
X12*1B
30B<65
0.35
RT
30B<65
0.35
RT
3
S166*1B
S166
Switch for backrest width adjustment front passenger seat
1
2
S166*1B
LBV_D
0.35
GE/WS
LBV_UP
0.35
GE/BL
A246
Front passenger seat module
7
6
A246*8B
VERS
0.35
RT
GND
0.35
BR
5
3
S154*3B
S154
Seat adjustment switch block, front passenger side
10
9
S154*3B
LBV_D
0.35
GE/WS
LBV_UP
0.35
GE/BL
Z44
Front right power distribution box
30B
F55
30A
16
30B<55
2.5
RT/GE
SW/RT
15
X12*1B
30B<55
2.5
RT/GE
Z2a
Power distribution box, rear
30B
F267
30A
3
Z2*6B
30B<267
2.5
SW/RT
15
X12*1B
30B<267
2.5
RT/GE
not BEV
BEV
10
S154*1B
right-hand drive
8
S154*1B
left-hand drive
S154
Seat adjustment switch block, front passenger side
4
3
S154*2B
12
S154*1B
left-hand drive
6
S154*1B
right-hand drive
31
2.5
BR
X642*1V
LBV_D
0.35
GE/WS
LBV_UP
0.35
GE/BL
without electric seat adjustment
electrical seat adjustment with seat module
electrical seat adjustment without seat module
1
4
5
Y88*1B
Y88
Valve block, front passenger seat backrest width adjustment
2
3
Y88*1B
31
0.75
BR
PNEU_BF
0.35
WS/RT
1
M220*1B
M220
Pneumatic pump, front passenger seat
2
M220*1B
31
0.75
BR
X642*1V
X642*1V