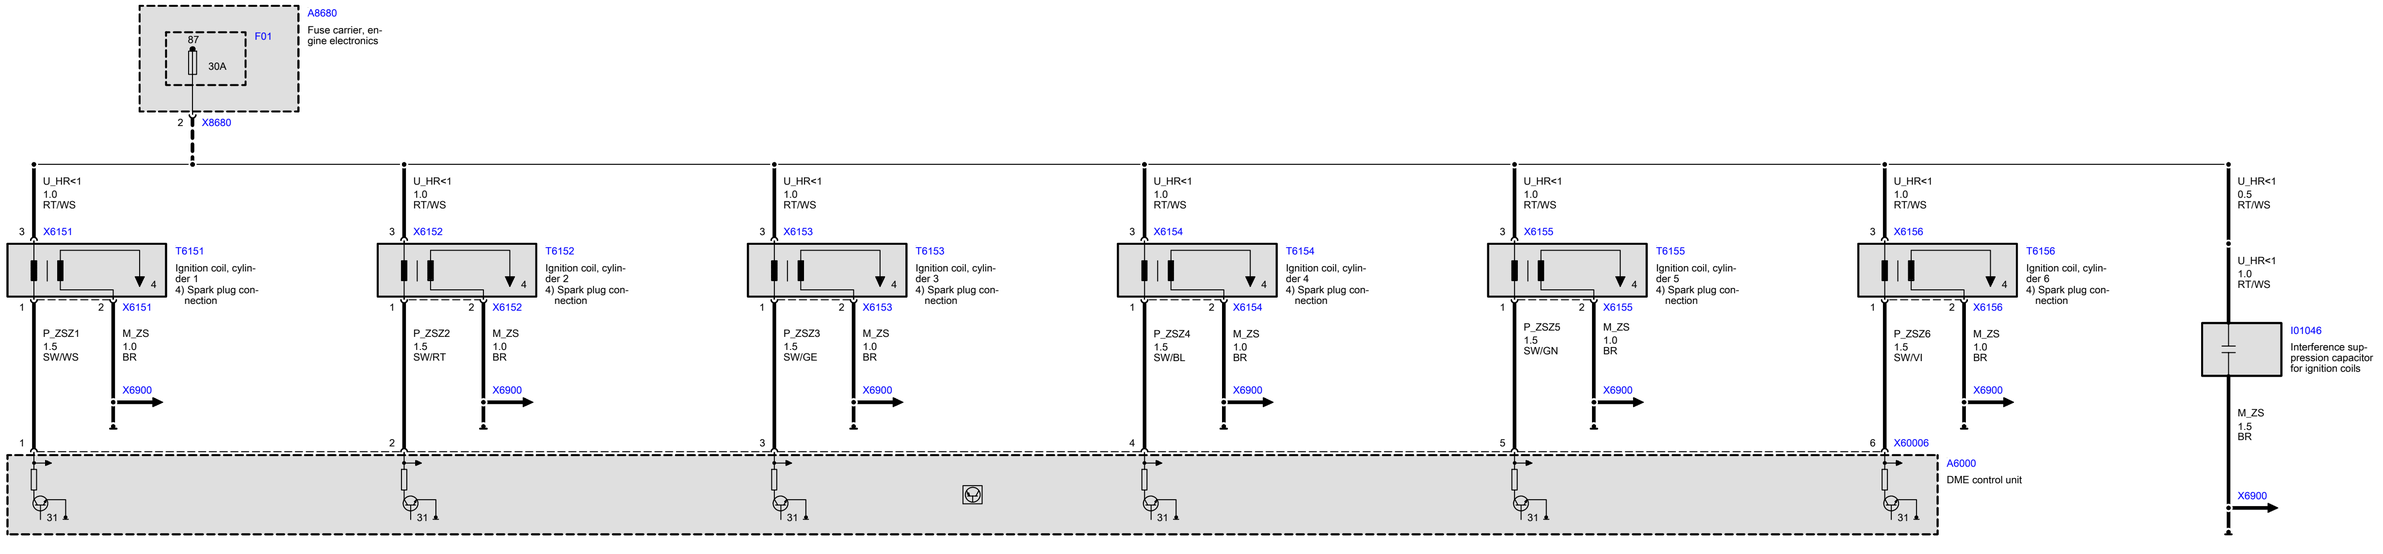
A8680
Fuse carrier, engine electronics
F01
87
30A
2
X8680
U_HR<1
1.0
RT/WS
3
X6151
T6151
Ignition coil, cylinder 1
4) Spark plug connection
4
1
2
X6151
P_ZSZ1
1.5
SW/WS
M_ZS
1.0
BR
X6900
1
X6152
T6152
Ignition coil, cylinder 2
4) Spark plug connection
X6152
P_ZSZ2
1.5
SW/RT
M_ZS
1.0
BR
X6900
2
X6153
T6153
Ignition coil, cylinder 3
4) Spark plug connection
X6153
P_ZSZ3
1.5
SW/GE
M_ZS
1.0
BR
X6900
3
X6154
T6154
Ignition coil, cylinder 4
4) Spark plug connection
X6154
P_ZSZ4
1.5
SW/BL
M_ZS
1.0
BR
X6900
4
X6155
T6155
Ignition coil, cylinder 5
4) Spark plug connection
X6155
P_ZSZ5
1.5
SW/GN
M_ZS
1.0
BR
X6900
5
X6156
T6156
Ignition coil, cylinder 6
4) Spark plug connection
X6156
P_ZSZ6
1.5
SW/VI
M_ZS
1.0
BR
X6900
6
X60006
A6000
DME control unit
31
U_HR<1
0.5
RT/WS
I01046
Interference suppression capacitor for ignition coils
M_ZS
1.5
BR
X6900