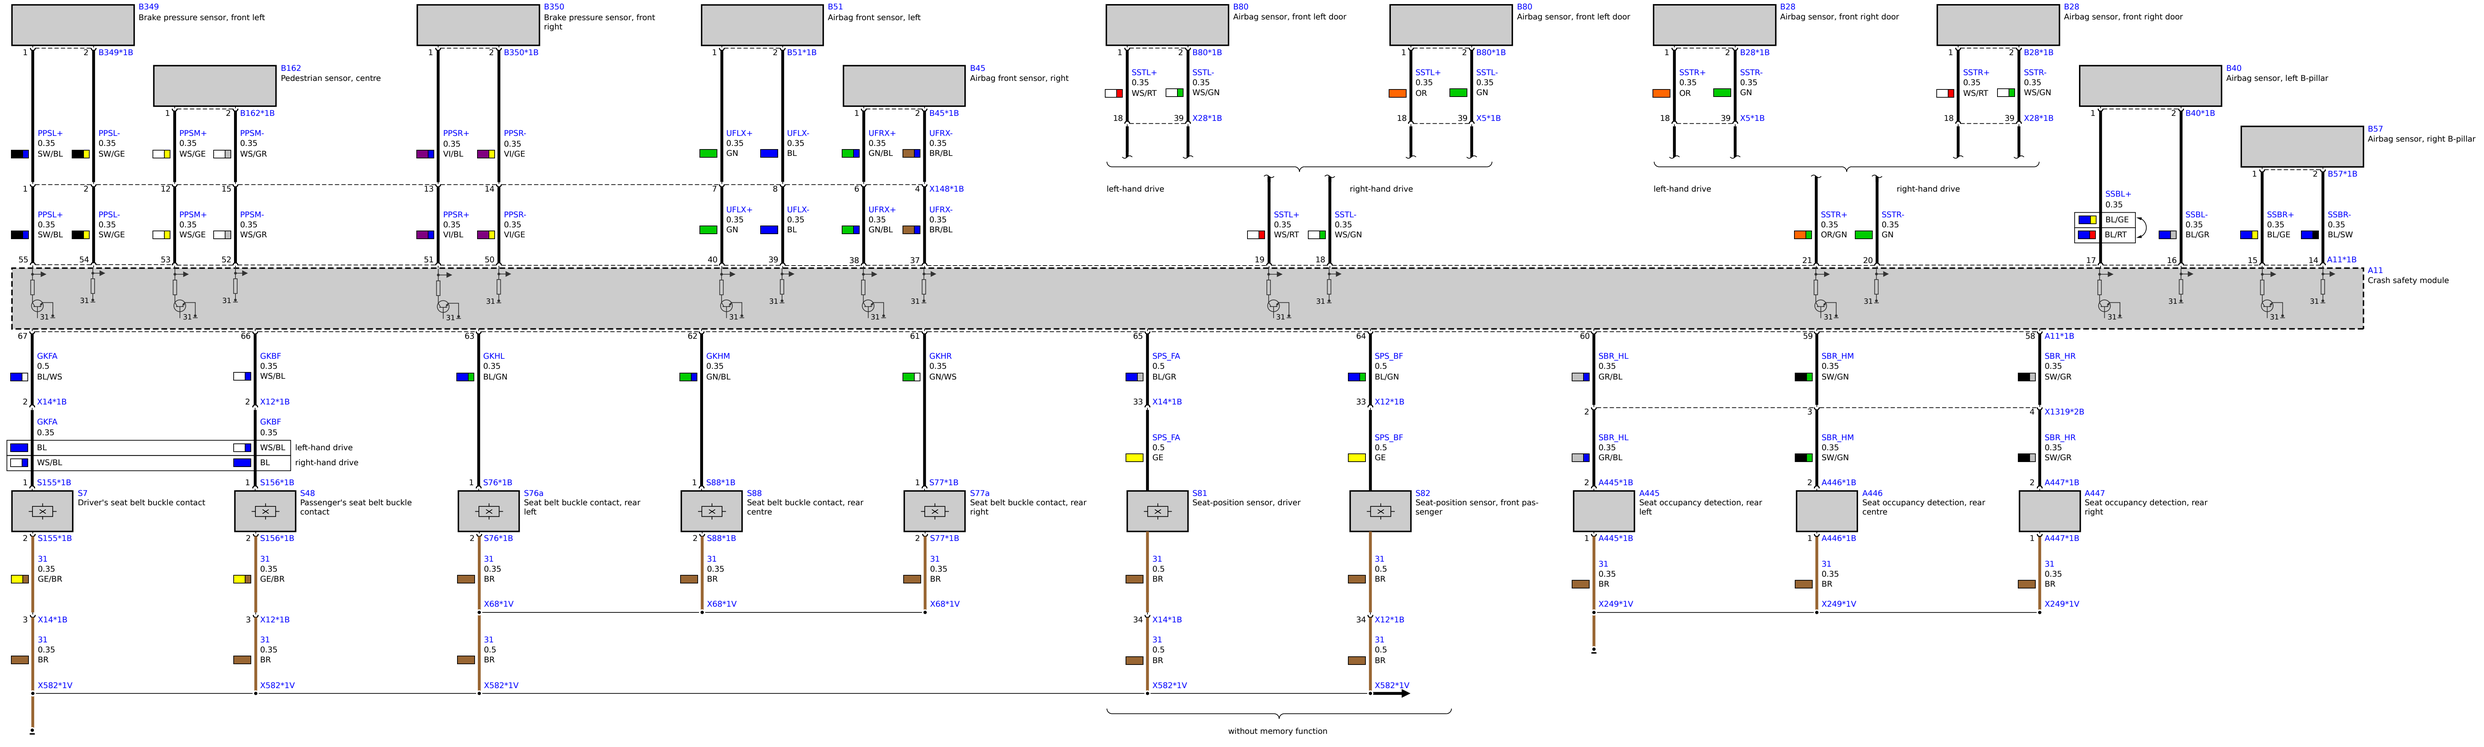
B349
Brake pressure sensor, front left
B349*1B
B162
Pedestrian sensor, centre
B162*1B
B350
Brake pressure sensor, front right
B350*1B
B51
Airbag front sensor, left
B51*1B
B45
Airbag front sensor, right
B45*1B
X148*1B
B80
Airbag sensor, front left door
B80*1B
X28*1B
B80
Airbag sensor, front left door
B80*1B
X5*1B
B28
Airbag sensor, front right door
B28*1B
X5*1B
B28
Airbag sensor, front right door
B28*1B
X28*1B
B40
Airbag sensor, left B-pillar
B40*1B
B57
Airbag sensor, right B-pillar
B57*1B
A11*1B
A11
Crash safety module
PPSL+ 0.35 SW/BL
PPSL- 0.35 SW/GE
PPSM+ 0.35 WS/GE
PPSM- 0.35 WS/GR
PPSR+ 0.35 VI/BL
PPSR- 0.35 VI/GE
UFLX+ 0.35 GN
UFLX- 0.35 BL
UFRX+ 0.35 GN/BL
UFRX- 0.35 BR/BL
SSTL+ 0.35 WS/RT
SSTL- 0.35 WS/GN
SSTL+ 0.35 OR
SSTL- 0.35 GN
SSTR+ 0.35 WS/RT
SSTR- 0.35 WS/GN
SSTR+ 0.35 OR
SSTR- 0.35 GN
SSTR+ 0.35 OR/GN
SSTR- 0.35 GN
SSBL+ 0.35
BL/GE
BL/RT
SSBL- 0.35 BL/GR
SSBR+ 0.35 BL/GE
SSBR- 0.35 BL/SW
left-hand drive
right-hand drive
GKFA 0.5 BL/WS
GKBF 0.35 WS/BL
GKHL 0.35 BL/GN
GKHM 0.35 GN/BL
GKHR 0.35 GN/WS
SPS_FA 0.5 BL/GR
SPS_BF 0.5 BL/GN
SBR_HL 0.35 GR/BL
SBR_HM 0.35 SW/GN
SBR_HR 0.35 SW/GR
X14*1B
X12*1B
X1319*2B
SPS_FA 0.5 GE
SPS_BF 0.5 GE
S155*1B
S156*1B
S76*1B
S88*1B
S77*1B
A445*1B
A446*1B
A447*1B
S7
Driver's seat belt buckle contact
S48
Passenger's seat belt buckle contact
S76a
Seat belt buckle contact, rear left
S88
Seat belt buckle contact, rear centre
S77a
Seat belt buckle contact, rear right
S81
Seat-position sensor, driver
S82
Seat-position sensor, front passenger
A445
Seat occupancy detection, rear left
A446
Seat occupancy detection, rear centre
A447
Seat occupancy detection, rear right
31 0.35 GE/BR
31 0.35 BR
31 0.5 BR
X68*1V
X249*1V
X582*1V
without memory function