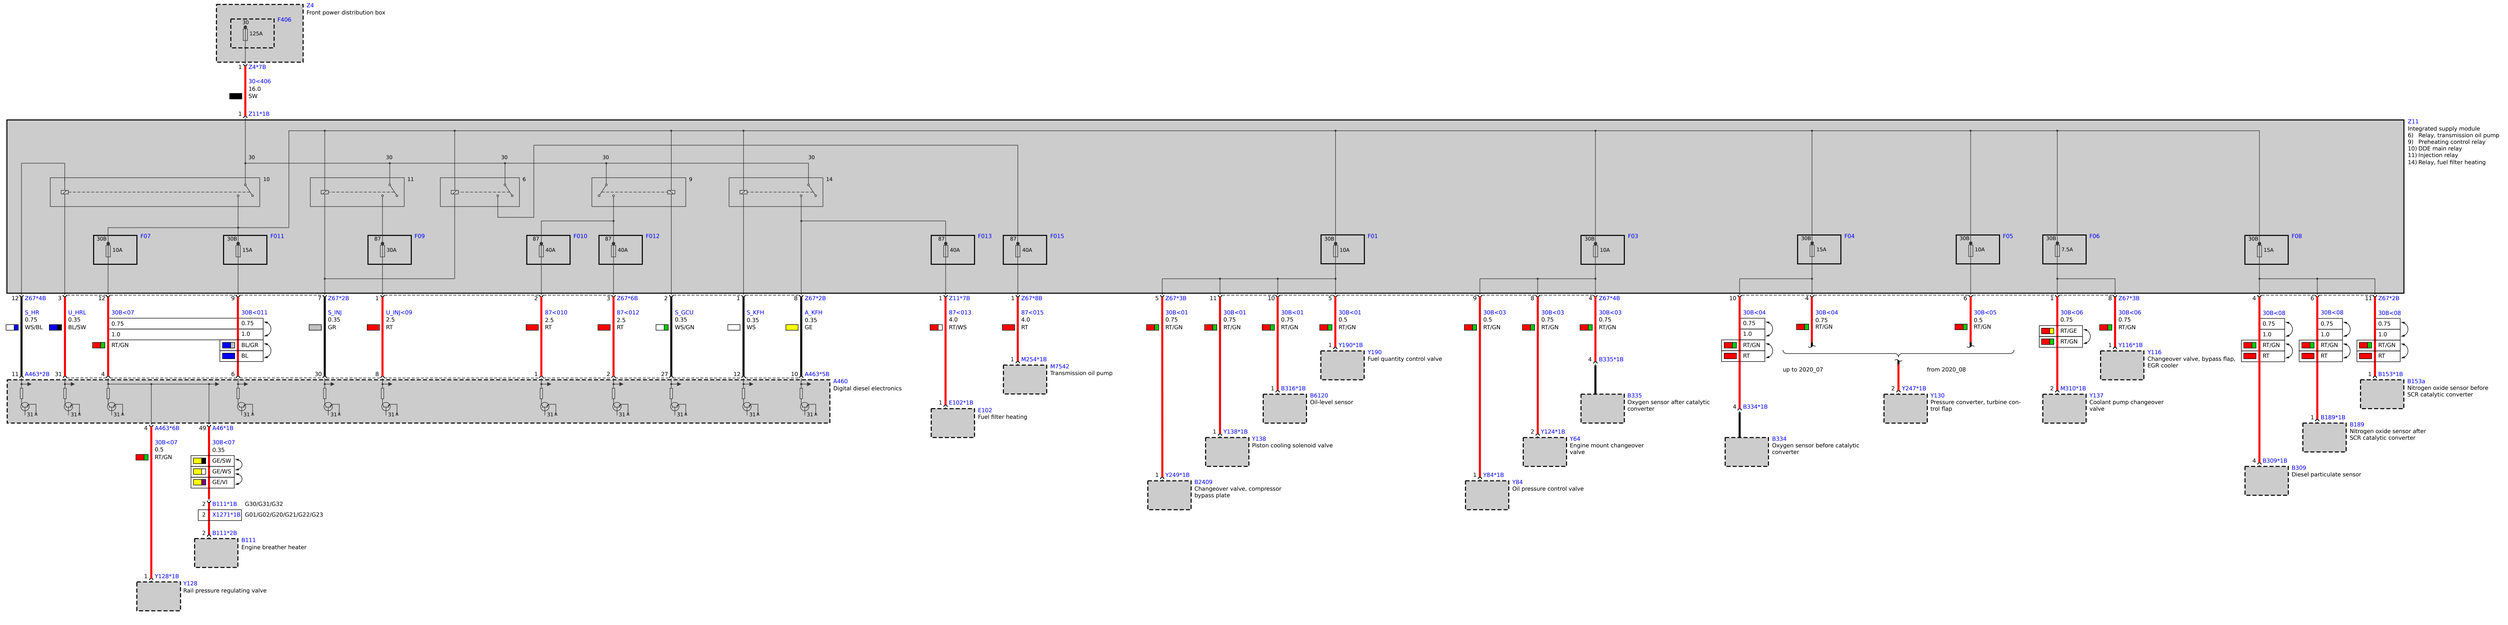
Z4
Front power distribution box
F406
125A
Z47*B
30<406
16.0
SW
Z11*1B
Z11
Integrated supply module
6) Relay, transmission oil pump
9) Preheating control relay
10) DDE main relay
11) Injection relay
14) Relay, fuel filter heating
F07
30B
10A
F011
30B
15A
F09
87
30A
F010
87
40A
F012
87
40A
F013
87
40A
F015
87
40A
F01
30B
10A
F03
30B
10A
F04
30B
15A
F05
30B
10A
F06
30B
7.5A
F08
30B
15A
Z67*4B
S_HR
0.75
WS/BL
U_HRL
0.35
BL/SW
30B<07
0.75
1.0
RT/GN
30B<011
0.75
1.0
BL/GR
BL
Z67*2B
S_INJ
0.35
GR
U_INJ<09
2.5
RT
87<010
2.5
RT
Z67*6B
87<012
2.5
RT
S_GCU
0.35
WS/GN
S_KFH
0.35
WS
Z67*2B
A_KFH
0.35
GE
Z11*7B
87<013
4.0
RT/WS
Z67*8B
87<015
4.0
RT
Z67*3B
30B<01
0.75
RT/GN
30B<01
0.75
RT/GN
30B<01
0.75
RT/GN
30B<01
0.5
RT/GN
Y190*1B
Y190
Fuel quantity control valve
B316*1B
B6120
Oil-level sensor
Y138*1B
Y138
Piston cooling solenoid valve
Y249*1B
B2409
Changeover valve, compressor bypass plate
30B<03
0.5
RT/GN
30B<03
0.75
RT/GN
Z67*4B
30B<03
0.75
RT/GN
B335*1B
B335
Oxygen sensor after catalytic converter
Y124*1B
Y64
Engine mount changeover valve
Y84*1B
Y84
Oil pressure control valve
30B<04
0.75
1.0
RT/GN
RT
30B<04
0.75
RT/GN
up to 2020_07
B334*1B
B334
Oxygen sensor before catalytic converter
30B<05
0.5
RT/GN
from 2020_08
Y247*1B
Y130
Pressure converter, turbine control flap
30B<06
0.75
RT/GE
RT/GN
Z67*3B
30B<06
0.75
RT/GN
Y116*1B
Y116
Changeover valve, bypass flap, EGR cooler
M310*1B
Y137
Coolant pump changeover valve
30B<08
0.75
1.0
RT/GN
RT
Z67*2B
30B<08
0.75
1.0
RT/GN
RT
B153*1B
B153a
Nitrogen oxide sensor before SCR catalytic converter
B189*1B
B189
Nitrogen oxide sensor after SCR catalytic converter
B309*1B
B309
Diesel particulate sensor
A463*2B
A460
Digital diesel electronics
A463*5B
A463*6B
30B<07
0.5
RT/GN
A46*1B
30B<07
0.35
GE/SW
GE/WS
GE/VI
B111*1B
X1271*1B
G30/G31/G32
G01/G02/G20/G21/G22/G23
B111*2B
B111
Engine breather heater
Y128*1B
Y128
Rail pressure regulating valve
M254*1B
M7542
Transmission oil pump
E102*1B
E102
Fuel filter heating