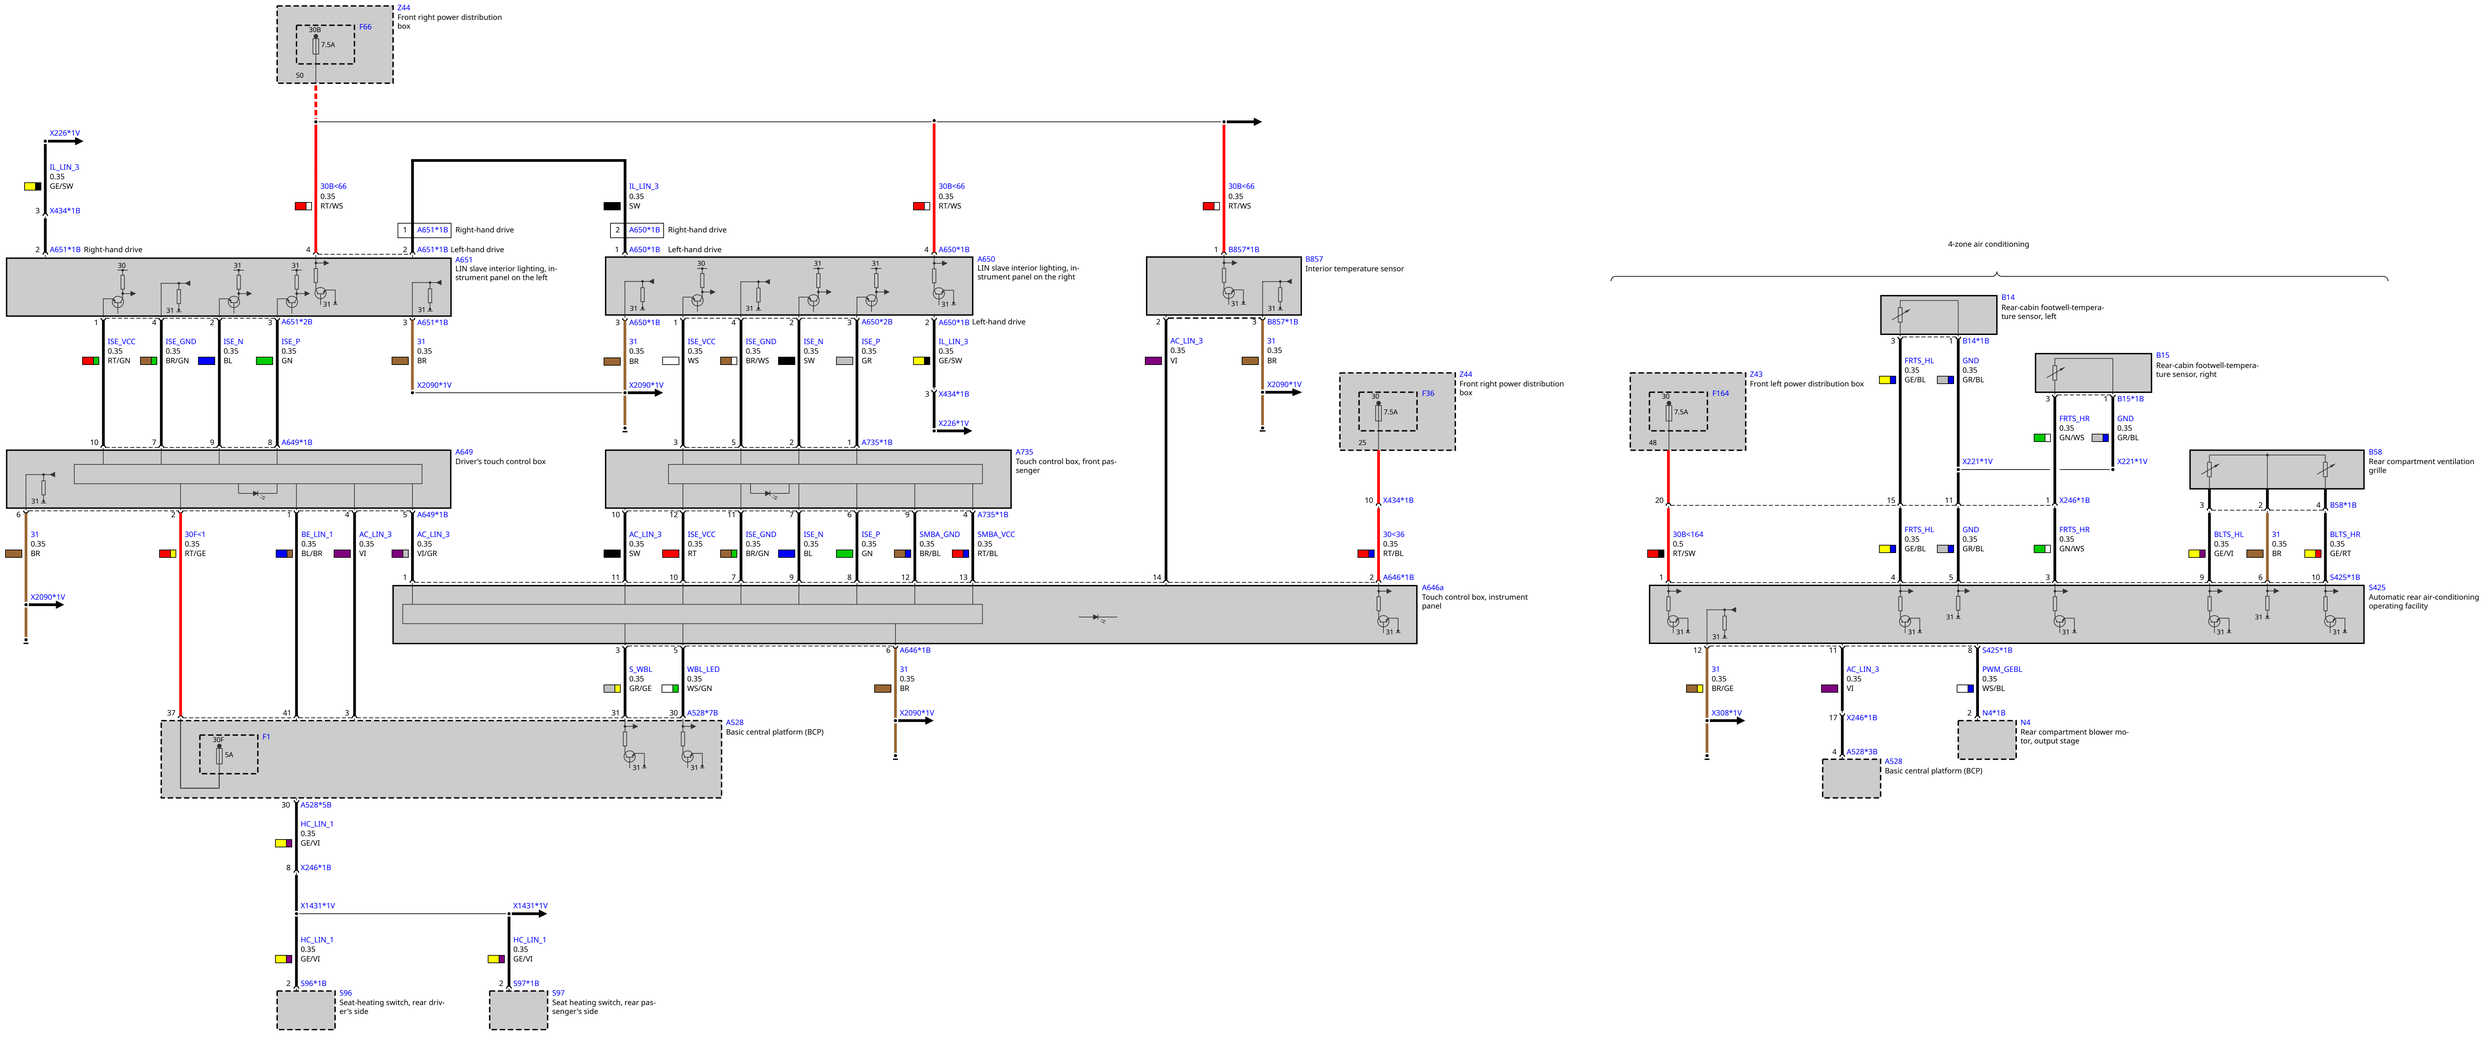
Z44
Front right power distribution box
F66
30
7.5A
50
X226*1V
IL_LIN_3
0.35
GE/SW
X434*1B
A651*1B Right-hand drive
30B<66
0.35
RT/WS
A651*1B Left-hand drive
A651
LIN slave interior lighting, instrument panel on the left
ISE_VCC
0.35
RT/GN
ISE_GND
0.35
BR/GN
ISE_N
0.35
BL
ISE_P
0.35
GN
31
0.35
BR
X2090*1V
A649
Driver's touch control box
30F<1
0.35
RT/GE
BE_LIN_1
0.35
BL/BR
AC_LIN_3
0.35
VI
AC_LIN_3
0.35
VI/GR
A649*1B
A650*1B Right-hand drive
A650*1B Left-hand drive
A650
LIN slave interior lighting, instrument panel on the right
A650*2B
IL_LIN_3
0.35
GE/SW
X226*1V
ISE_VCC
0.35
WS
ISE_GND
0.35
BR/WS
ISE_N
0.35
SW
ISE_P
0.35
GR
A735*1B
A735
Touch control box, front passenger
AC_LIN_3
0.35
SW
ISE_VCC
0.35
RT
ISE_GND
0.35
BR/GN
ISE_N
0.35
BL
ISE_P
0.35
GN
SMBA_GND
0.35
BR/BL
SMBA_VCC
0.35
RT/BL
B857*1B
B857
Interior temperature sensor
AC_LIN_3
0.35
VI
Z44
Front right power distribution box
F36
30
7.5A
25
X434*1B
30<36
0.35
RT/BL
A646*1B
A646a
Touch control box, instrument panel
S_WBL
0.35
GR/GE
WBL_LED
0.35
WS/GN
A646*1B
A528*7B
A528
Basic central platform (BCP)
F1
30F
5A
A528*5B
HC_LIN_1
0.35
GE/VI
X246*1B
X1431*1V
S96
Seat heating switch, rear driver's side
S97
Seat heating switch, rear passenger's side
4-zone air conditioning
B14
Rear-cabin footwell-temperature sensor, left
B14*1B
FRTS_HL
0.35
GE/BL
GND
0.35
GR/BL
Z43
Front left power distribution box
F164
30
7.5A
48
30B<164
0.5
RT/SW
X221*1V
B15
Rear-cabin footwell-temperature sensor, right
B15*1B
FRTS_HR
0.35
GN/WS
X246*1B
B58
Rear compartment ventilation grille
B58*1B
BLTS_HL
0.35
GE/VI
BLTS_HR
0.35
GE/RT
S425*1B
S425
Automatic rear air-conditioning operating facility
X308*1V
S425*1B
PWM_GEBL
0.35
WS/BL
N4*1B
N4
Rear compartment blower motor, output stage
A528*3B
A528
Basic central platform (BCP)