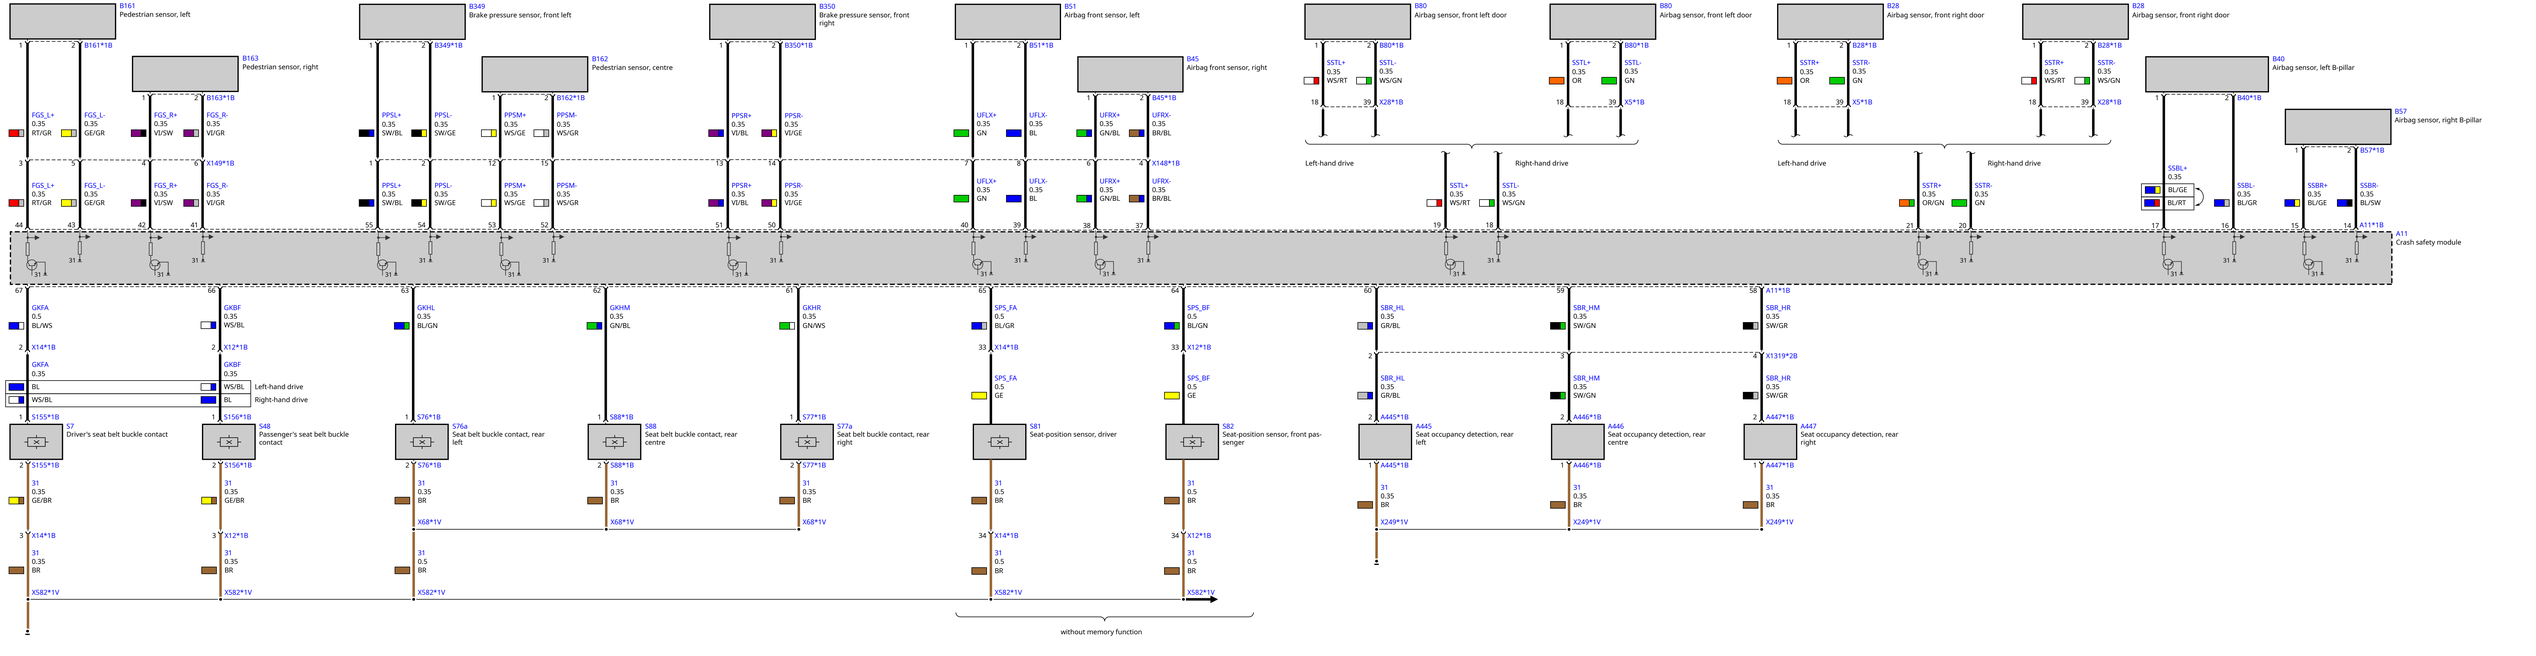
B161 Pedestrian sensor, left
B163 Pedestrian sensor, right
B349 Brake pressure sensor, front left
B162 Pedestrian sensor, centre
B350 Brake pressure sensor, front right
B51 Airbag front sensor, left
B45 Airbag front sensor, right
B80 Airbag sensor, front left door
B80 Airbag sensor, front left door
B28 Airbag sensor, front right door
B28 Airbag sensor, front right door
B40 Airbag sensor, left B-pillar
B57 Airbag sensor, right B-pillar
A11 Crash safety module
Left-hand drive
Right-hand drive
Left-hand drive
Right-hand drive
S7 Driver's seat belt buckle contact
S48 Passenger's seat belt buckle contact
S76a Seat belt buckle contact, rear left
S88 Seat belt buckle contact, rear centre
S77a Seat belt buckle contact, rear right
S81 Seat-position sensor, driver
S82 Seat-position sensor, front passenger
A445 Seat occupancy detection, rear left
A446 Seat occupancy detection, rear centre
A447 Seat occupancy detection, rear right
Left-hand drive
Right-hand drive
without memory function