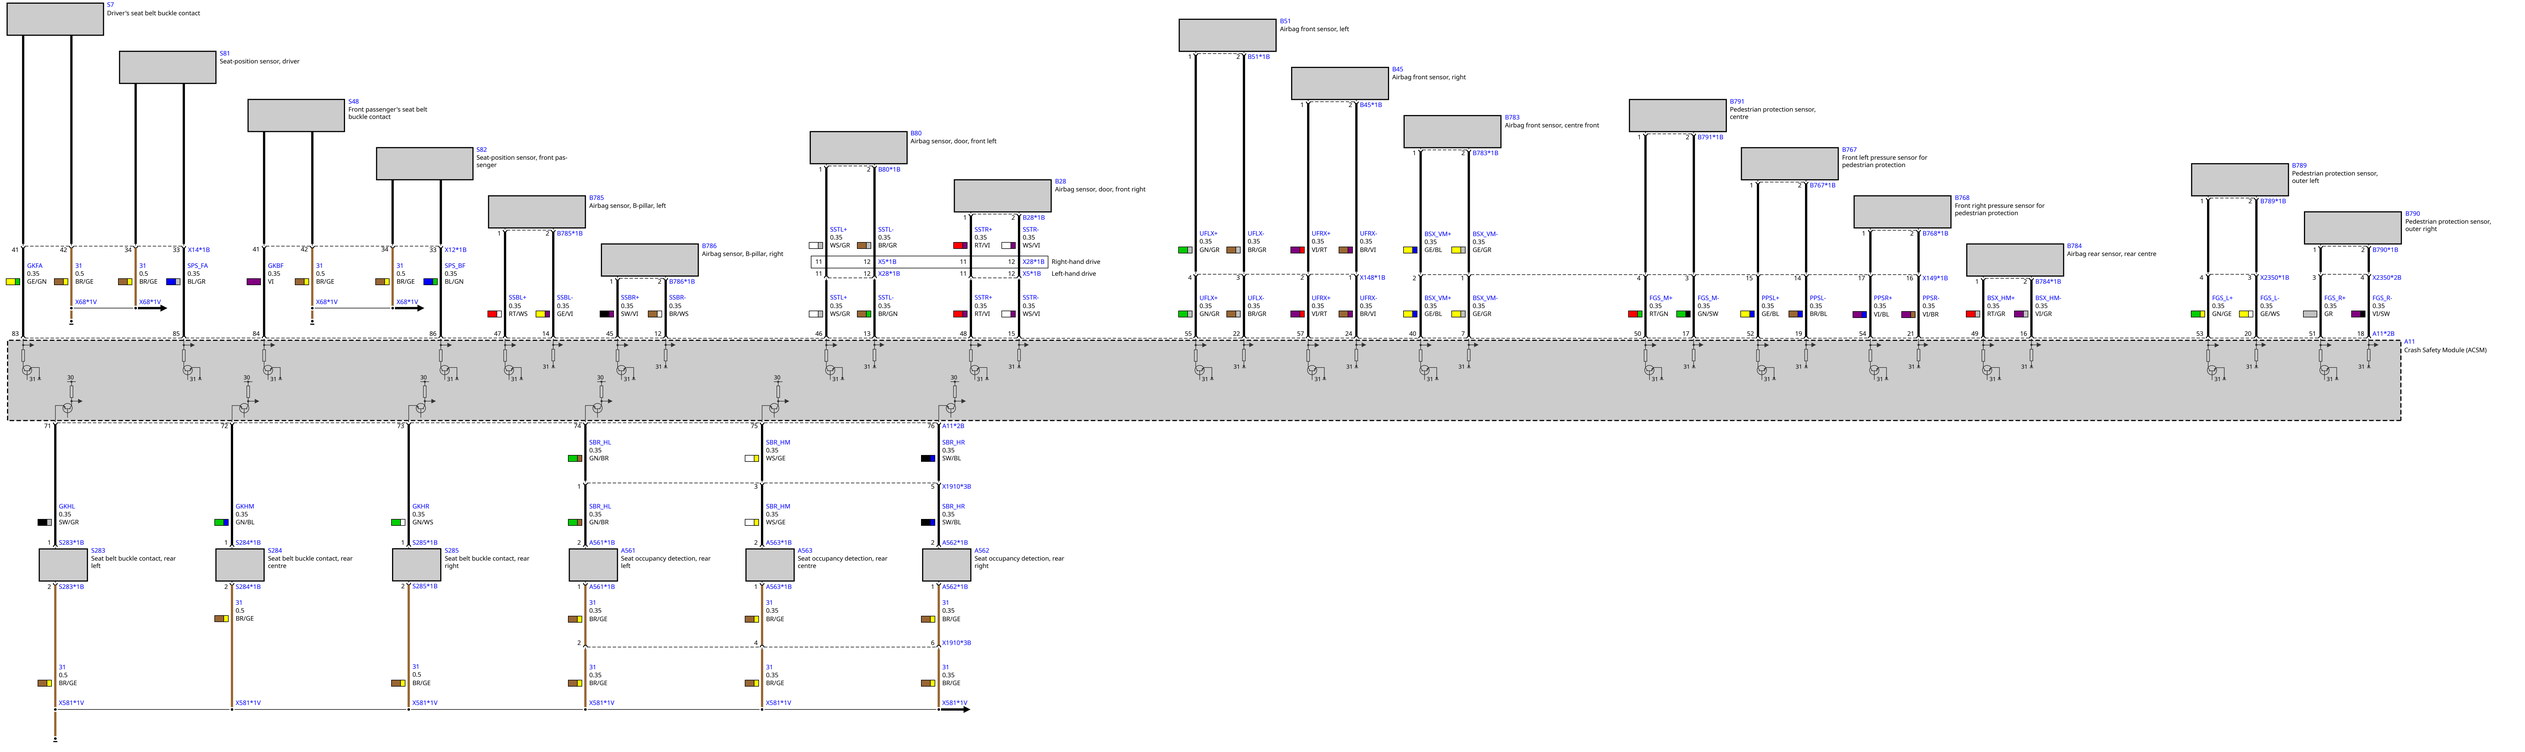
S7
Driver's seat belt buckle contact
S81
Seat-position sensor, driver
S48
Front passenger's seat belt buckle contact
S82
Seat-position sensor, front pas-senger
B785
Airbag sensor, B-pillar, left
B786
Airbag sensor, B-pillar, right
B80
Airbag sensor, door, front left
B28
Airbag sensor, door, front right
B51
Airbag front sensor, left
B45
Airbag front sensor, right
B783
Airbag front sensor, centre front
B791
Pedestrian protection sensor, centre
B767
Front left pressure sensor for pedestrian protection
B768
Front right pressure sensor for pedestrian protection
B784
Airbag rear sensor, rear centre
B789
Pedestrian protection sensor, outer left
B790
Pedestrian protection sensor, outer right
A11
Crash Safety Module (ACSM)
S283
Seat belt buckle contact, rear left
S284
Seat belt buckle contact, rear centre
S285
Seat belt buckle contact, rear right
A561
Seat occupancy detection, rear left
A563
Seat occupancy detection, rear centre
A562
Seat occupancy detection, rear right
Right-hand drive
Left-hand drive