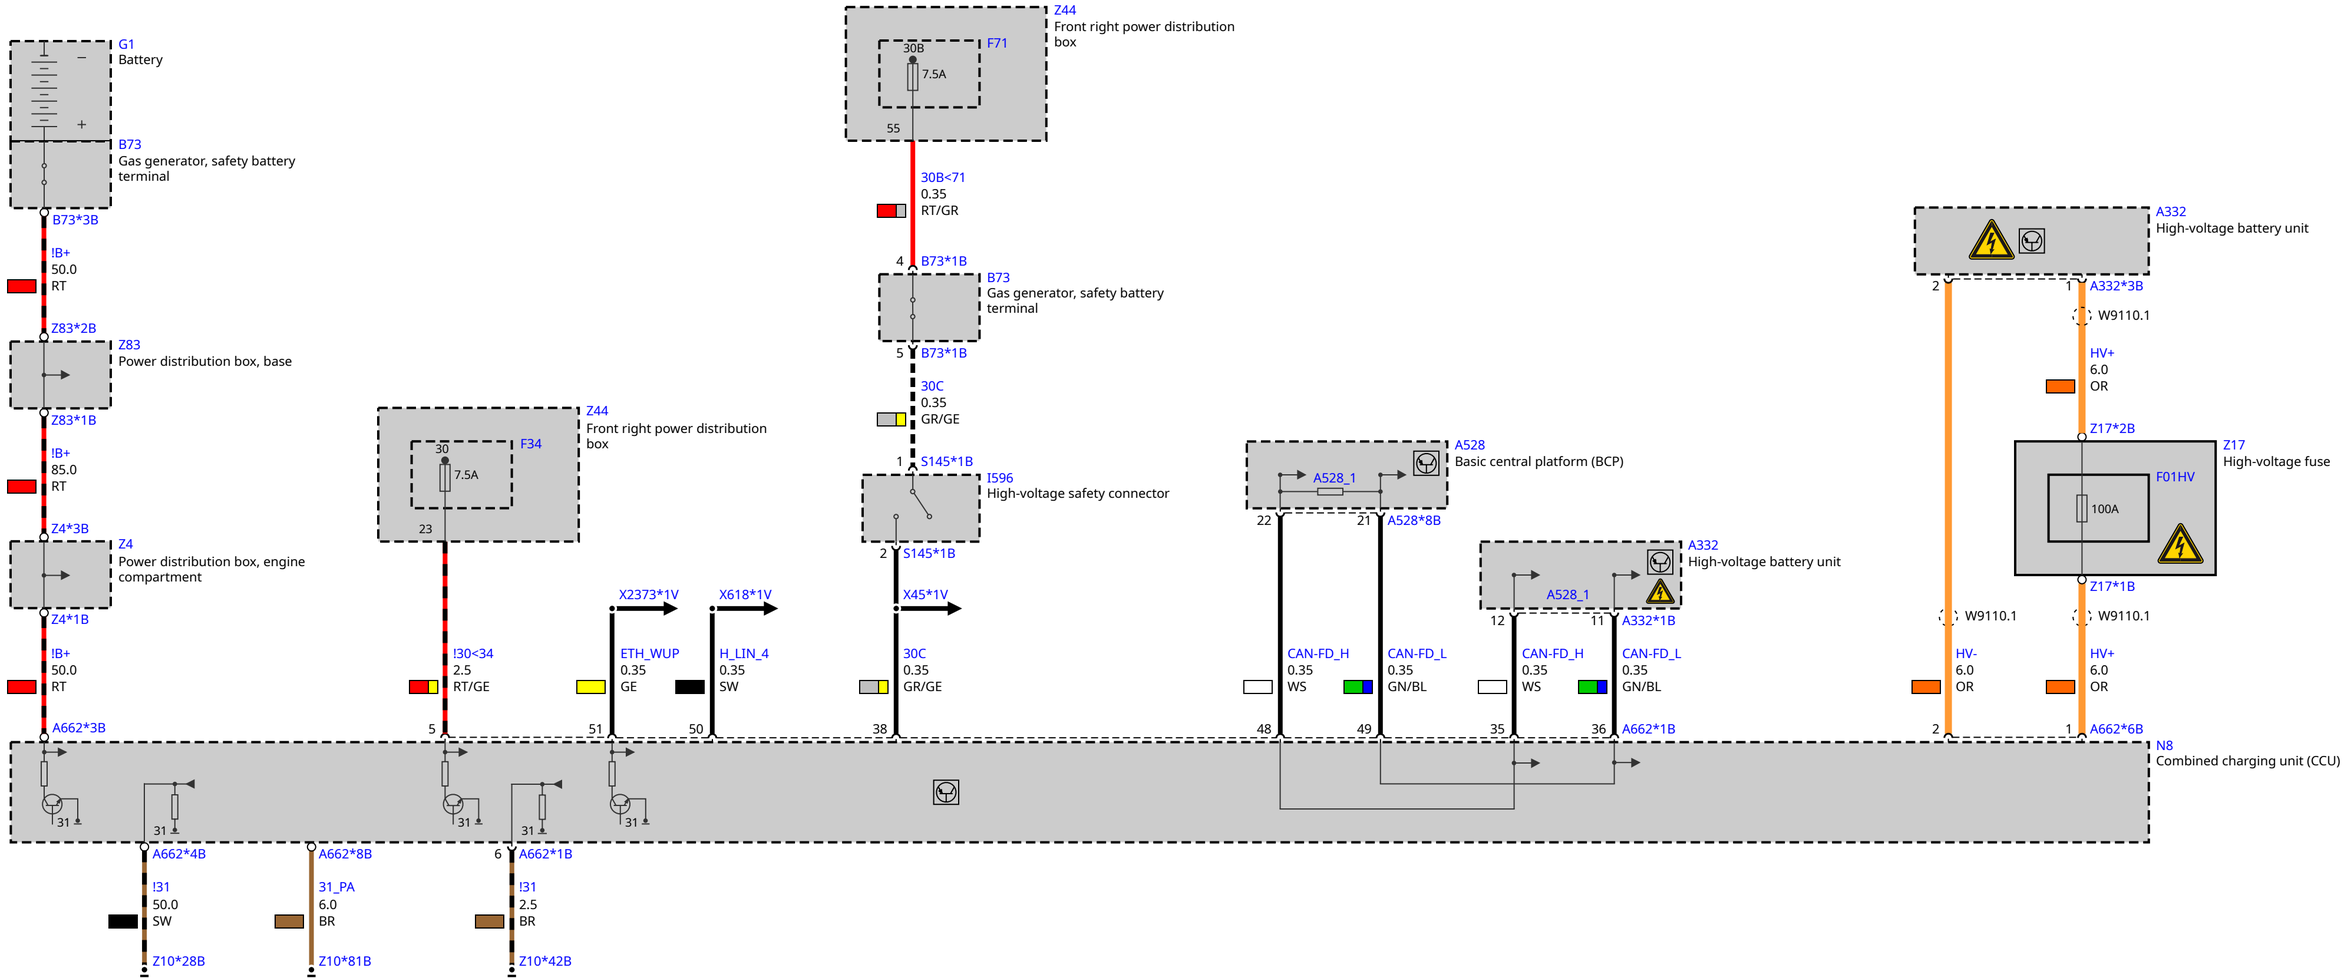
G1
Battery
B73
Gas generator, safety battery terminal
B73*3B
!B+
50.0
RT
Z83*2B
Z83
Power distribution box, base
Z83*1B
!B+
85.0
RT
Z4*3B
Z4
Power distribution box, engine compartment
Z4*1B
!B+
50.0
RT
A662*3B
Z44
Front right power distribution box
F71
30B
7.5A
55
30B<71
0.35
RT/GR
4
B73*1B
B73
Gas generator, safety battery terminal
5
B73*1B
30C
0.35
GR/GE
1
S145*1B
I596
High-voltage safety connector
2
S145*1B
X45*1V
30C
0.35
GR/GE
38
Z44
Front right power distribution box
F34
30
7.5A
23
!30<34
2.5
RT/GE
5
X2373*1V
ETH_WUP
0.35
GE
51
X618*1V
H_LIN_4
0.35
SW
50
A528
Basic central platform (BCP)
A528_1
22
21
A528*8B
CAN-FD_H
0.35
WS
48
CAN-FD_L
0.35
GN/BL
49
A332
High-voltage battery unit
A528_1
12
11
A332*1B
CAN-FD_H
0.35
WS
35
CAN-FD_L
0.35
GN/BL
36
A662*1B
A332
High-voltage battery unit
2
1
A332*3B
W9110.1
HV+
6.0
OR
Z17*2B
Z17
High-voltage fuse
F01HV
100A
Z17*1B
W9110.1
HV-
6.0
OR
2
W9110.1
HV+
6.0
OR
1
A662*6B
N8
Combined charging unit (CCU)
31
31
31
31
31
A662*4B
!31
50.0
SW
Z10*28B
A662*8B
31_PA
6.0
BR
Z10*81B
6
A662*1B
!31
2.5
BR
Z10*42B