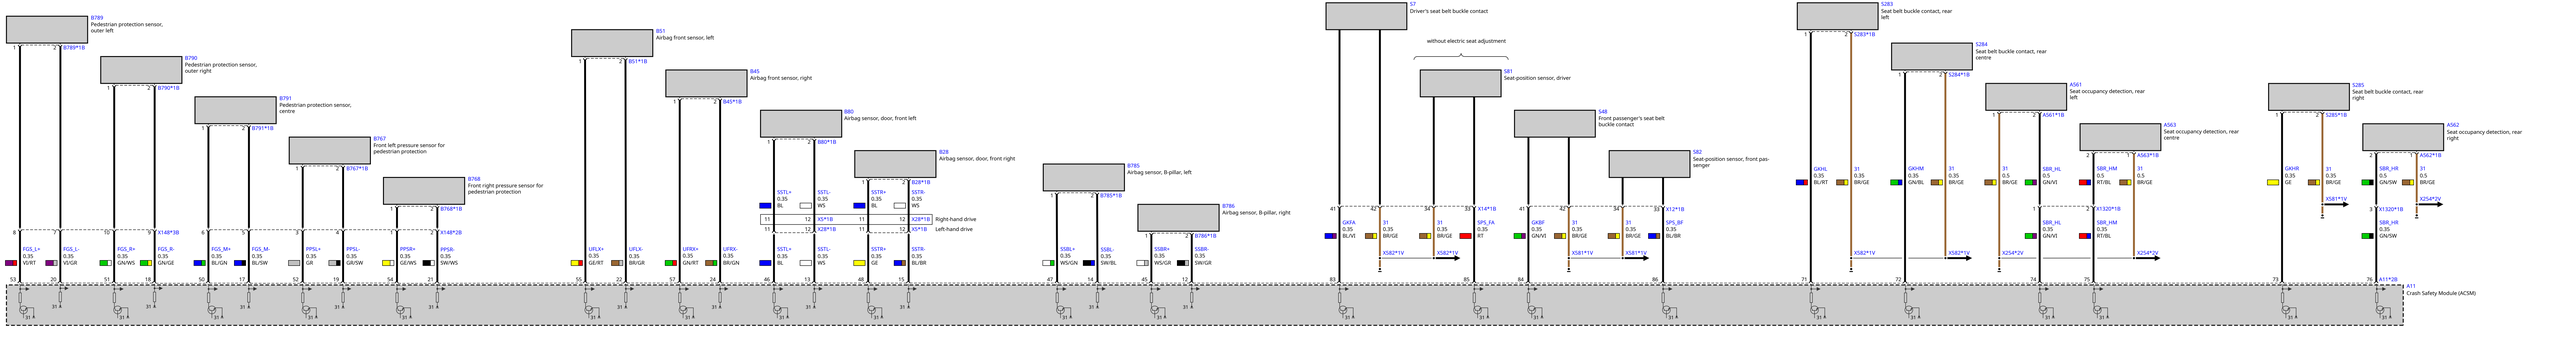
B789
Pedestrian protection sensor, outer left
B789*1B
B790
Pedestrian protection sensor, outer right
B790*1B
B791
Pedestrian protection sensor, centre
B791*1B
B767
Front left pressure sensor for pedestrian protection
B767*1B
B768
Front right pressure sensor for pedestrian protection
B768*1B
FGS_L+ 0.35 VI/RT
FGS_L- 0.35 VI/GR
FGS_R+ 0.35 GN/WS
FGS_R- 0.35 GN/GE
X148*3B
FGS_M+ 0.35 BL/GN
FGS_M- 0.35 BL/SW
PPSL+ 0.35 GR
PPSL- 0.35 GR/SW
PPSR+ 0.35 GE/WS
PPSR- 0.35 SW/WS
X148*2B
B51
Airbag front sensor, left
B51*1B
B45
Airbag front sensor, right
B45*1B
B80
Airbag sensor, door, front left
B80*1B
B28
Airbag sensor, door, front right
B28*1B
SSTL+ 0.35 BL
SSTL- 0.35 WS
X5*1B
X28*1B
SSTR+ 0.35 BL
SSTR- 0.35 WS
X28*1B
Right-hand drive
X5*1B
Left-hand drive
SSTL+ 0.35 BL
SSTL- 0.35 WS
SSTR+ 0.35 GE
SSTR- 0.35 BL/BR
LFLX+ 0.35 GR/RT
LFLX- 0.35 BR/GR
LFRX+ 0.35 GN/RT
LFRX- 0.35 BR/GN
B785
Airbag sensor, B-pillar, left
B785*1B
B786
Airbag sensor, B-pillar, right
B786*1B
SSBL+ 0.35 WS/GN
SSBL- 0.35 SW/BL
SSBR+ 0.35 WS/GR
SSBR- 0.35 SW/GR
S7
Driver's seat belt buckle contact
without electric seat adjustment
S81
Seat-position sensor, driver
S48
Front passenger's seat belt buckle contact
S82
Seat-position sensor, front passenger
GKFA 0.35 BL/RT
31 0.35 BR/GE
X14*1B
SPS_FA 0.35 RT
GKBF 0.35 GN/VI
SPS_BF 0.35 BL/BR
X12*1B
X582*1V
X582*1V
X581*1V
X581*1V
S283
Seat belt buckle contact, rear left
S283*1B
S284
Seat belt buckle contact, rear centre
S284*1B
A561
Seat occupancy detection, rear left
A561*1B
A563
Seat occupancy detection, rear centre
A563*1B
S285
Seat belt buckle contact, rear right
S285*1B
A562
Seat occupancy detection, rear right
A562*1B
GKHL 0.35 BL/RT
31 0.35 BR/GE
GKHM 0.35 GN/BL
31 0.35 BR/GE
SBR_HL 0.5 GN/VI
SBR_HM 0.5 RT/BL
31 0.5 BR/GE
SBR_HL 0.35 GN/VI
SBR_HM 0.35 RT/BL
X1320*1B
X582*1V
X582*1V
X254*2V
X254*2V
GKHR 0.35 GE
31 0.35 BR/GE
SBR_HR 0.5 GN/SW
SBR_HR 0.35 GN/SW
X581*1V
X1320*1B
X254*2V
A13
Crash Safety Module (ACSM)
B1*2B