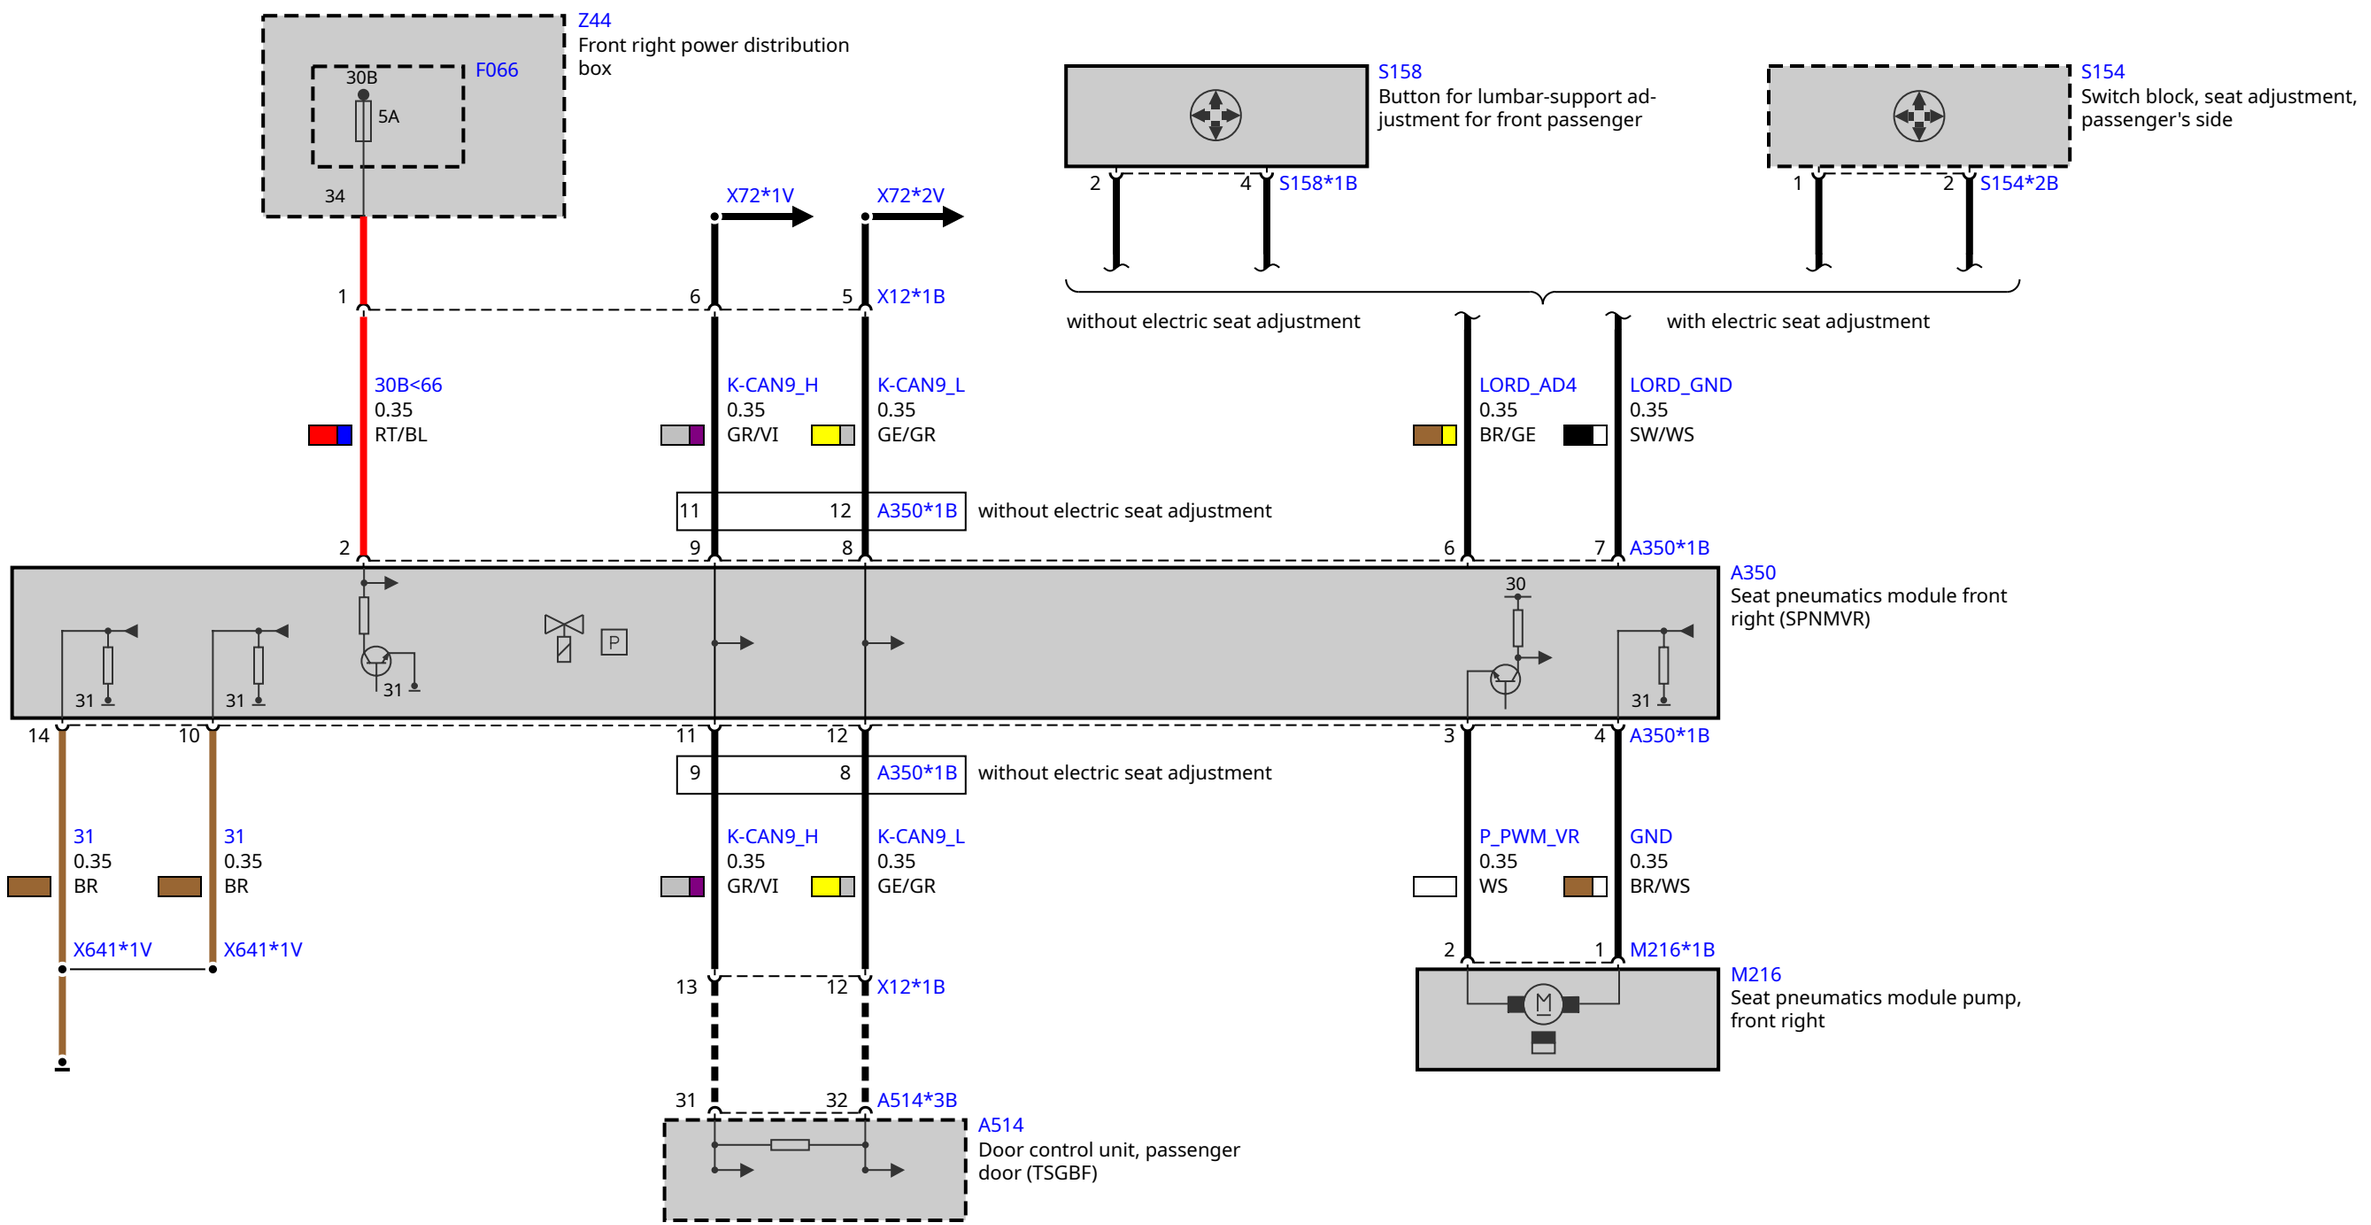
Z44
Front right power distribution box
F066
30B
5A
34
S158
Button for lumbar-support adjustment for front passenger
2
4
S158*1B
S154
Switch block, seat adjustment, passenger's side
1
2
S154*2B
X72*1V
X72*2V
1
6
5
X12*1B
without electric seat adjustment
with electric seat adjustment
30B<66
0.35
RT/BL
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
LORD_AD4
0.35
BR/GE
LORD_GND
0.35
SW/WS
11
12
A350*1B
without electric seat adjustment
2
9
8
6
7
A350*1B
A350
Seat pneumatics module front right (SPNMVR)
30
31
31
31
31
14
10
11
12
3
4
A350*1B
9
8
A350*1B
without electric seat adjustment
31
0.35
BR
31
0.35
BR
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
P_PWM_VR
0.35
WS
GND
0.35
BR/WS
X641*1V
X641*1V
2
1
M216*1B
M216
Seat pneumatics module pump, front right
13
12
X12*1B
31
32
A514*3B
A514
Door control unit, passenger door (TSGBF)