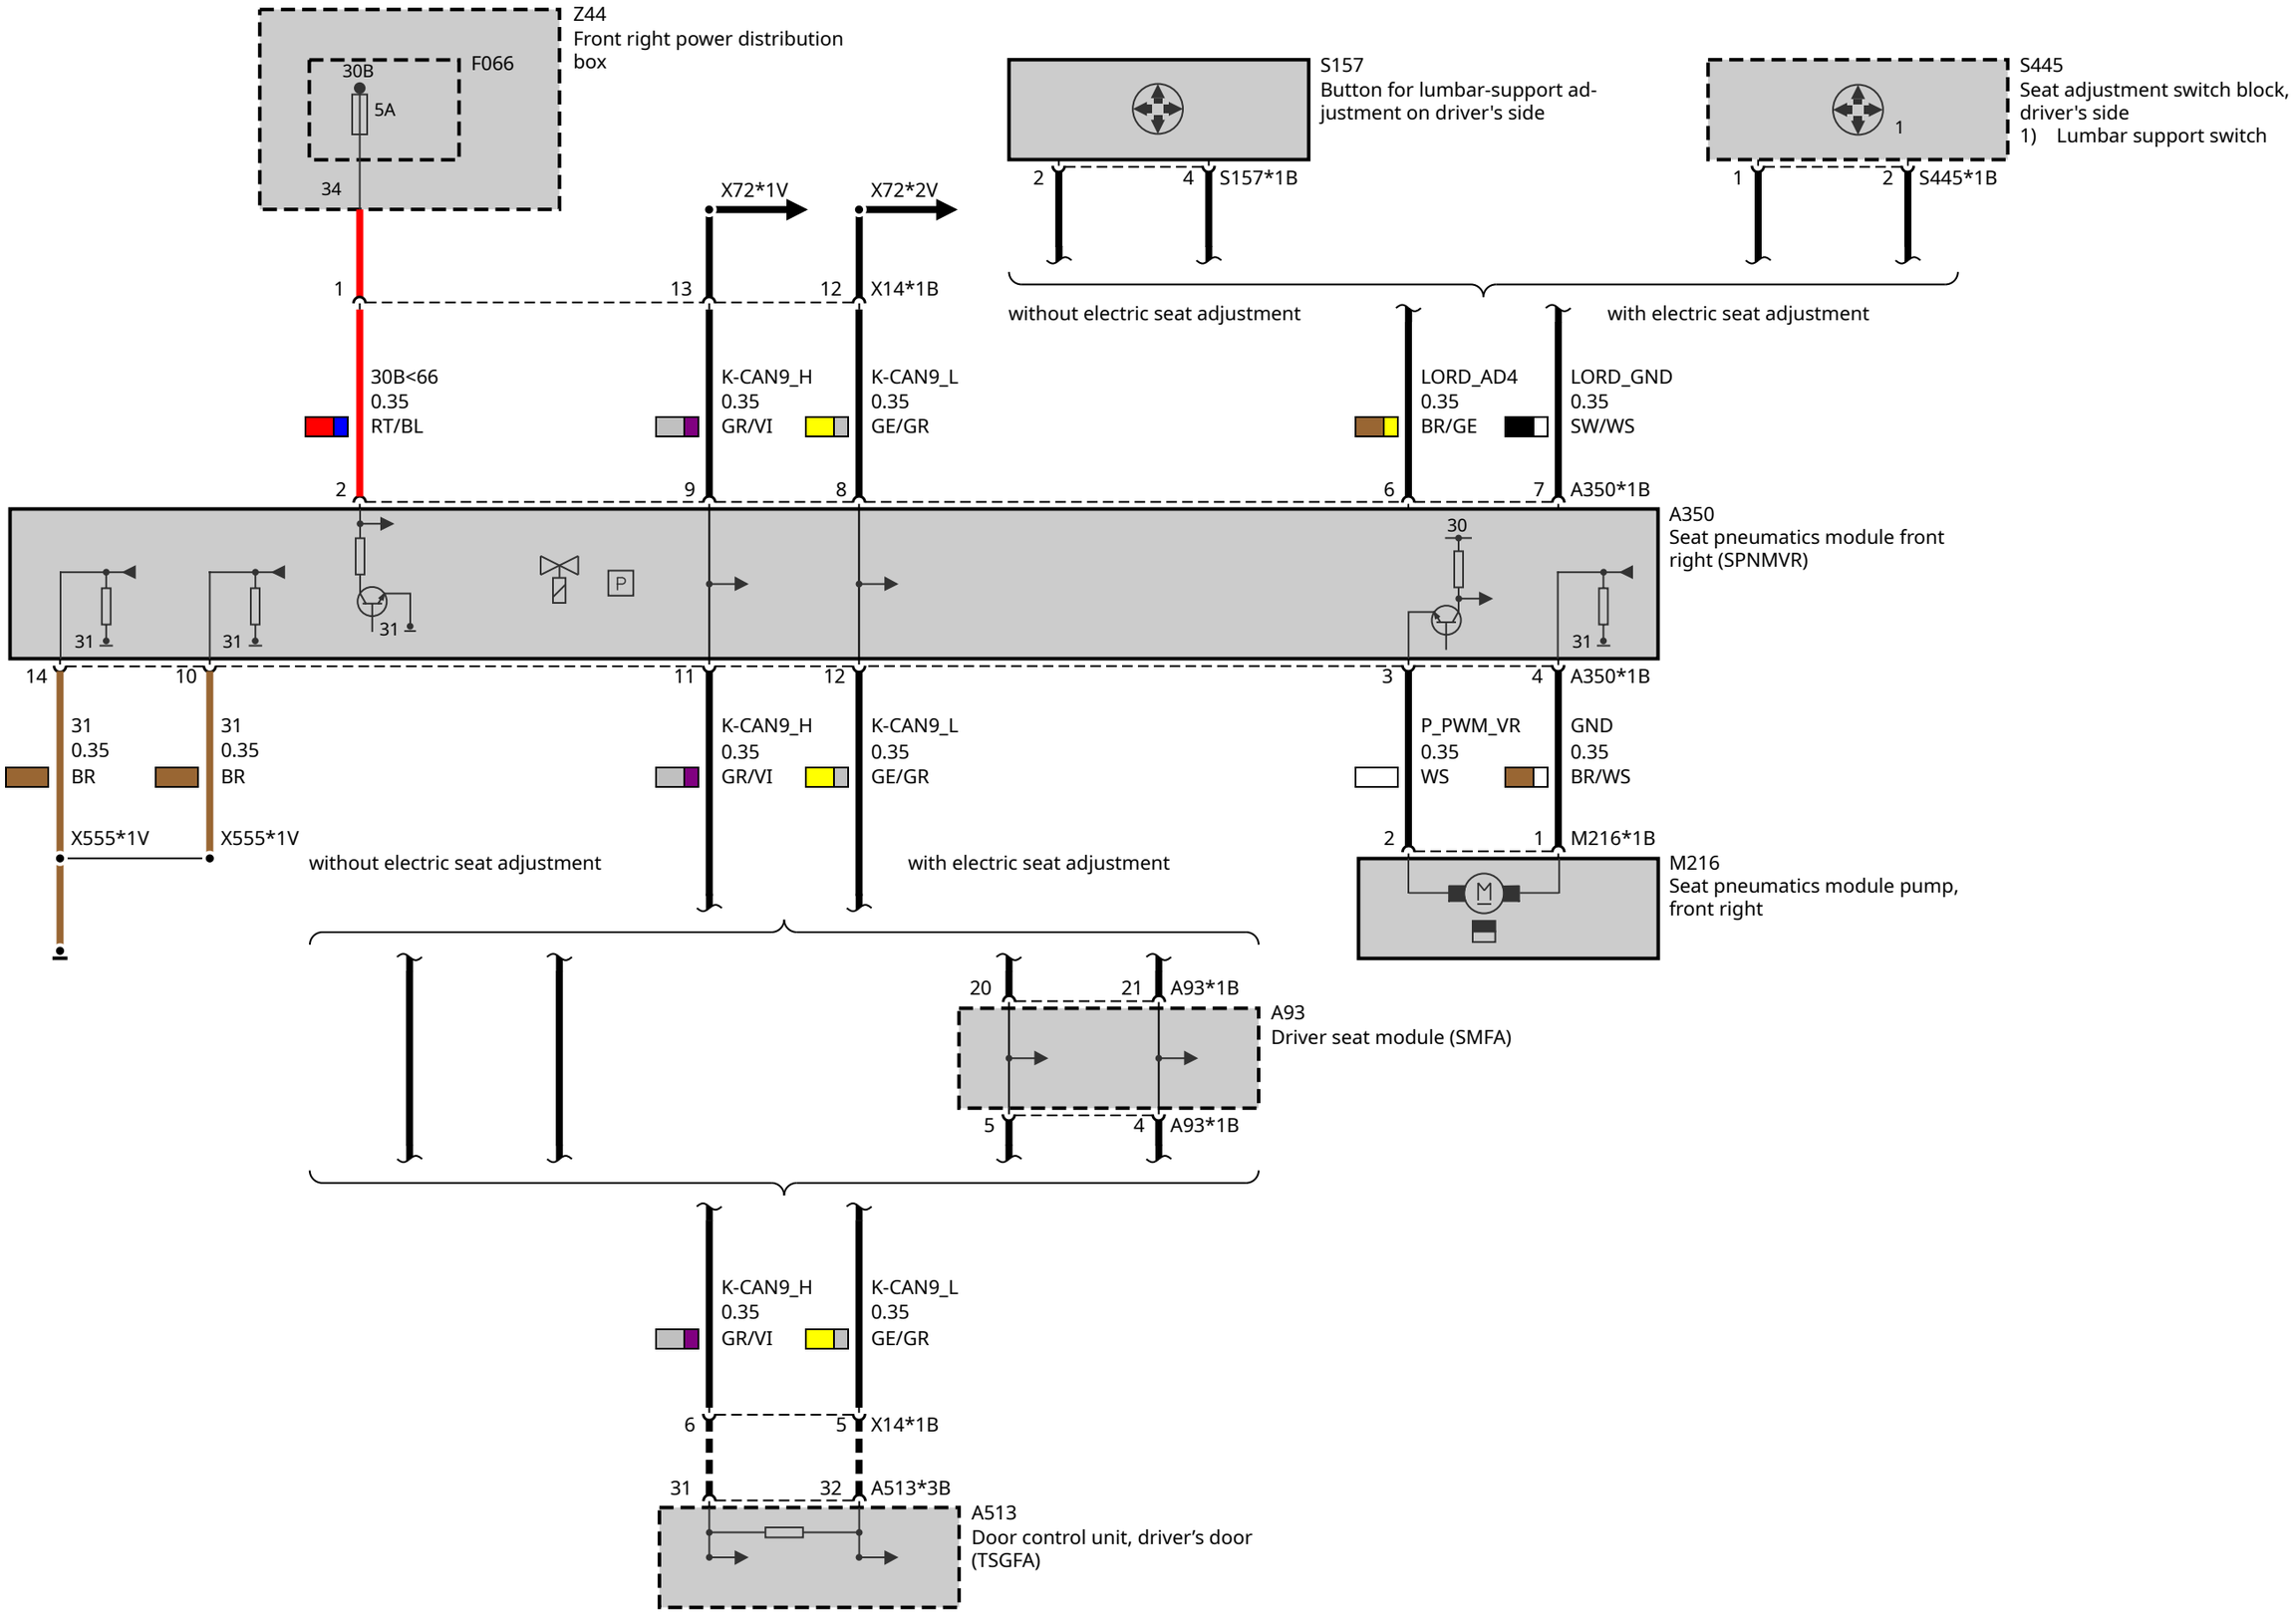
Z44
Front right power distribution box
30B
F066
5A
34
S157
Button for lumbar-support adjustment on driver's side
2
4
S157*1B
S445
Seat adjustment switch block, driver's side
1) Lumbar support switch
1
1
2
S445*1B
X72*1V
X72*2V
1
13
12
X14*1B
without electric seat adjustment
with electric seat adjustment
30B<66
0.35
RT/BL
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
LORD_AD4
0.35
BR/GE
LORD_GND
0.35
SW/WS
2
9
8
6
7
A350*1B
A350
Seat pneumatics module front right (SPNMVR)
30
31
31
31
31
14
10
11
12
3
4
A350*1B
31
0.35
BR
31
0.35
BR
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
P_PWM_VR
0.35
WS
GND
0.35
BR/WS
X555*1V
X555*1V
without electric seat adjustment
with electric seat adjustment
2
1
M216*1B
M216
Seat pneumatics module pump, front right
20
21
A93*1B
A93
Driver seat module (SMFA)
5
4
A93*1B
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
6
5
X14*1B
31
32
A513*3B
A513
Door control unit, driver's door (TSGFA)