

A8680
Fuse carrier, engine electronics

4


X8680

X6820

U_HR<2
0.5
RT/WS

3

X62101

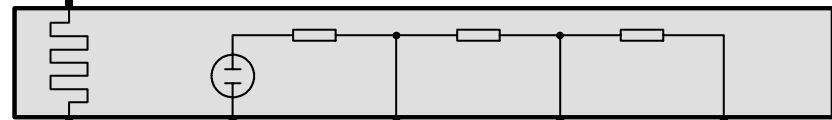

B62101
Heated oxygen sensor 1 in front of catalytic converter

4

T_LHV1
0.5
GN

1

A_LSVR1
0.5
GE

5

M_LSV1
0.5
SW

6

A_LSVP1
0.5
OR

2

I_LSVP1
0.5
BL

X62101

1

31


20

7

19

13

31

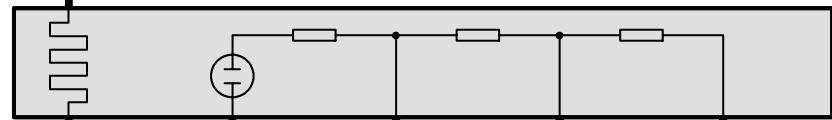

B62201
Heated oxygen sensor 2 in front of catalytic converter

4

T_LHV2
0.5
GN

1

A_LSVR2
0.5
GE

5

M_LSV2
0.5
SW

6

A_LSVP2
0.5
OR

2

I_LSVP2
0.5
BL

X62201

2

31

22

9

21

15

31

31

X60002

A6000
Digital motor electronics control unit

X6820

U_HR<2
0.5
RT/WS

3

X62201