


Z44
Front right power distribution box

1 X12*1B

30B<65
0.35
RT

30B<65
0.35
RT

3 S158*1B

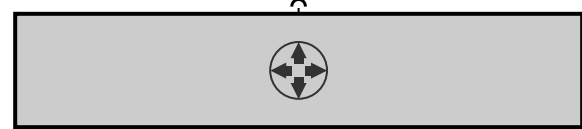

S158
Switch, lumbar support, front passenger

1

31
0.75
BR

LORD_AD4
0.35
WS/GE

BL/WS

LORD_GND
0.35
BR/OR

X642*1V

without electric seat adjustment



A246
Front passenger seat module

7

A246*8B

VERS
0.35
RT

GND
0.35
BR

5

3 S154*3B




S154
Seat adjustment switch block, front passenger side

1

LORD_AD4
0.35
WS/GE

LORD_GND
0.35
BR/OR

electrical seat adjustment with seat module

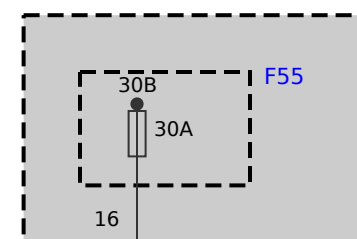

Z44
Front right power distribution box


30B<55
2.5
RT/GE

SW/RT

15 X12*1B

30B<55
2.5
RT/GE

not BEV

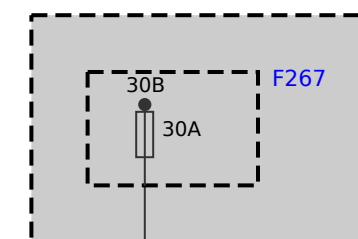

Z2a
Power distribution box, rear

3 Z2*6B

30B<267
2.5
SW/RT

15 X12*1B

30B<267
2.5
RT/GE

BEV

10 S154*1B right-hand drive

8 S154*1B left-hand drive



S154
Seat adjustment switch block, front passenger side

1

LORD_AD4
0.35
WS/GE

LORD_GND
0.35
BR/OR

2

S154*2B

12

S154*1B left-hand drive

6

S154*1B right-hand drive

31
2.5
BR

X642*1V

electrical seat adjustment without seat module