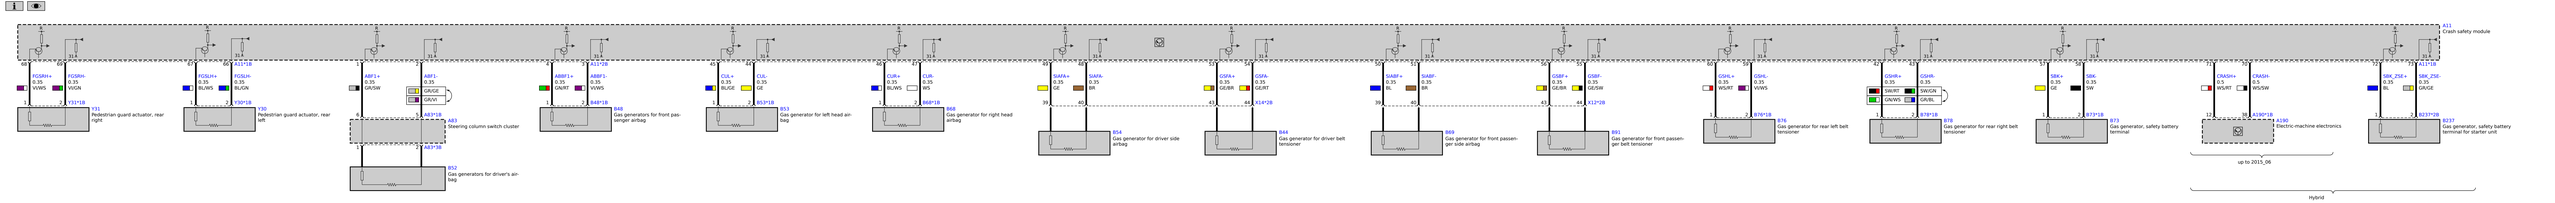
A11
Crash safety module
FGSRH+
0.35
VIWS
FGSHR-
0.35
VIGN
Y31*1B
Y31
Pedestrian guard actuator, rear right
FGSLH+
0.35
BLWS
FGSLH-
0.35
BLGN
Y30*1B
Y30
Pedestrian guard actuator, rear left
A11*1B
ABF1+
0.35
GR/SW
ABF1-
0.35
GR/GE
GR/VI
A83*1B
A83
Steering column switch cluster
B48*1B
B52
Gas generators for driver's airbag
ABBF1+
0.35
GN/RT
ABBF1-
0.35
VI/WS
B48*1B
B48
Gas generators for front passenger airbag
A11*2B
CUL+
0.35
BL/GE
CUL-
0.35
GE
B53*1B
B53
Gas generator for left head airbag
CUR+
0.35
BL/WS
CUR-
0.35
WS
B66*1B
B66
Gas generator for right head airbag
SIAFA+
0.35
GE
SIAFA-
0.35
BR
39
40
B54
Gas generator for driver side airbag
GSFA+
0.35
GE/BR
GSFA-
0.35
GE/RT
43
44
X14*2B
B44
Gas generator for driver belt tensioner
SIABF+
0.35
BL
SIABF-
0.35
BR
39
40
B69
Gas generator for front passenger side airbag
GSBF+
0.35
GE/BR
GSBF-
0.35
GE/SW
43
44
X12*2B
B61
Gas generator for front passenger belt tensioner
GSHL+
0.35
WS/RT
GSHL-
0.35
VIWS
B76*1B
B76
Gas generator for rear left belt tensioner
GSHR+
0.35
SW/RT
GN/WS
GSHR-
0.35
SW/GN
GR/BL
B78*1B
B78
Gas generator for rear right belt tensioner
GBK+
0.35
GE
GBK-
0.35
SW
B73*1B
B73
Gas generator, safety battery terminal
CRASH+
0.5
WS/RT
CRASH-
0.5
WS/SW
A190*1B
A190
Electric-machine electronics
up to 2015_06
SBK_ZSE+
0.25
BL
SBK_ZSE-
0.30
GR/GE
B237*2B
B237
Gas generator, safety battery terminal for starter unit
Hybrid