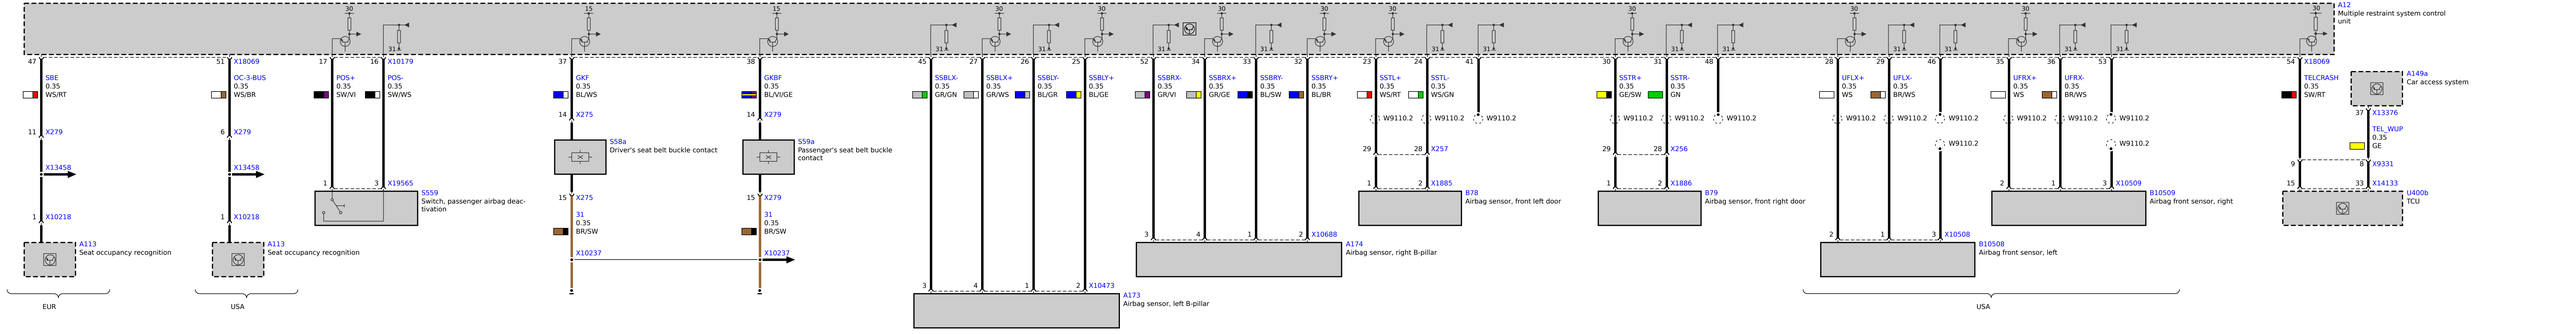
A12
Multiple restraint system control unit
47 SBE 0.35 WS/RT
11 X279
X1345B
1 X10218
A113
Seat occupancy recognition
EUR
51 X18069 OC-3-BUS 0.35 WS/BR
6 X279
X1345B
1 X10218
A113
Seat occupancy recognition
USA
17 POS+ 0.35 SW/VI
16 X10179 POS- 0.35 SW/WS
1 3 X19565
S559
Switch, passenger airbag deactivation
37 GKF 0.35 BL/WS
14 X275
S58a
Driver's seat belt buckle contact
15 X275
31 0.35 BR/SW
X10237
38 GKBF 0.35 BL/VI/GE
14 X279
S59a
Passenger's seat belt buckle contact
15 X279
31 0.35 BR/SW
X10237
45 SSBLX- 0.35 GR/GN
27 SSBLX+ 0.35 GR/WS
26 SSBLY- 0.35 BL/GR
25 SSBLY+ 0.35 BL/GE
3 4 1 2 X10473
A173
Airbag sensor, left B-pillar
52 SSBRX- 0.35 GR/VI
34 SSBRX+ 0.35 GR/GE
33 SSBRY- 0.35 BL/SW
32 SSBRY+ 0.35 BL/BR
3 4 1 2 X10688
A174
Airbag sensor, right B-pillar
23 SSTL+ 0.35 WS/RT
24 SSTL- 0.35 WS/GN
41
W9110.2
29 28 X257
1 2 X1885
B78
Airbag sensor, front left door
30 SSTR+ 0.35 GE/SW
31 SSTR- 0.35 GN
48
W9110.2
29 28 X256
1 2 X1886
B79
Airbag sensor, front right door
28 UFLX+ 0.35 WS
29 UFLX- 0.35 BR/WS
46
W9110.2
2 1 3 X10508
B10508
Airbag front sensor, left
35 UFRX+ 0.35 WS
36 UFRX- 0.35 BR/WS
53
W9110.2
2 1 3 X10509
B10509
Airbag front sensor, right
USA
54 X18069 TELCRASH 0.35 SW/RT
A149a
Car access system
37 X13376
TEL_WUP 0.35 GE
9 8 X9331
15 33 X14133
U400b
TCU