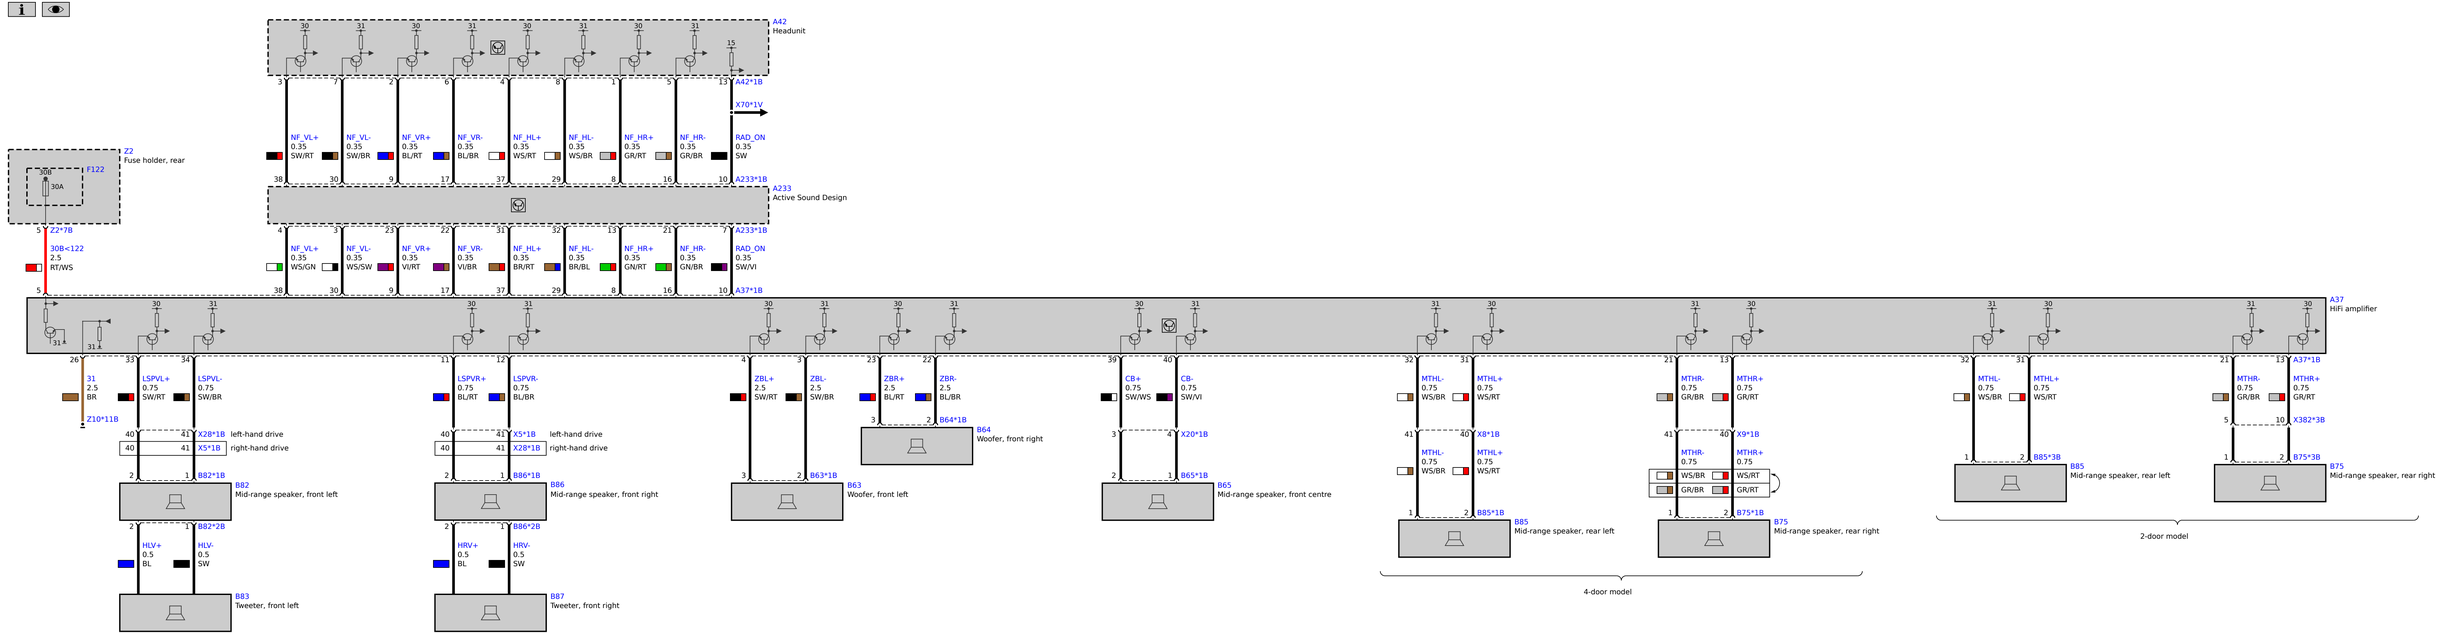
A42
Headunit
A42*1B
X70*1V
NF_VL+ 0.35 SW/RT
NF_VL- 0.35 SW/BR
NF_VR+ 0.35 BL/RT
NF_VR- 0.35 BL/BR
NF_HL+ 0.35 WS/RT
NF_HL- 0.35 WS/BR
NF_HR+ 0.35 GR/RT
NF_HR- 0.35 GR/BR
RAD_ON 0.35 SW
A233*1B
A233
Active Sound Design
NF_VL+ 0.35 WS/GN
NF_VL- 0.35 WS/SW
NF_VR+ 0.35 VI/RT
NF_VR- 0.35 VI/BR
NF_HL+ 0.35 BR/RT
NF_HL- 0.35 BR/BL
NF_HR+ 0.35 GN/RT
NF_HR- 0.35 GN/BR
RAD_ON 0.35 SW/VI
A37*1B
A37
HiFi amplifier
Z2
Fuse holder, rear
F122
30B
30A
Z2*7B
30B<122 2.5 RT/WS
31 2.5 BR
Z10*11B
LSPVL+ 0.75 SW/RT
LSPVL- 0.75 SW/BR
X28*1B left-hand drive
X5*1B right-hand drive
B82*1B
B82
Mid-range speaker, front left
B82*2B
HLV+ 0.5 BL
HLV- 0.5 SW
B83
Tweeter, front left
LSPVR+ 0.75 BL/RT
LSPVR- 0.75 BL/BR
X5*1B left-hand drive
X28*1B right-hand drive
B86*1B
B86
Mid-range speaker, front right
B86*2B
HRV+ 0.5 BL
HRV- 0.5 SW
B87
Tweeter, front right
ZBL+ 2.5 SW/RT
ZBL- 2.5 SW/BR
B63*1B
B63
Woofer, front left
ZBR+ 2.5 BL/RT
ZBR- 2.5 BL/BR
B64*1B
B64
Woofer, front right
CB+ 0.75 SW/WS
CB- 0.75 SW/VI
X20*1B
B65*1B
B65
Mid-range speaker, front centre
MTHL- 0.75 WS/BR
MTHL+ 0.75 WS/RT
X8*1B
B85*1B
B85
Mid-range speaker, rear left
MTHR- 0.75 GR/BR
MTHR+ 0.75 GR/RT
X9*1B
WS/BR
WS/RT
GR/BR
GR/RT
B75*1B
B75
Mid-range speaker, rear right
4-door model
B85*3B
B85
Mid-range speaker, rear left
X382*3B
B75*3B
B75
Mid-range speaker, rear right
2-door model