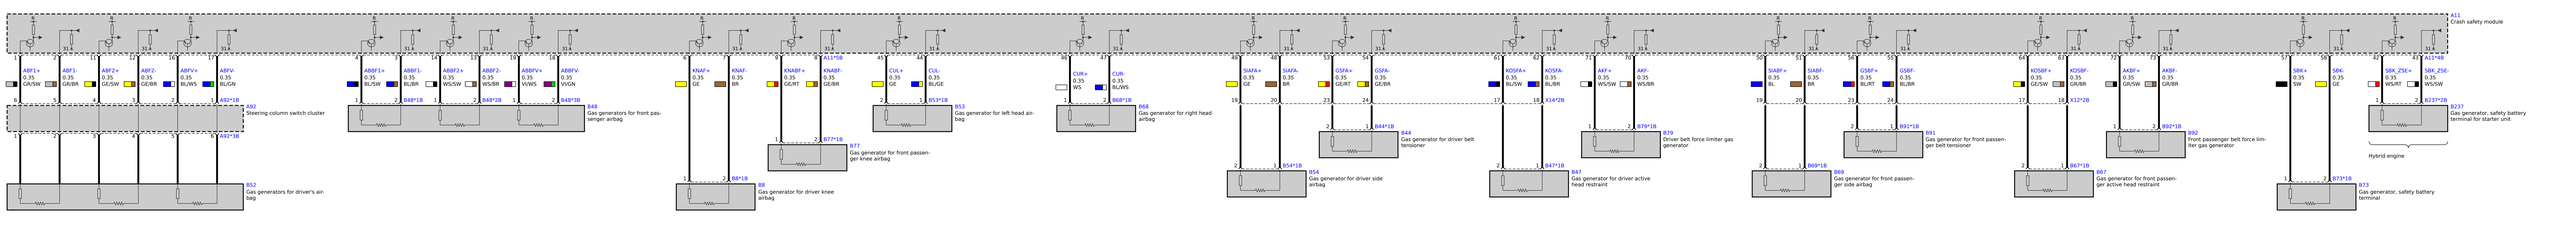
A11
Crash safety module
ABF1+ 0.35 GR/SW
ABF1- 0.35 GR/BR
ABF2+ 0.35 GE/SW
ABF2- 0.35 GE/BR
ABFV+ 0.35 BL/WS
ABFV- 0.35 BL/GN
A92*1B
A92
Steering column switch cluster
A92*3B
B52
Gas generators for driver's air-bag
ABBF1+ 0.35 BL/SW
ABBF1- 0.35 BL/BR
ABBF2+ 0.35 WS/SW
ABBF2- 0.35 WS/BR
ABBFV+ 0.35 VI/WS
ABBFV- 0.35 VI/GN
B48*1B
B48*2B
B48*3B
B48
Gas generators for front passenger airbag
KNAF+ 0.35 GE
KNAF- 0.35 BR
B8*1B
B8
Gas generator for driver knee airbag
KNABF+ 0.35 GE/RT
KNABF- 0.35 GE/BR
A11*5B
B77*1B
B77
Gas generator for front passenger knee airbag
CUL+ 0.35 GE
CUL- 0.35 BL/GE
B53*1B
B53
Gas generator for left head airbag
CUR+ 0.35 WS
CUR- 0.35 BL/WS
B68*1B
B68
Gas generator for right head airbag
SSFA+ 0.35 GE
SSFA- 0.35 BR
B54*1B
B54
Gas generator for driver side airbag
SSFA+ 0.35 GE/RT
SSFA- 0.35 GE/BR
B44*1B
B44
Gas generator for driver belt tensioner
KSSFA+ 0.35 BL/SW
KSSFA- 0.35 BL/BR
A14*2B
B47*1B
B47
Gas generator for driver active head restraint
ABF+ 0.35 WS/SW
ABF- 0.35 WS/BR
B79*1B
B79
Driver belt force limiter gas generator
ABBF+ 0.35 BL
ABBF- 0.35 BR
B69*1B
B69
Gas generator for front passenger side airbag
GSBF+ 0.35 BL/RT
GSBF- 0.35 BL/BR
B91*1B
B91
Gas generator for front passenger belt tensioner
KSSBF+ 0.35 GE/SW
KSSBF- 0.35 GE/BR
A12*2B
B67*1B
B67
Gas generator for front passenger active head restraint
AKBF+ 0.35 GR/SW
AKBF- 0.35 GR/BR
B92*1B
B92
Front passenger belt force limiter gas generator
SBK+ 0.35 SW
SBK- 0.35 GE
B73*1B
B73
Gas generator, safety battery terminal
SBK_ZSE+ 0.35 WS/RT
SBK_ZSE- 0.35 WS/SW
A11*4B
B237*2B
B237
Gas generator, safety battery terminal for starter unit
Hybrid engine