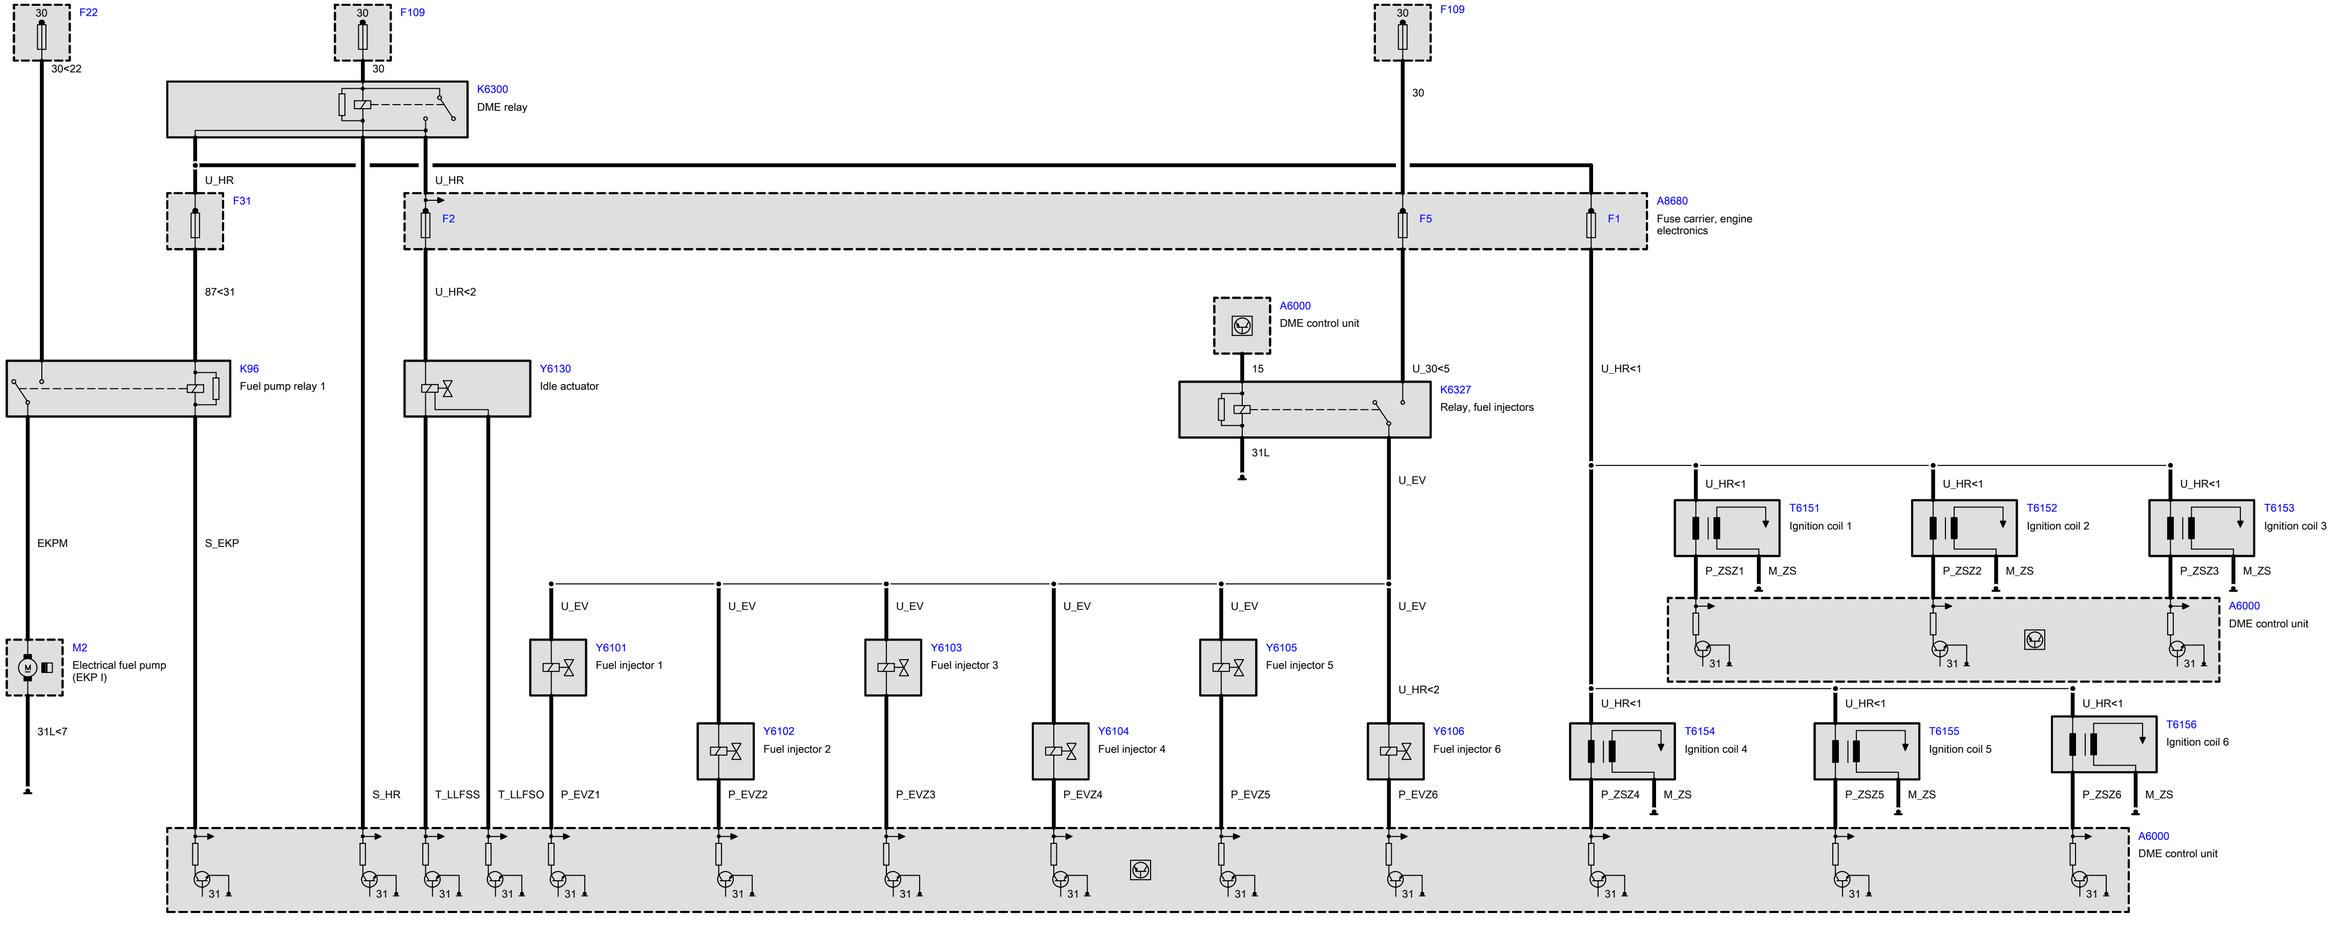
F22
30<22
F109
30
K6300
DME relay
U_HR
F31
87<31
F2
U_HR<2
F5
F1
A8680
Fuse carrier, engine electronics
A6000
DME control unit
15
K6327
Relay, fuel injectors
U_30<5
31L
U_HR<1
K96
Fuel pump relay 1
Y6130
Idle actuator
EKPM
S_EKP
M2
Electrical fuel pump (EKP I)
31L<7
U_EV
Y6101
Fuel injector 1
Y6102
Fuel injector 2
Y6103
Fuel injector 3
Y6104
Fuel injector 4
Y6105
Fuel injector 5
Y6106
Fuel injector 6
U_HR<2
T6151
Ignition coil 1
T6152
Ignition coil 2
T6153
Ignition coil 3
T6154
Ignition coil 4
T6155
Ignition coil 5
T6156
Ignition coil 6
P_ZSZ1
M_ZS
P_ZSZ2
P_ZSZ3
P_ZSZ4
P_ZSZ5
P_ZSZ6
S_HR
T_LLFSS
T_LLFSO
P_EVZ1
P_EVZ2
P_EVZ3
P_EVZ4
P_EVZ5
P_EVZ6
31