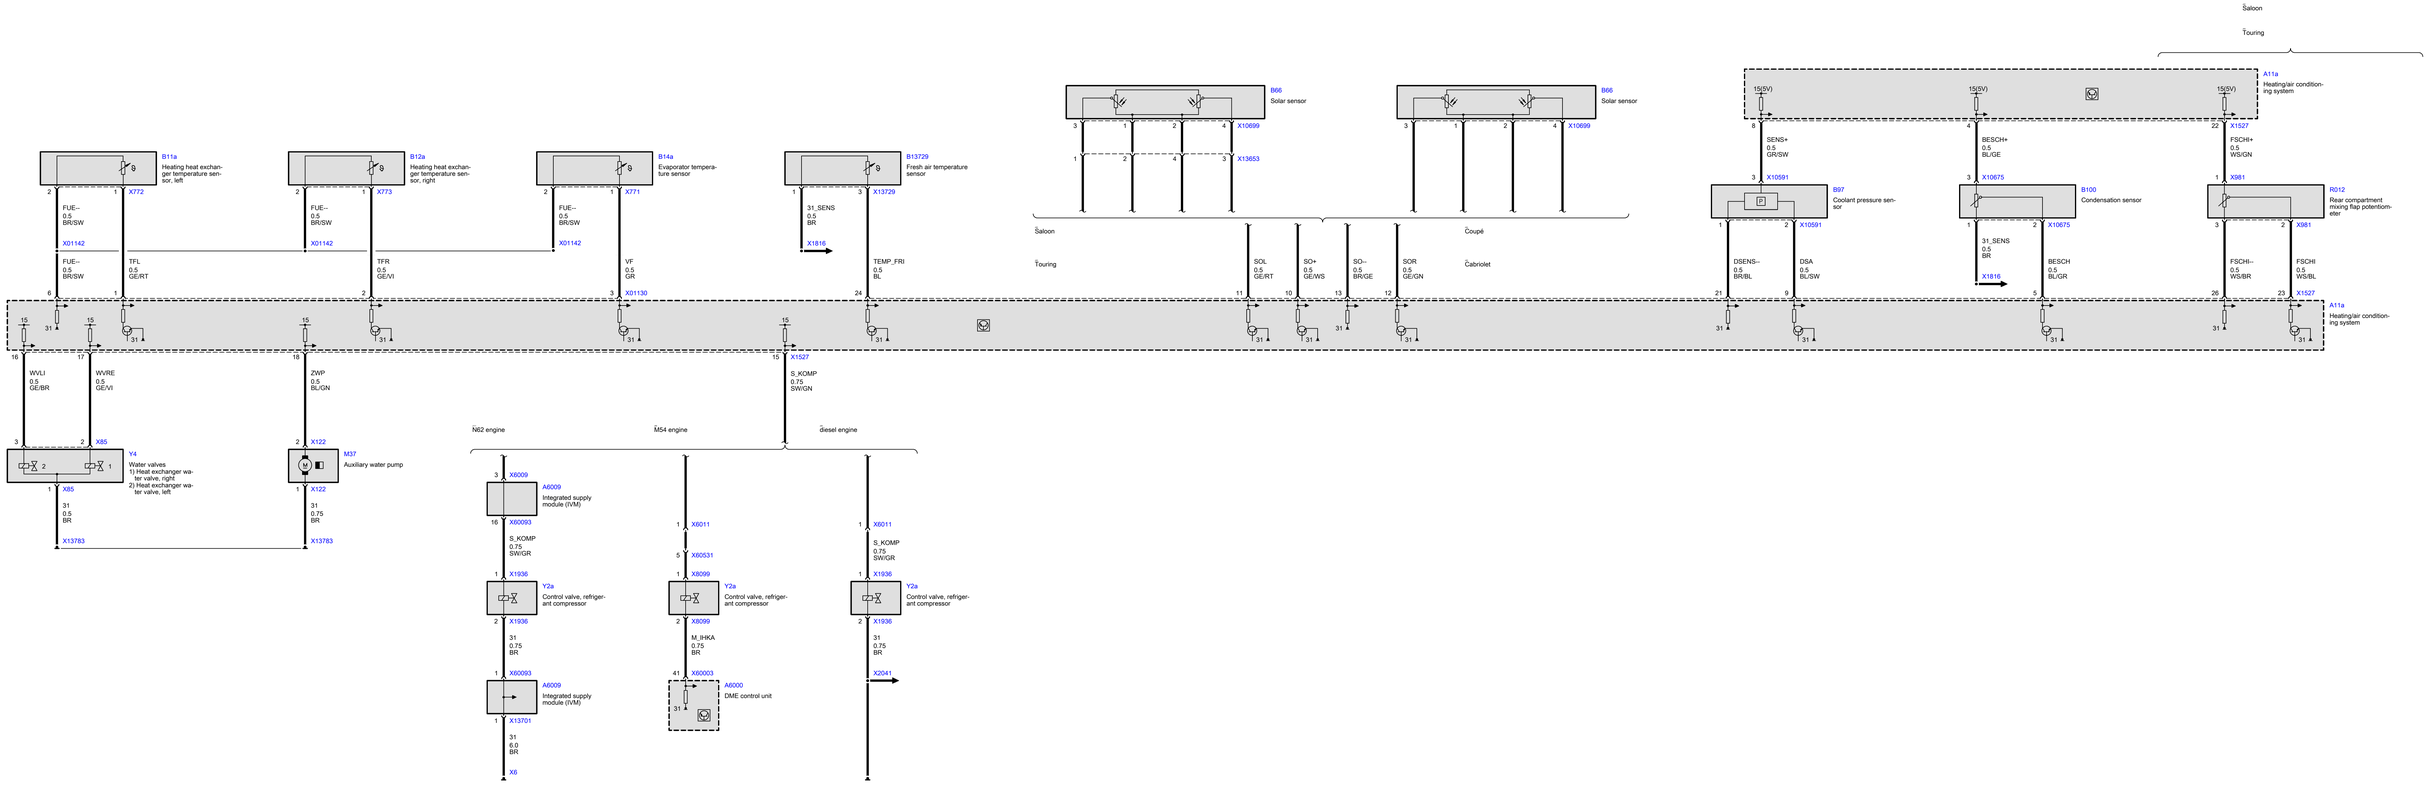
Saloon
Touring
B11a
Heating heat exchanger temperature sensor, left
X772
FUE–
0.5
BR/SW
X01142
FUE–
0.5
BR/SW
TFL
0.5
GE/RT
B12a
Heating heat exchanger temperature sensor, right
X773
FUE–
0.5
BR/SW
X01142
TFR
0.5
GE/VI
B14a
Evaporator temperature sensor
X771
FUE–
0.5
BR/SW
X01142
VF
0.5
GR
X01130
B13729
Fresh air temperature sensor
X13729
31_SENS
0.5
BR
X1816
TEMP_FRI
0.5
BL
B66
Solar sensor
X10699
X13653
Saloon
Touring
SOL
0.5
GE/RT
SO+
0.5
GE/WS
SO–
0.5
BR/GE
Coupé
Cabriolet
SOR
0.5
GE/GN
B66
Solar sensor
X10699
A11a
Heating/air conditioning system
15(SV)
SENS+
0.5
GR/SW
X10591
B97
Coolant pressure sensor
DSENS–
0.5
BR/BL
DSA
0.5
BL/SW
BESCH+
0.5
BL/GE
X10675
B100
Condensation sensor
31_SENS
0.5
BR
X1816
BESCH
0.5
BL/GR
FSCHI+
0.5
WS/GN
X981
R012
Rear compartment mixing flap potentiometer
FSCHI–
0.5
WS/BR
FSCHI
0.5
WS/BL
X1527
A11a
Heating/air conditioning system
WVLI
0.5
GE/BR
WVRE
0.5
GE/VI
X85
Y4
Water valves
1) Heat exchanger water valve, right
2) Heat exchanger water valve, left
31
0.5
BR
X13783
ZWP
0.5
BL/GN
X122
M37
Auxiliary water pump
31
0.75
BR
X13783
S_KOMP
0.75
SW/GN
N62 engine
M54 engine
Diesel engine
X6009
A6009
Integrated supply module (IVM)
X60093
S_KOMP
0.75
SW/GR
X1936
Y2a
Control valve, refrigerant compressor
31
0.75
BR
X60093
A6009
Integrated supply module (IVM)
X13701
31
6.0
BR
X6
X6011
X60531
X6099
Y2a
Control valve, refrigerant compressor
M_IHKA
0.75
BR
X60003
A6000
DME control unit
X6011
S_KOMP
0.75
SW/GR
X1936
Y2a
Control valve, refrigerant compressor
31
0.75
BR
X2041