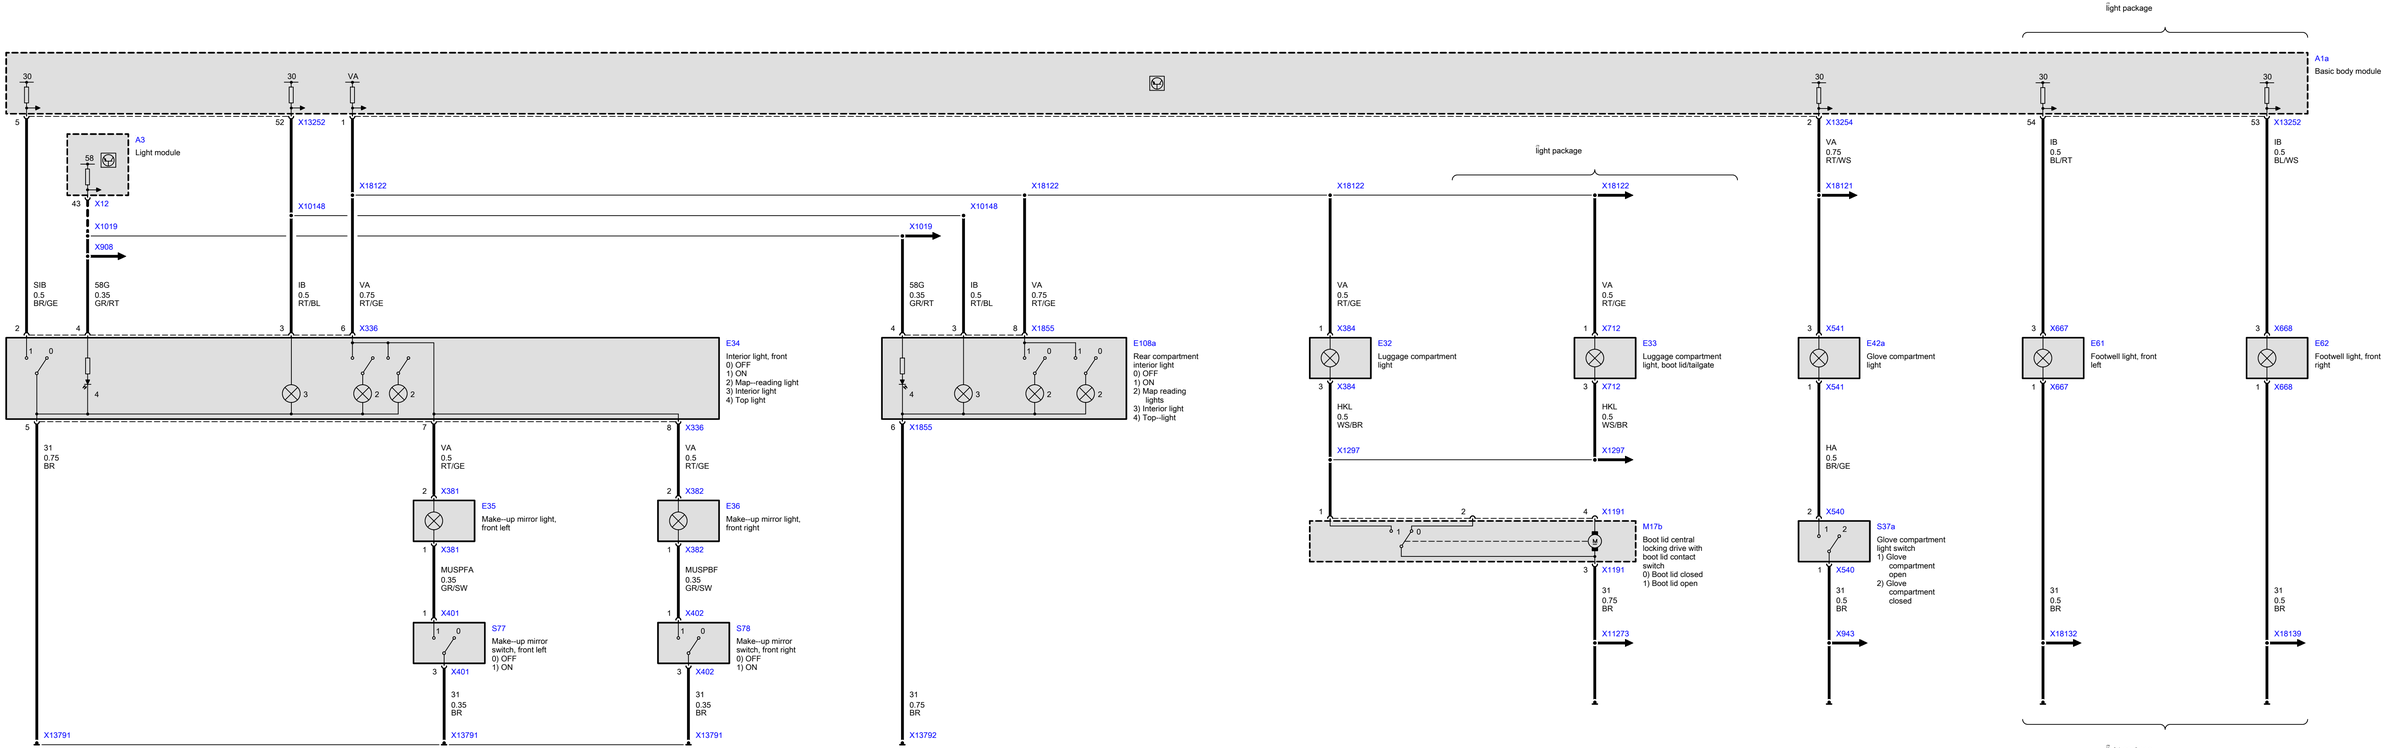
A1a
Basic body module
30
VA
5
52
1
2
54
53
X13252
X13254
A3
Light module
58
43
X12
X1019
X908
X10148
X18122
SIB
0.5
BR/GE
58G
0.35
GR/RT
IB
0.5
RT/BL
VA
0.75
RT/GE
VA
0.5
RT/GE
VA
0.75
RT/WS
IB
0.5
BL/RT
IB
0.5
BL/WS
X18121
light package
2
4
3
6
X336
E34
Interior light, front
0) OFF
1) ON
2) Map--reading light
3) Interior light
4) Top light
4
3
8
X1855
E108a
Rear compartment interior light
0) OFF
1) ON
2) Map reading lights
3) Interior light
4) Top--light
1
X384
E32
Luggage compartment light
X712
E33
Luggage compartment light, boot lid/tailgate
X541
E42a
Glove compartment light
X667
E61
Footwell light, front left
X668
E62
Footwell light, front right
HKL
0.5
WS/BR
X1297
HA
0.5
BR/GE
X540
S37a
Glove compartment light switch
1) Glove compartment open
2) Glove compartment closed
X1191
M17b
Boot lid central locking drive with boot lid contact switch
0) Boot lid closed
1) Boot lid open
31
0.75
BR
X11273
X943
X11832
X18139
X13791
X13792
7
8
X381
E35
Make--up mirror light, front left
X382
E36
Make--up mirror light, front right
MUSPFA
0.35
GR/SW
MUSPBF
0.35
GR/SW
X401
S77
Make--up mirror switch, front left
0) OFF
1) ON
X402
S78
Make--up mirror switch, front right
0) OFF
1) ON