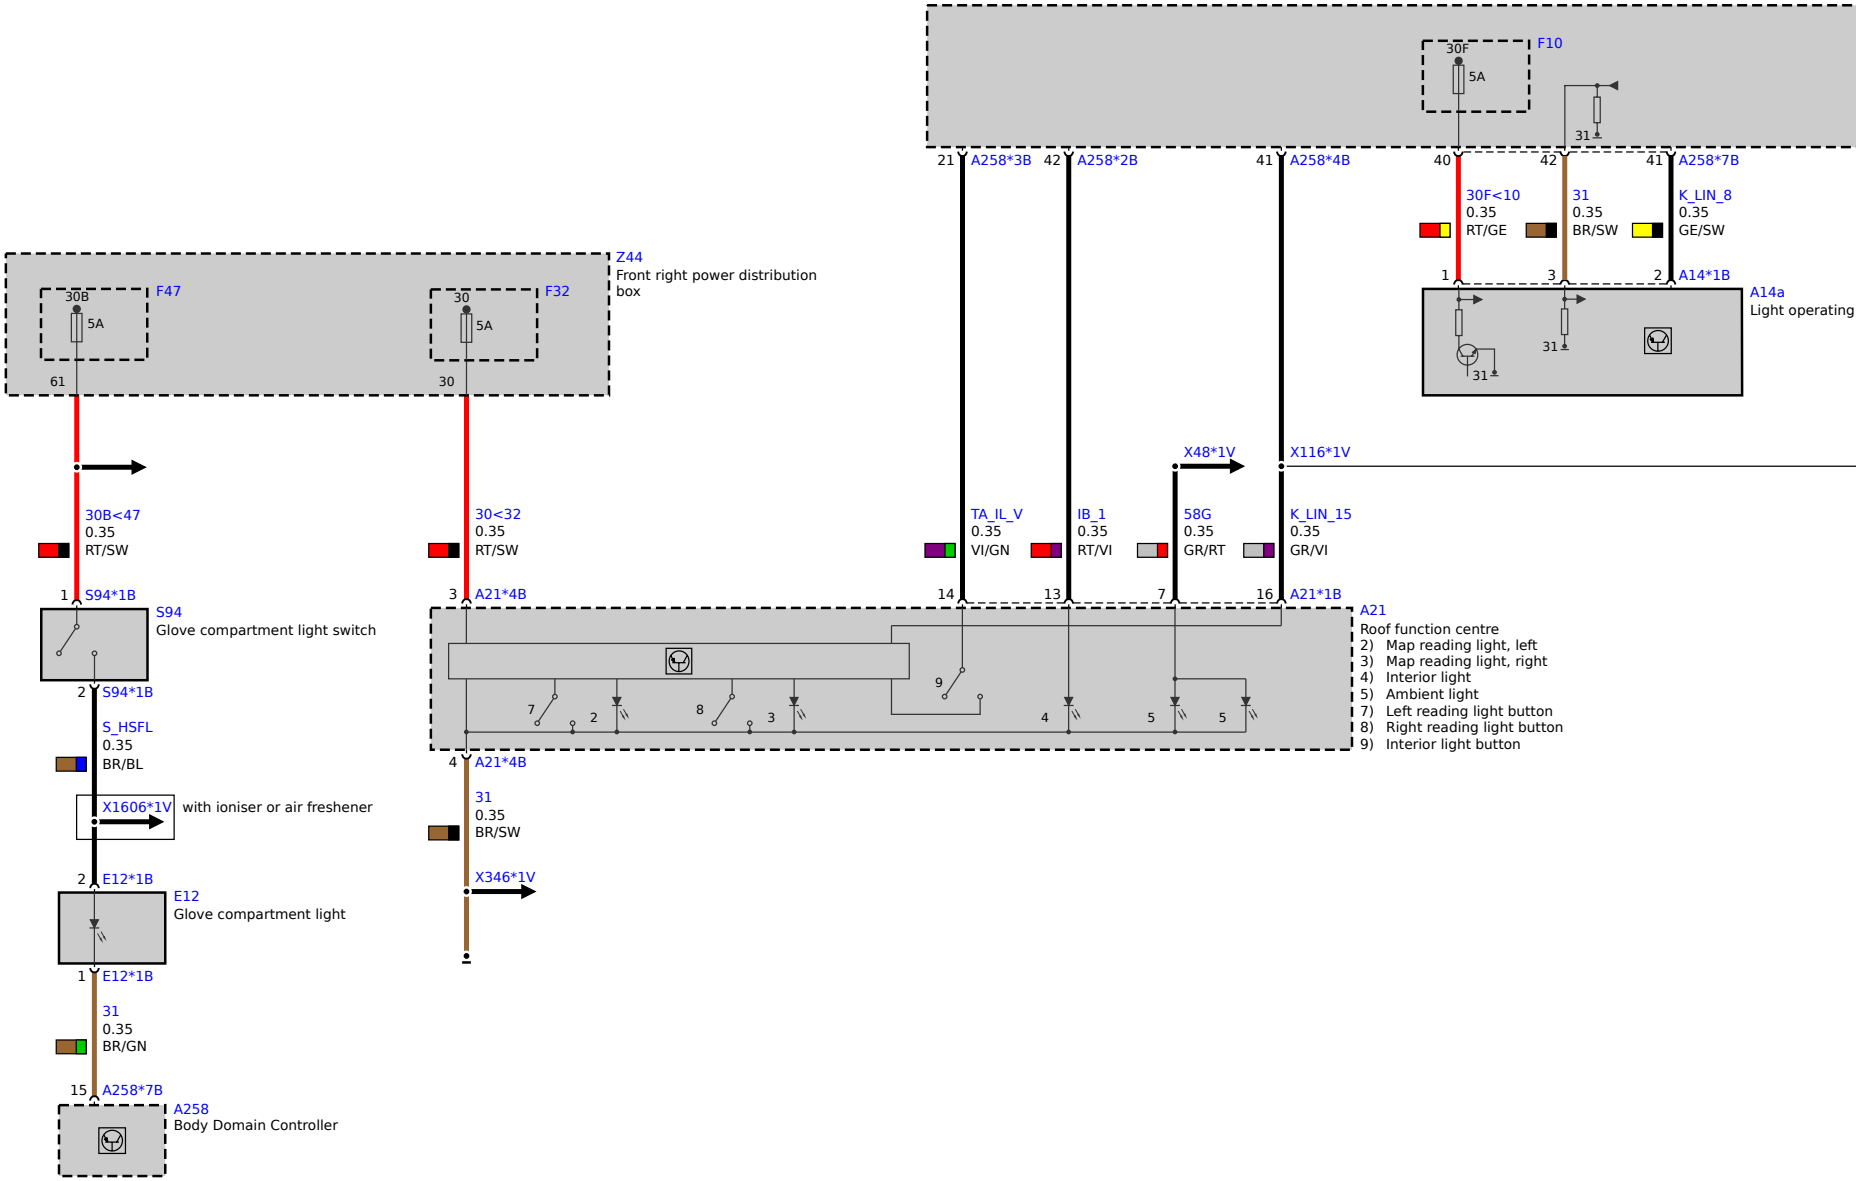
F10
30F
5A
31
21 A258*3B
42 A258*2B
41 A258*4B
40
42
41 A258*7B
30F<10
0.35
RT/GE
31
0.35
BR/SW
K_LIN_8
0.35
GE/SW
1
3
2 A14*1B
A14a
Light operating
31
31
Z44
Front right power distribution box
30B
F47
5A
30
F32
5A
61
30
30B<47
0.35
RT/SW
30<32
0.35
RT/SW
X48*1V
X116*1V
TA_IL_V
0.35
VI/GN
IB_1
0.35
RT/VI
58G
0.35
GR/RT
K_LIN_15
0.35
GR/VI
1 S94*1B
S94
Glove compartment light switch
3 A21*4B
14
13
7
16 A21*1B
A21
Roof function centre
2) Map reading light, left
3) Map reading light, right
4) Interior light
5) Ambient light
7) Left reading light button
8) Right reading light button
9) Interior light button
9
7
2
8
3
4
5
5
2 S94*1B
S_HSFL
0.35
BR/BL
4 A21*4B
31
0.35
BR/SW
X1606*1V
with ioniser or air freshener
X346*1V
2 E12*1B
E12
Glove compartment light
1 E12*1B
31
0.35
BR/GN
15 A258*7B
A258
Body Domain Controller

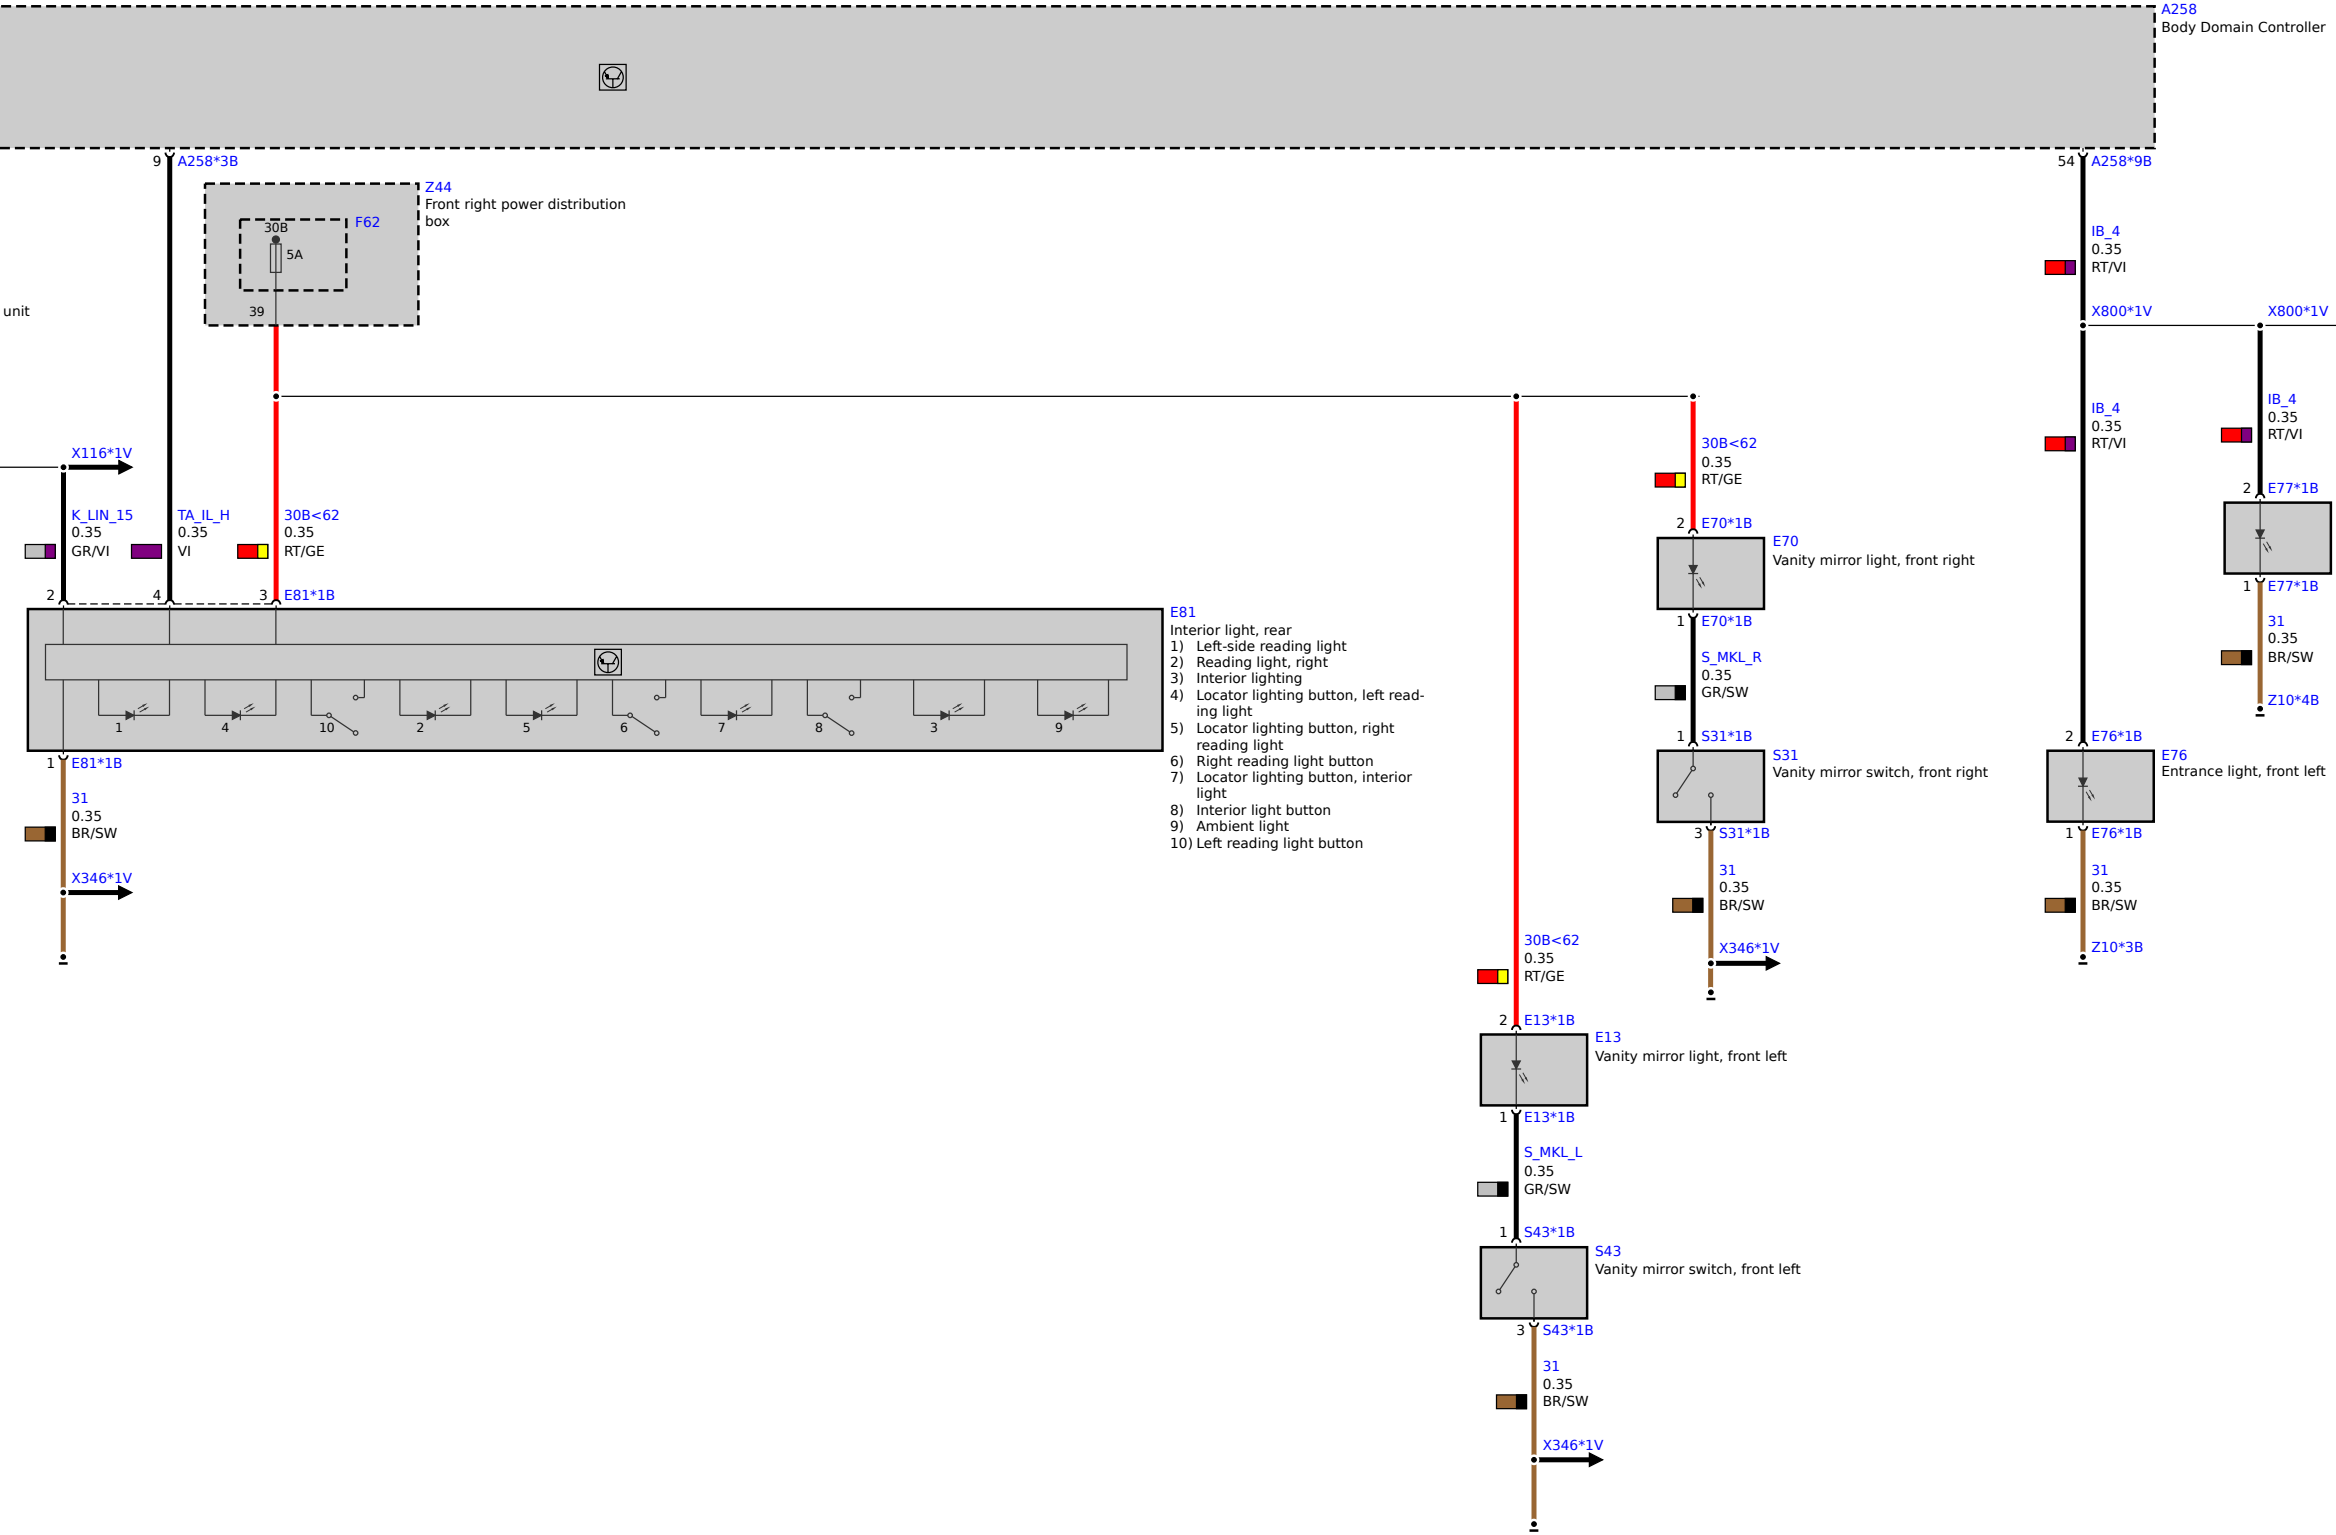
A258
Body Domain Controller
9
A258*3B
54
A258*9B
Z44
Front right power distribution box
F62
30B
5A
39
unit
IB_4
0.35
RT/VI
X800*1V
X800*1V
IB_4
0.35
RT/VI
IB_4
0.35
RT/VI
X116*1V
30B<62
0.35
RT/GE
K_LIN_15
0.35
GR/VI
TA_IL_H
0.35
VI
30B<62
0.35
RT/GE
2
E77*1B
1
E77*1B
2
E70*1B
E70
Vanity mirror light, front right
1
E70*1B
2
4
3
E81*1B
E81
Interior light, rear
1) Left-side reading light
2) Reading light, right
3) Interior lighting
4) Locator lighting button, left reading light
5) Locator lighting button, right reading light
6) Right reading light button
7) Locator lighting button, interior light
8) Interior light button
9) Ambient light
10) Left reading light button
1
4
10
2
5
6
7
8
3
9
1
E81*1B
31
0.35
BR/SW
X346*1V
31
0.35
BR/SW
Z10*4B
S_MKL_R
0.35
GR/SW
1
S31*1B
S31
Vanity mirror switch, front right
3
S31*1B
31
0.35
BR/SW
X346*1V
2
E76*1B
E76
Entrance light, front left
1
E76*1B
31
0.35
BR/SW
Z10*3B
30B<62
0.35
RT/GE
2
E13*1B
E13
Vanity mirror light, front left
1
E13*1B
S_MKL_L
0.35
GR/SW
1
S43*1B
S43
Vanity mirror switch, front left
3
S43*1B
31
0.35
BR/SW
X346*1V

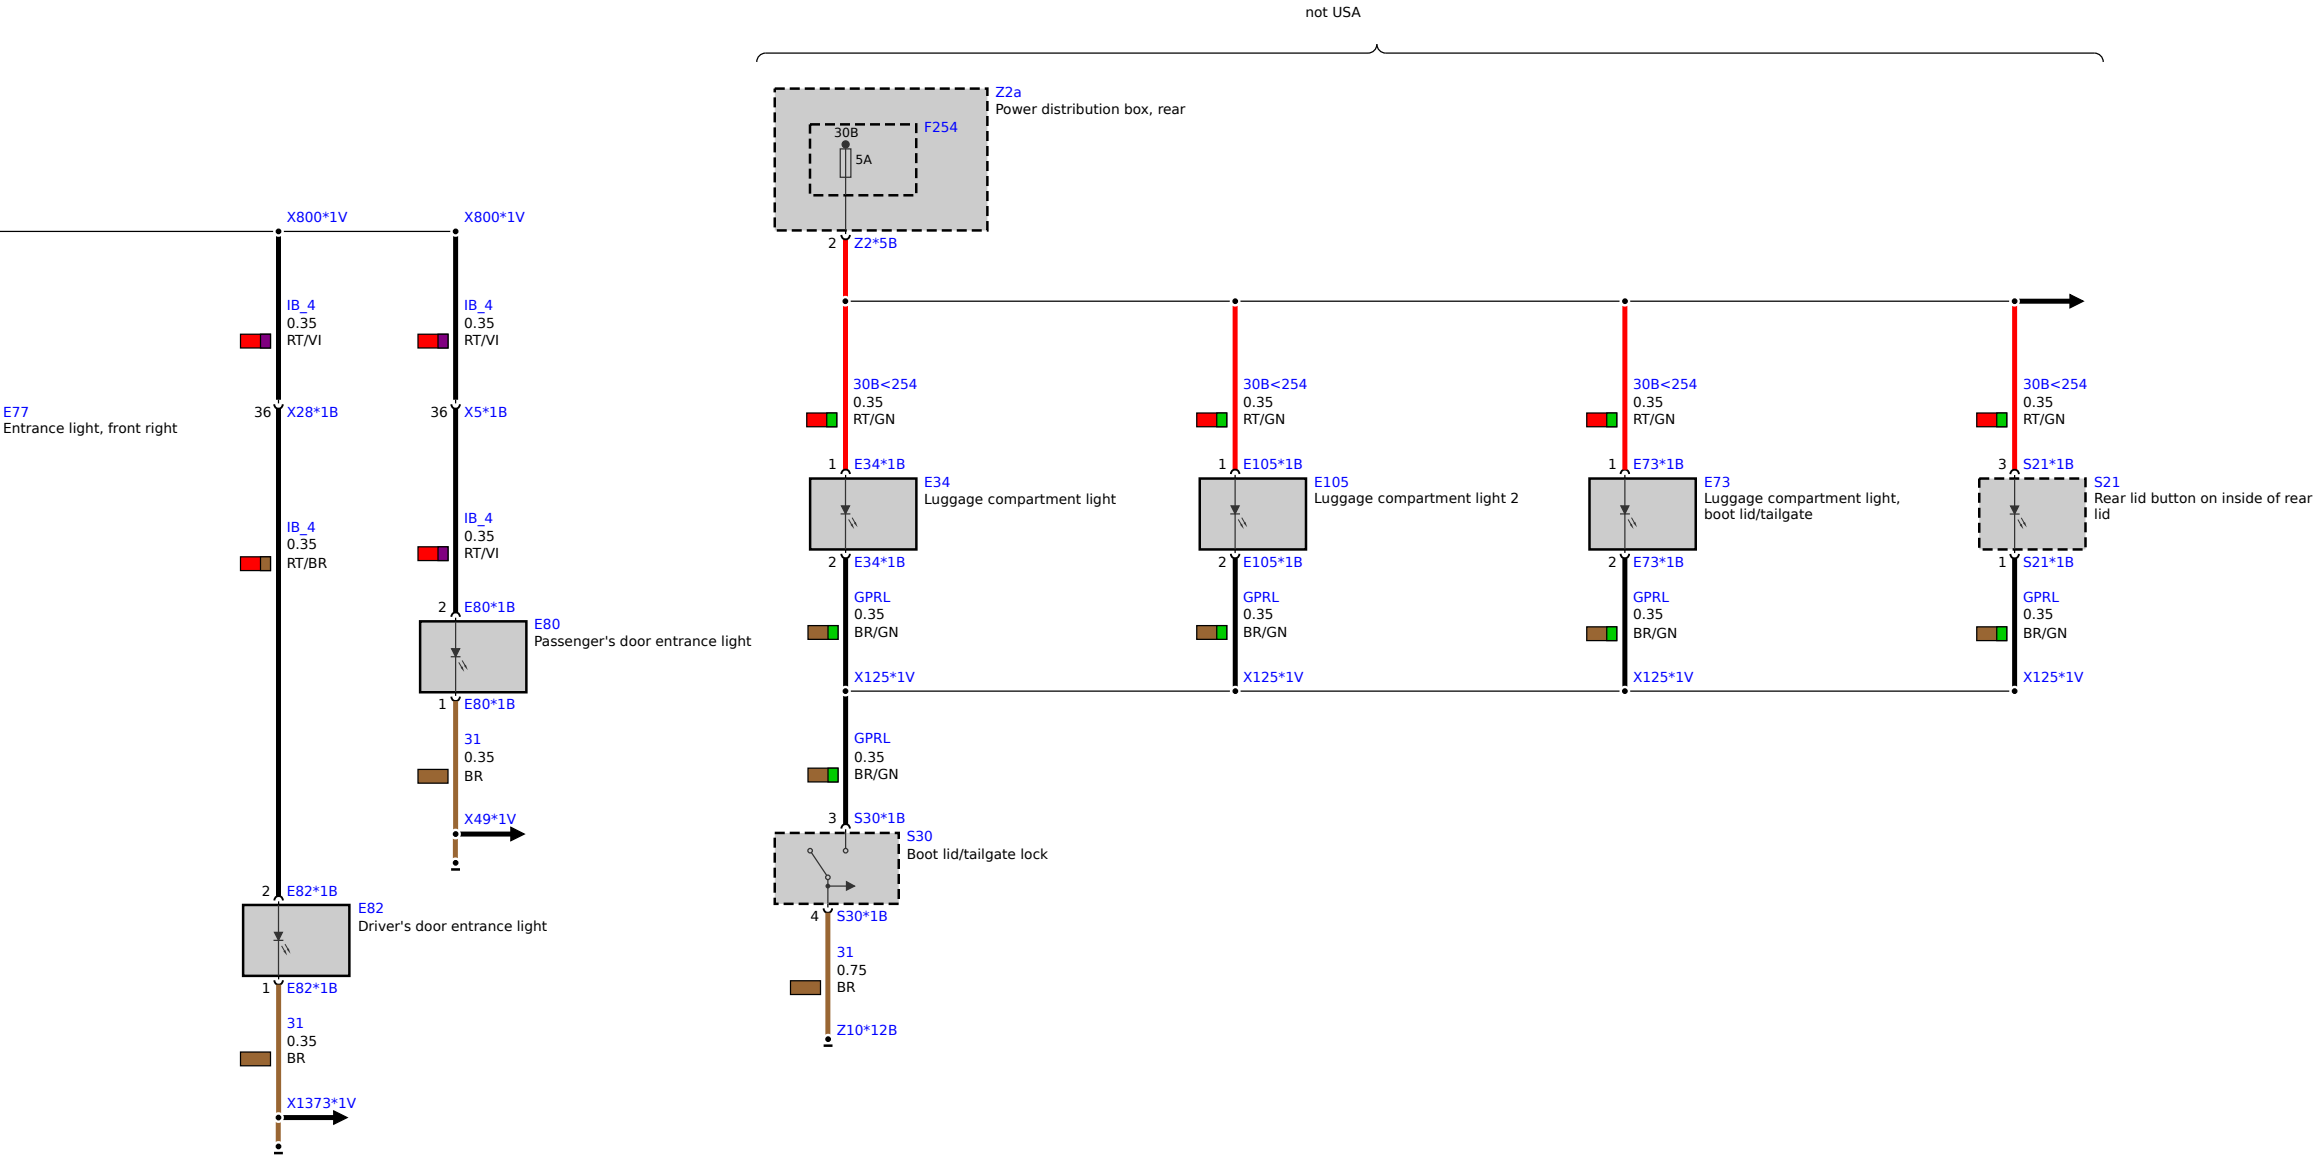
not USA
Z2a
Power distribution box, rear
F254
30B
5A
2 Z2*5B
X800*1V
X800*1V
IB_4
0.35
RT/VI
IB_4
0.35
RT/VI
30B<254
0.35
RT/GN
30B<254
0.35
RT/GN
30B<254
0.35
RT/GN
30B<254
0.35
RT/GN
E77
Entrance light, front right
36 X28*1B
36 X5*1B
1 E34*1B
E34
Luggage compartment light
1 E105*1B
E105
Luggage compartment light 2
1 E73*1B
E73
Luggage compartment light, boot lid/tailgate
3 S21*1B
S21
Rear lid button on inside of rear lid
IB_4
0.35
RT/BR
IB_4
0.35
RT/VI
2 E34*1B
2 E105*1B
2 E73*1B
1 S21*1B
GPRL
0.35
BR/GN
GPRL
0.35
BR/GN
GPRL
0.35
BR/GN
GPRL
0.35
BR/GN
2 E80*1B
E80
Passenger's door entrance light
X125*1V
X125*1V
X125*1V
X125*1V
1 E80*1B
31
0.35
BR
GPRL
0.35
BR/GN
X49*1V
3 S30*1B
S30
Boot lid/tailgate lock
2 E82*1B
E82
Driver's door entrance light
4 S30*1B
31
0.75
BR
1 E82*1B
Z10*12B
31
0.35
BR
X1373*1V

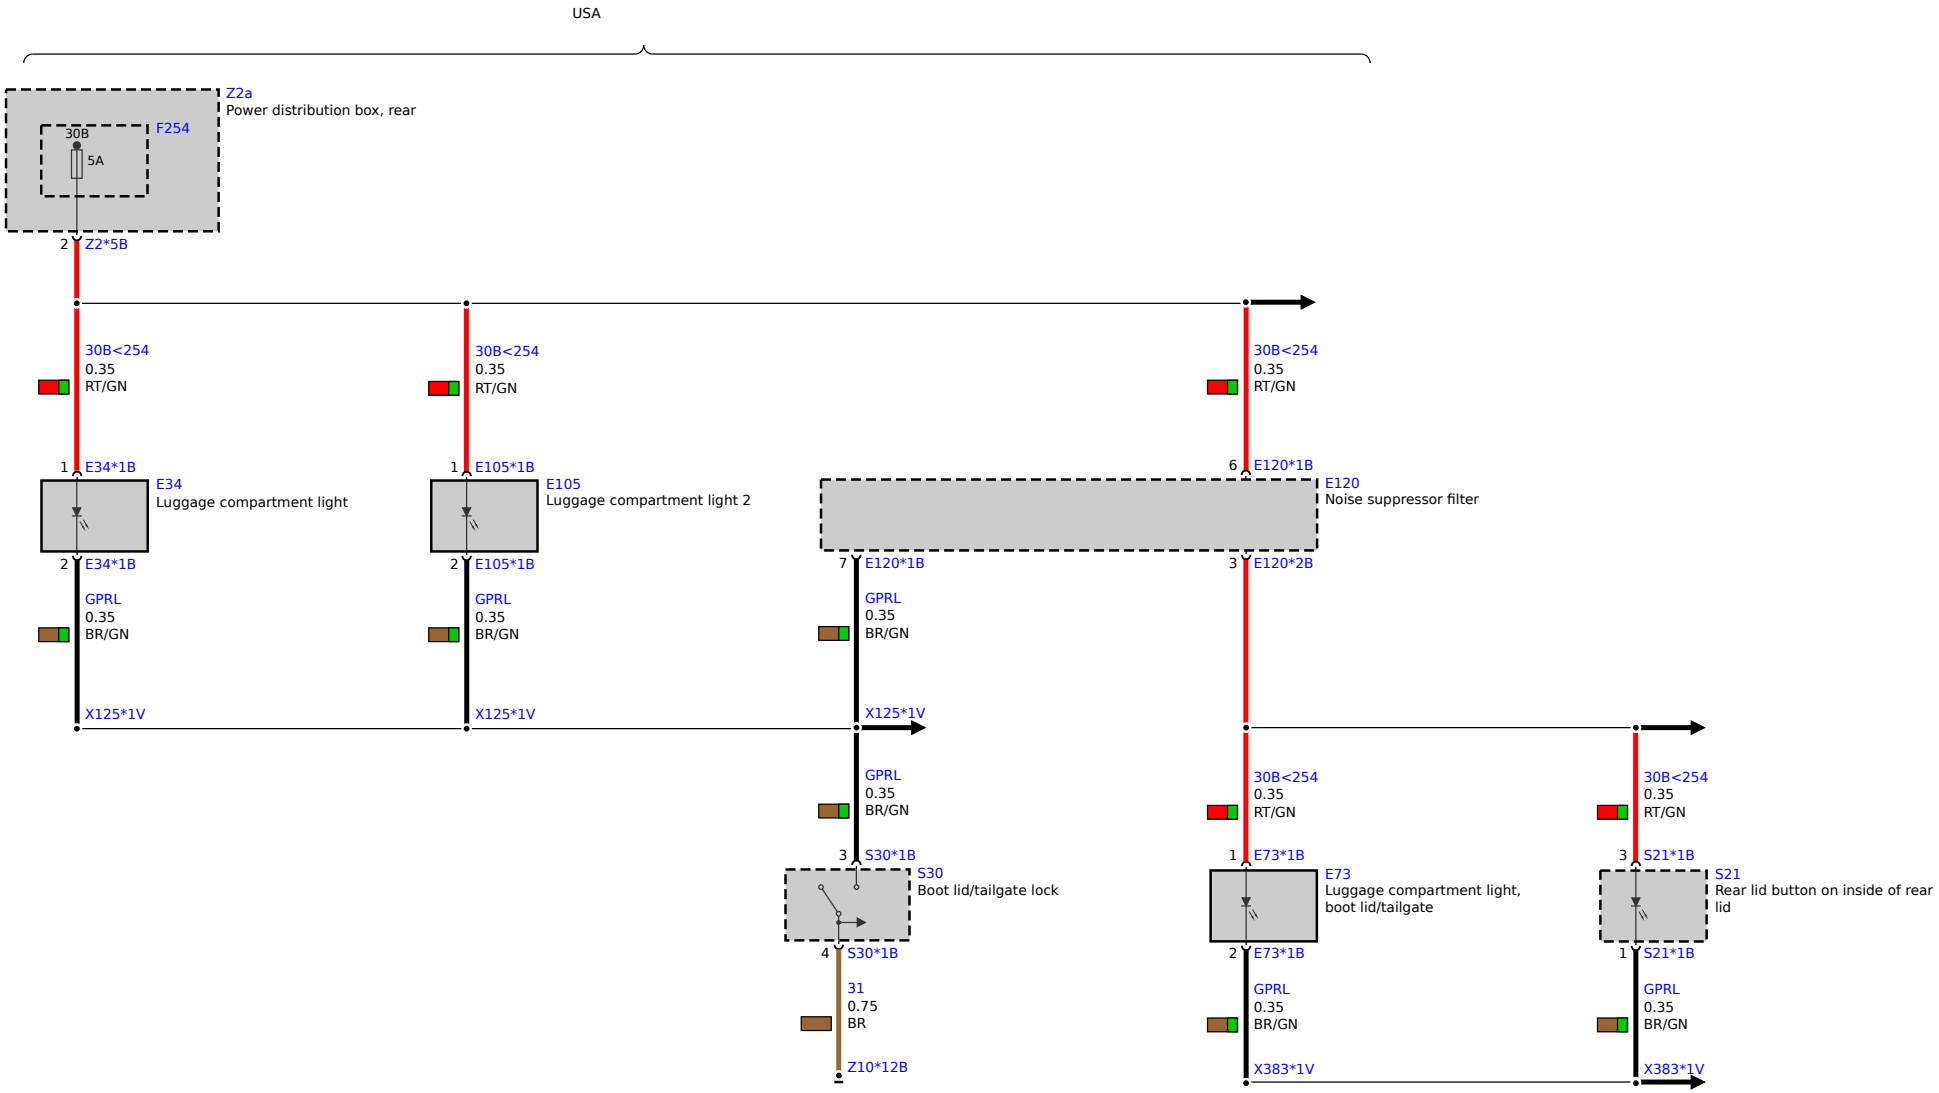
USA
Z2a
Power distribution box, rear
F254
30B
5A
2 Z2*5B
30B<254
0.35
RT/GN
1 E34*1B
E34
Luggage compartment light
2 E34*1B
GPRL
0.35
BR/GN
X125*1V
1 E105*1B
E105
Luggage compartment light 2
2 E105*1B
6 E120*1B
E120
Noise suppressor filter
7 E120*1B
3 E120*2B
3 S30*1B
S30
Boot lid/tailgate lock
4 S30*1B
31
0.75
BR
Z10*12B
1 E73*1B
E73
Luggage compartment light, boot lid/tailgate
2 E73*1B
X383*1V
3 S21*1B
S21
Rear lid button on inside of rear lid
1 S21*1B