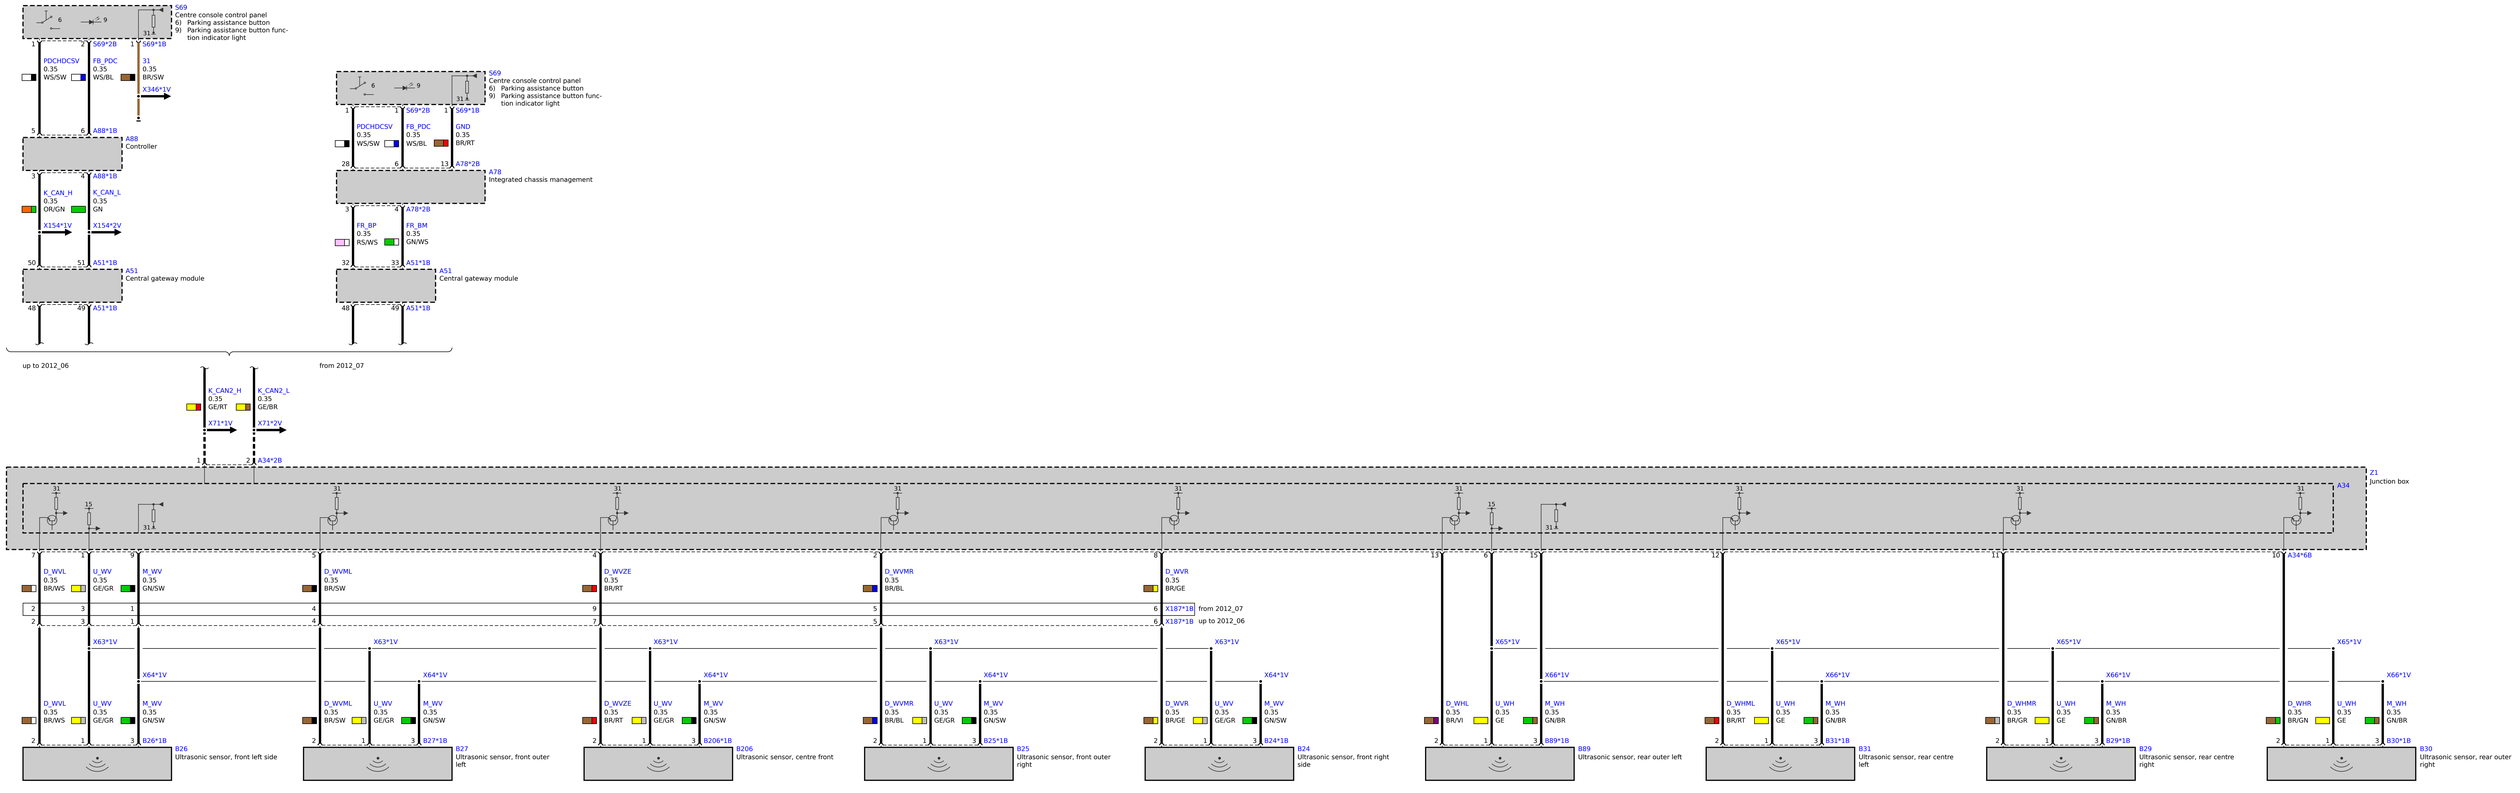
S69
Centre console control panel
6) Parking assistance button
9) Parking assistance button function indicator light
PDCHDCSV 0.35 WS/SW
FB_PDC 0.35 WS/BL
31 0.35 BR/SW
X346*1V
A88
Controller
K_CAN_H 0.35 OR/GN
K_CAN_L 0.35 GN
X154*1V
X154*2V
A51
Central gateway module
GND 0.35 BR/RT
A78
Integrated chassis management
FR_BP 0.35 RS/WS
FR_BM 0.35 GN/WS
up to 2012_06
from 2012_07
K_CAN2_H 0.35 GE/RT
K_CAN2_L 0.35 GE/BR
X71*1V
X71*2V
A34*2B
Z1
Junction box
A34
D_WVL 0.35 BR/WS
U_WV 0.35 GE/GR
M_WV 0.35 GN/SW
D_WVML 0.35 BR/SW
D_WVZE 0.35 BR/RT
D_WVMR 0.35 BR/BL
D_WVR 0.35 BR/GE
X187*1B from 2012_07
X187*1B up to 2012_06
X63*1V
X64*1V
B26*1B
B26
Ultrasonic sensor, front left side
B27*1B
B27
Ultrasonic sensor, front outer left
B206*1B
B206
Ultrasonic sensor, centre front
B25*1B
B25
Ultrasonic sensor, front outer right
B24*1B
B24
Ultrasonic sensor, front right side
D_WHL 0.35 BR/VI
U_WH 0.35 GE
M_WH 0.35 GN/BR
X65*1V
X66*1V
B89*1B
B89
Ultrasonic sensor, rear outer left
D_WHML 0.35 BR/RT
B31*1B
B31
Ultrasonic sensor, rear centre left
D_WHMR 0.35 BR/GR
B29*1B
B29
Ultrasonic sensor, rear centre right
D_WHR 0.35 BR/GN
A34*6B
B30*1B
B30
Ultrasonic sensor, rear outer right