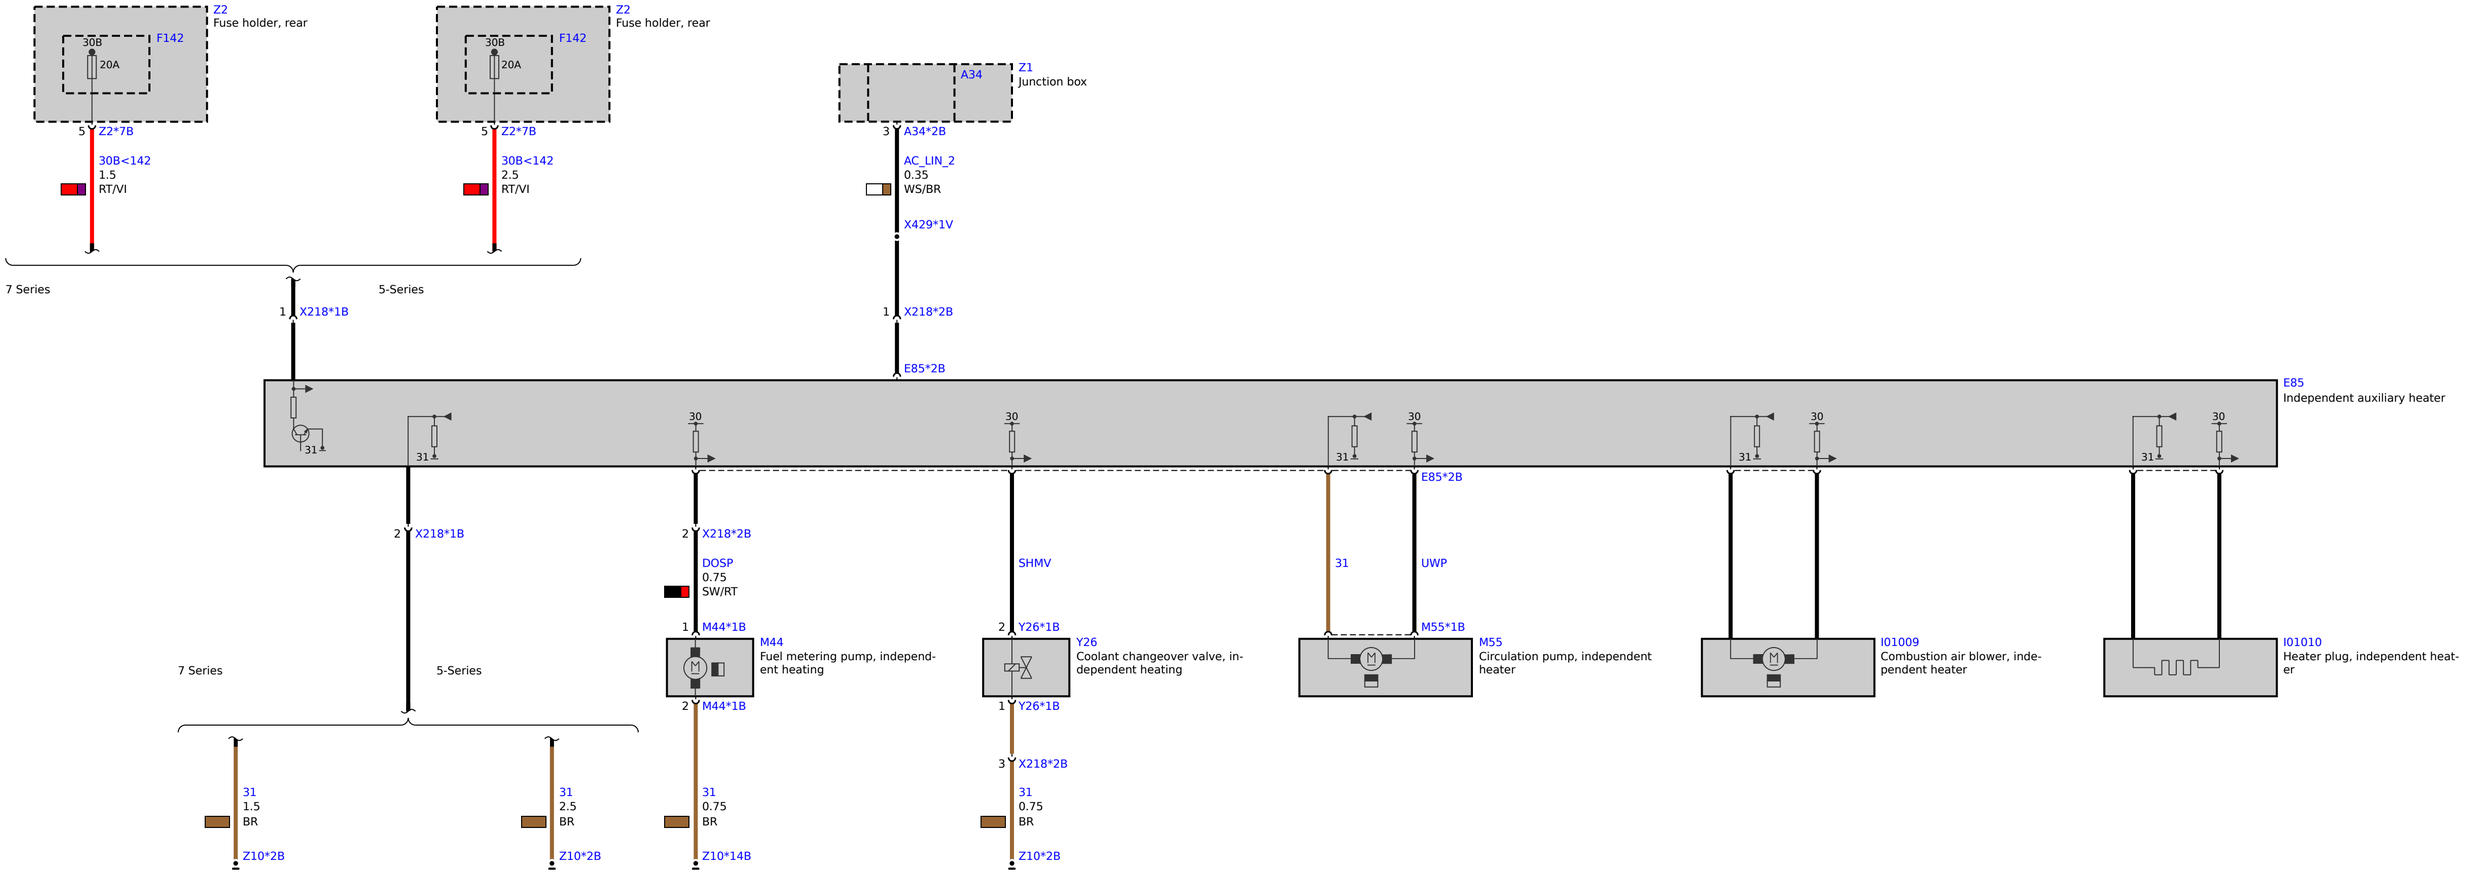
Z2
Fuse holder, rear
F142
30B
20A
5
Z2*7B
30B<142
1.5
RT/VI
Z2
Fuse holder, rear
F142
30B
20A
5
Z2*7B
30B<142
2.5
RT/VI
Z1
Junction box
A34
3
A34*2B
AC_LIN_2
0.35
WS/BR
X429*1V
7 Series
5-Series
1
X218*1B
1
X218*2B
E85*2B
E85
Independent auxiliary heater
31
30
2
X218*1B
2
X218*2B
DOSP
0.75
SW/RT
SHMV
31
UWP
E85*2B
1
M44*1B
M44
Fuel metering pump, independent heating
2
Y26*1B
Y26
Coolant changeover valve, independent heating
M55*1B
M55
Circulation pump, independent heater
I01009
Combustion air blower, independent heater
I01010
Heater plug, independent heater
7 Series
5-Series
31
1.5
BR
Z10*2B
31
2.5
BR
Z10*2B
2
M44*1B
31
0.75
BR
Z10*14B
1
Y26*1B
3
X218*2B
31
0.75
BR
Z10*2B