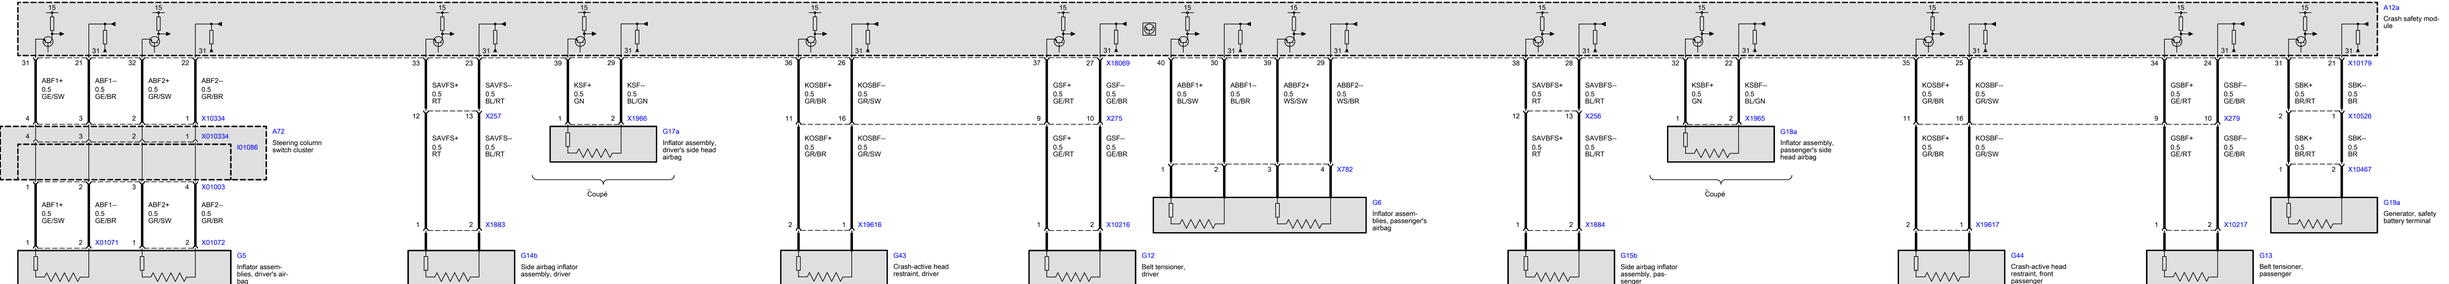
15
31
ABF1+
0.5
GE/SW
ABF1--
0.5
GE/BR
ABF2+
0.5
GR/SW
ABF2--
0.5
GR/BR
A72
Steering column switch cluster
X10334
X10086
X10003
X10071
X10072
G5
Inflator assembies, driver's airbag
SAVFS+
0.5
RT
SAVFS--
0.5
BL/RT
X257
X1883
G14b
Side airbag inflator assembly, driver
KSF+
0.5
GN
KSF--
0.5
BL/GN
X1966
G17a
Inflator assembly, driver's side head airbag
Coupé
KOSBF+
0.5
GR/BR
KOSBF--
0.5
GR/SW
X19616
G43
Crash-active head restraint, driver
GSF+
0.5
GE/RT
GSF--
0.5
GE/BR
X18069
X275
X10216
G12
Belt tensioner, driver
ABBF1+
0.5
BL/SW
ABBF1--
0.5
BL/BR
ABBF2+
0.5
WS/SW
ABBF2--
0.5
WS/BR
X782
G6
Inflator assembies, passenger's airbag
SAVBFS+
0.5
RT
SAVBFS--
0.5
BL/RT
X256
X1884
G15b
Side airbag inflator assembly, passenger
KSBF+
0.5
GN
KSBF--
0.5
BL/GN
X1965
G18a
Inflator assembly, passenger's side head airbag
Coupé
KOSBF+
0.5
GR/BR
KOSBF--
0.5
GR/SW
X19617
G44
Crash-active head restraint, front passenger
GSBF+
0.5
GE/RT
GSBF--
0.5
GE/BR
X279
X10217
G13
Belt tensioner, passenger
SBK+
0.5
BR/RT
SBK--
0.5
BR
X10179
X10526
X10467
G19a
Generator, safety battery terminal
A12a
Crash safety module