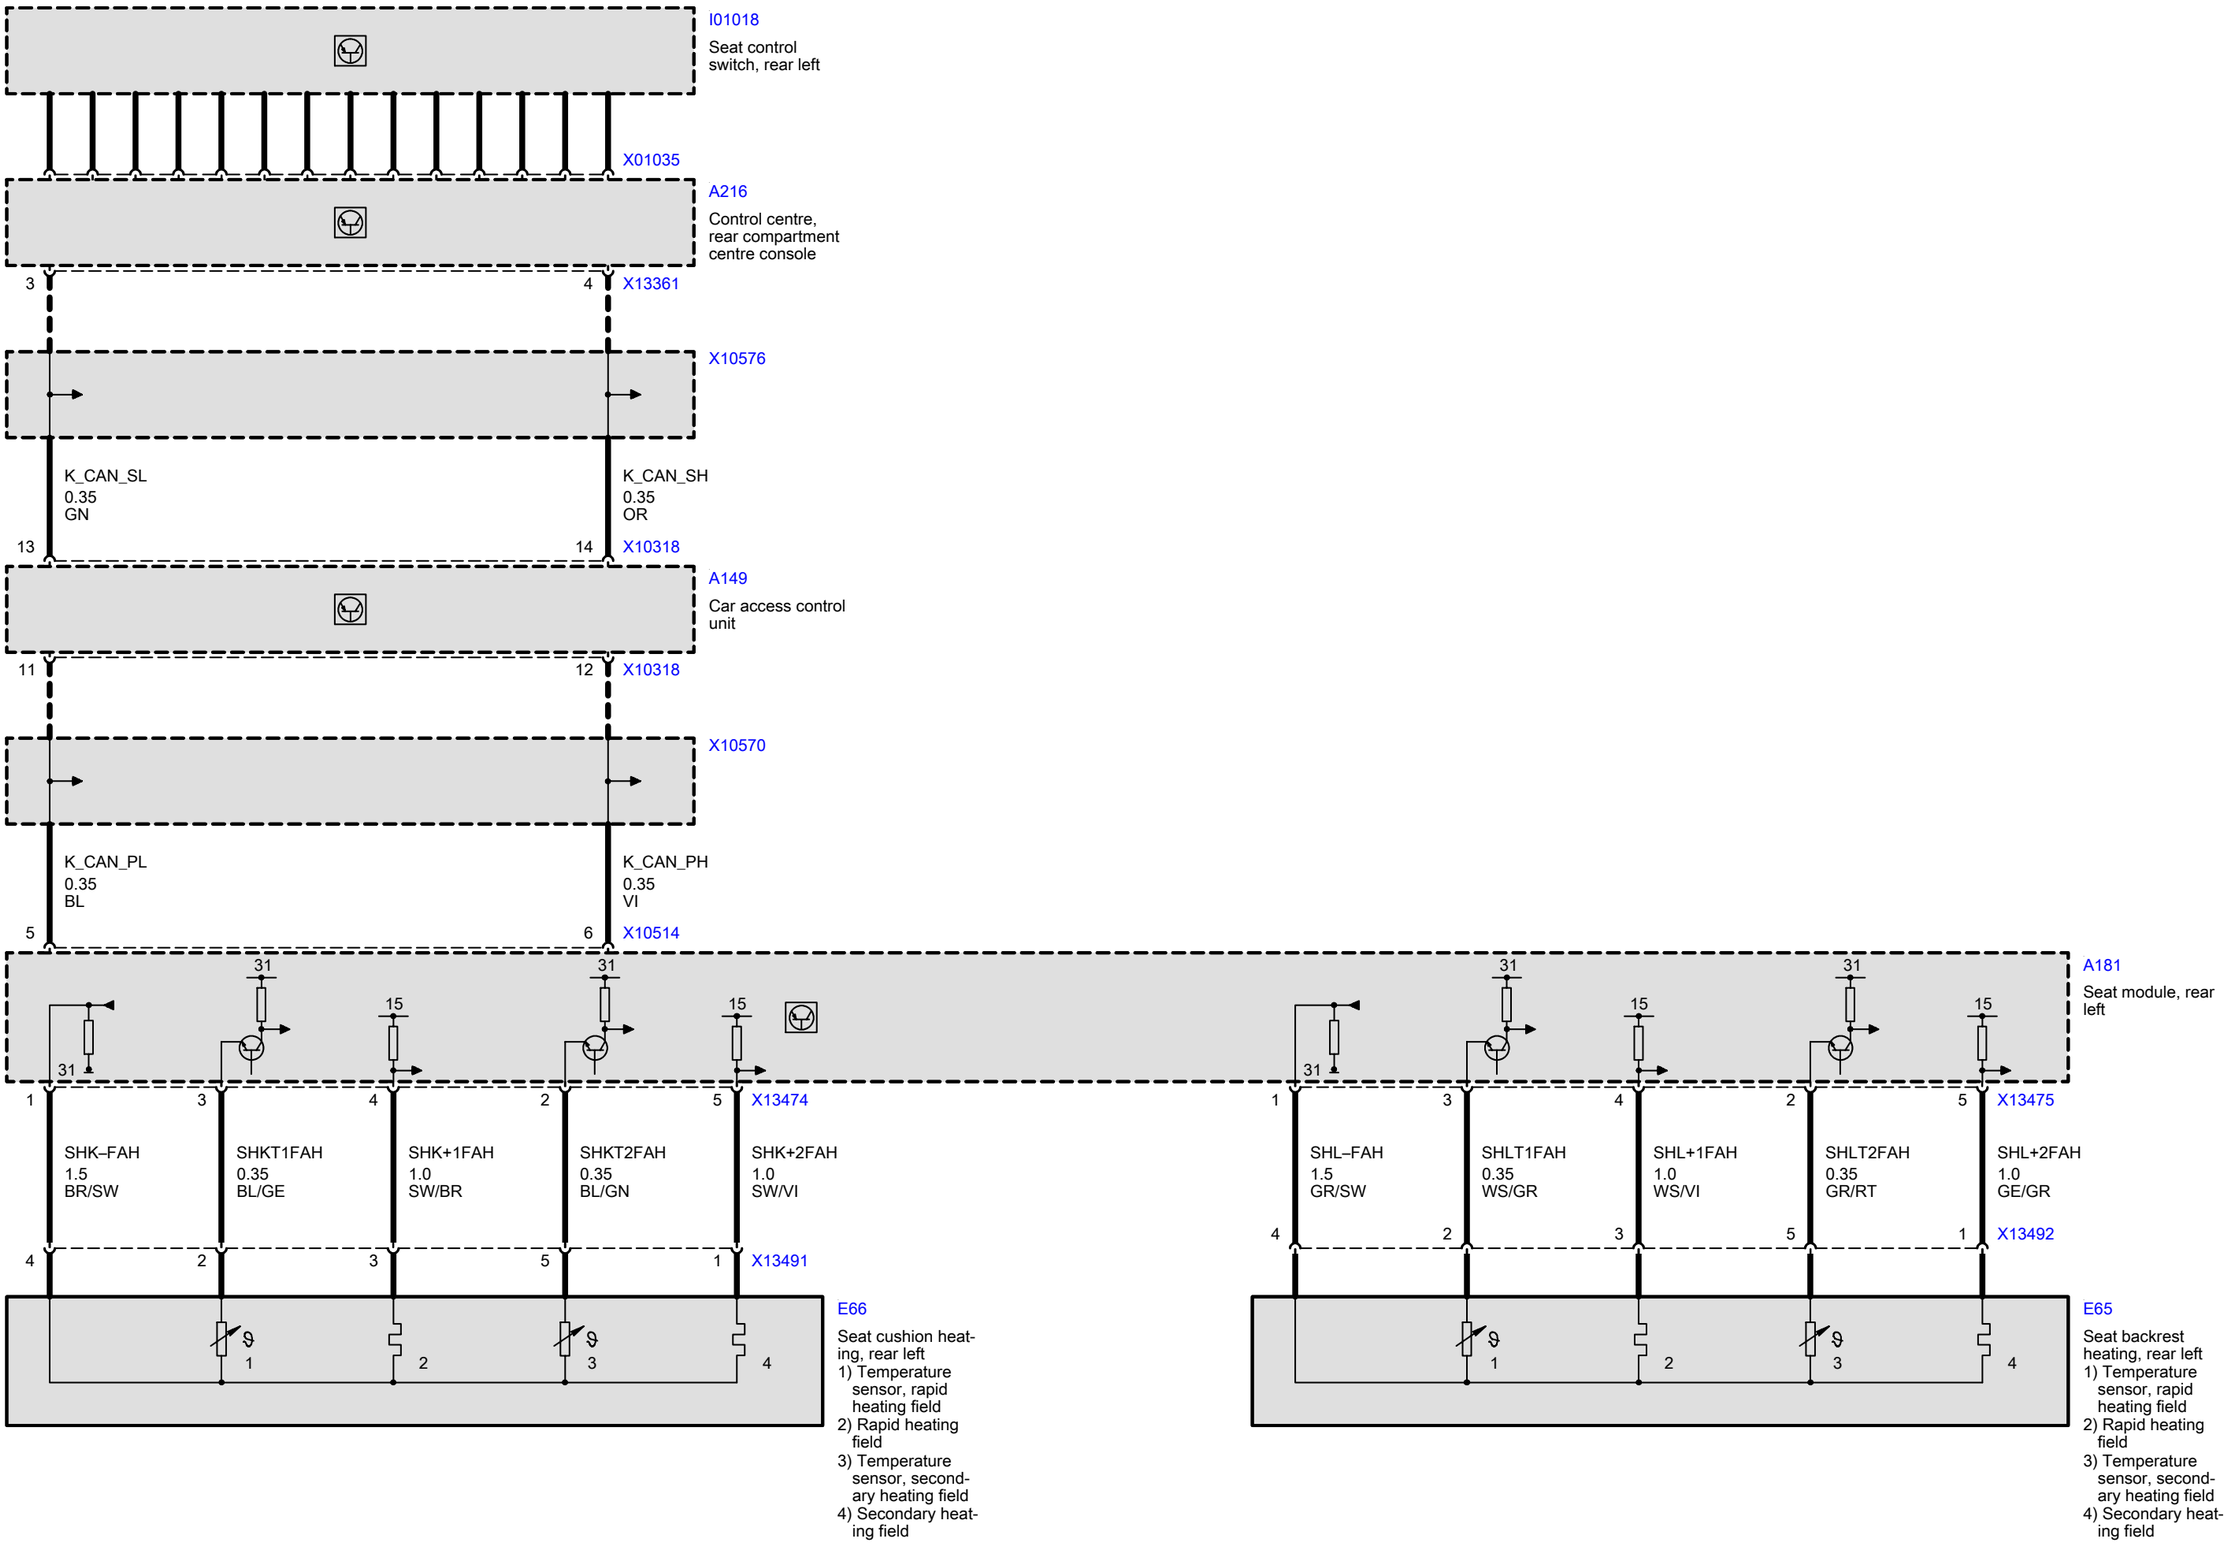
I01018
Seat control switch, rear left
X01035
A216
Control centre, rear compartment centre console
3
4
X13361
X10576
K_CAN_SL
0.35
GN
K_CAN_SH
0.35
OR
13
14
X10318
A149
Car access control unit
11
12
X10318
X10570
K_CAN_PL
0.35
BL
K_CAN_PH
0.35
VI
5
6
X10514
A181
Seat module, rear left
31
15
1
3
4
2
5
X13474
SHK–FAH
1.5
BR/SW
SHKT1FAH
0.35
BL/GE
SHK+1FAH
1.0
SW/BR
SHKT2FAH
0.35
BL/GN
SHK+2FAH
1.0
SW/VI
X13491
E66
Seat cushion heating, rear left
1) Temperature sensor, rapid heating field
2) Rapid heating field
3) Temperature sensor, secondary heating field
4) Secondary heating field
X13475
SHL–FAH
1.5
GR/SW
SHLT1FAH
0.35
WS/GR
SHL+1FAH
1.0
WS/VI
SHLT2FAH
0.35
GR/RT
SHL+2FAH
1.0
GE/GR
X13492
E65
Seat backrest heating, rear left
1) Temperature sensor, rapid heating field
2) Rapid heating field
3) Temperature sensor, secondary heating field
4) Secondary heating field