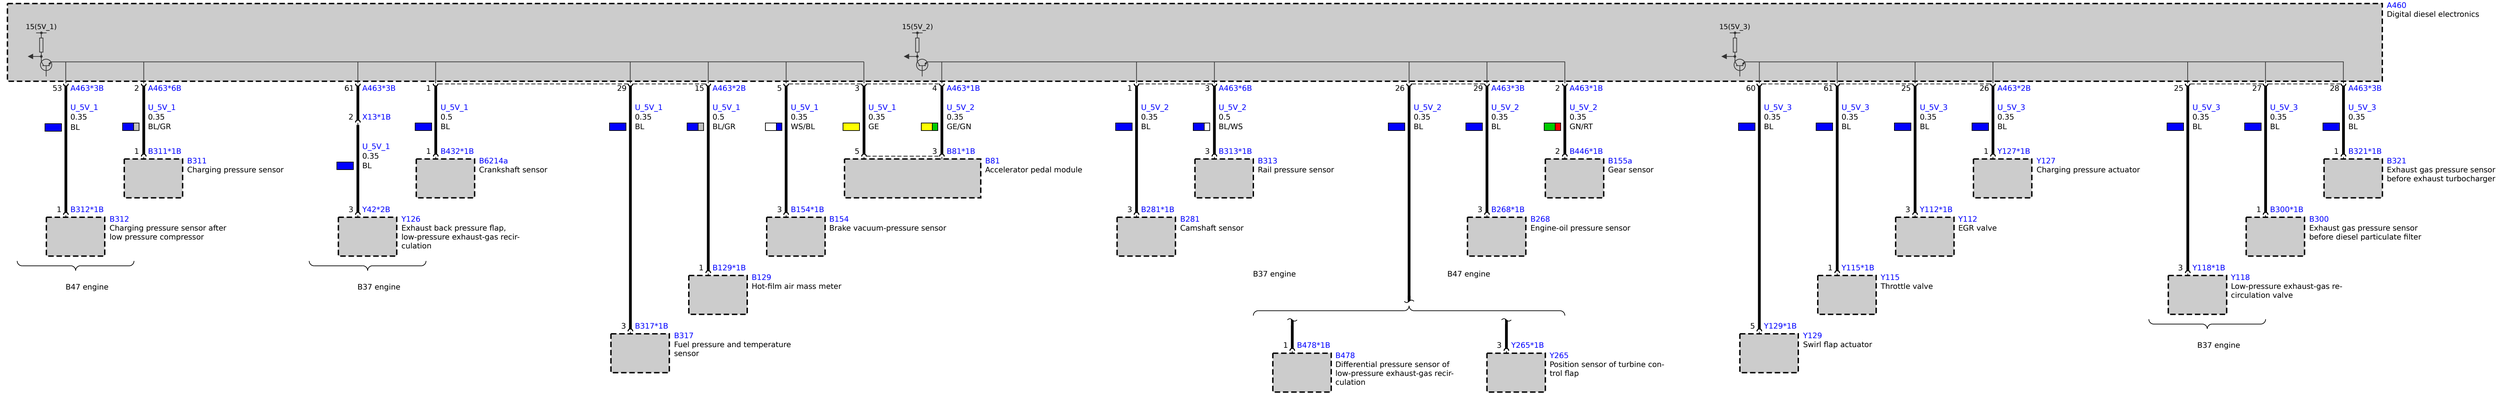
A460
Digital diesel electronics
15(5V_1)
15(5V_2)
15(5V_3)
53 A463*3B
U_5V_1
0.35
BL
1 B312*1B
B312
Charging pressure sensor after low pressure compressor
B47 engine
2 A463*6B
U_5V_1
0.35
BL/GR
1 B311*1B
B311
Charging pressure sensor
61 A463*3B
2 X13*1B
U_5V_1
0.35
BL
3 Y42*2B
Y126
Exhaust back pressure flap, low-pressure exhaust-gas recirculation
B37 engine
1 U_5V_1
0.5
BL
1 B432*1B
B6214a
Crankshaft sensor
29 U_5V_1
0.35
BL
3 B317*1B
B317
Fuel pressure and temperature sensor
15 A463*2B
U_5V_1
0.5
BL/GR
1 B129*1B
B129
Hot-film air mass meter
5 U_5V_1
0.35
WS/BL
3 B154*1B
B154
Brake vacuum-pressure sensor
3 U_5V_1
0.35
GE
4 A463*1B
U_5V_2
0.35
GE/GN
5 3 B81*1B
B81
Accelerator pedal module
1 U_5V_2
0.35
BL
3 B281*1B
B281
Camshaft sensor
3 A463*6B
U_5V_2
0.5
BL/WS
3 B313*1B
B313
Rail pressure sensor
26 U_5V_2
0.35
BL
B37 engine
B47 engine
1 B478*1B
B478
Differential pressure sensor of low-pressure exhaust-gas recirculation
3 Y265*1B
Y265
Position sensor of turbine control flap
29 A463*3B
U_5V_2
0.35
BL
3 B268*1B
B268
Engine-oil pressure sensor
2 A463*1B
U_5V_2
0.35
GN/RT
2 B446*1B
B155a
Gear sensor
60 U_5V_3
0.35
BL
5 Y129*1B
Y129
Swirl flap actuator
61 U_5V_3
0.35
BL
1 Y115*1B
Y115
Throttle valve
25 U_5V_3
0.35
BL
3 Y112*1B
Y112
EGR valve
26 A463*2B
U_5V_3
0.35
BL
1 Y127*1B
Y127
Charging pressure actuator
25 U_5V_3
0.35
BL
3 Y118*1B
Y118
Low-pressure exhaust-gas recirculation valve
B37 engine
27 U_5V_3
0.35
BL
1 B300*1B
B300
Exhaust gas pressure sensor before diesel particulate filter
28 A463*3B
U_5V_3
0.35
BL
1 B321*1B
B321
Exhaust gas pressure sensor before exhaust turbocharger