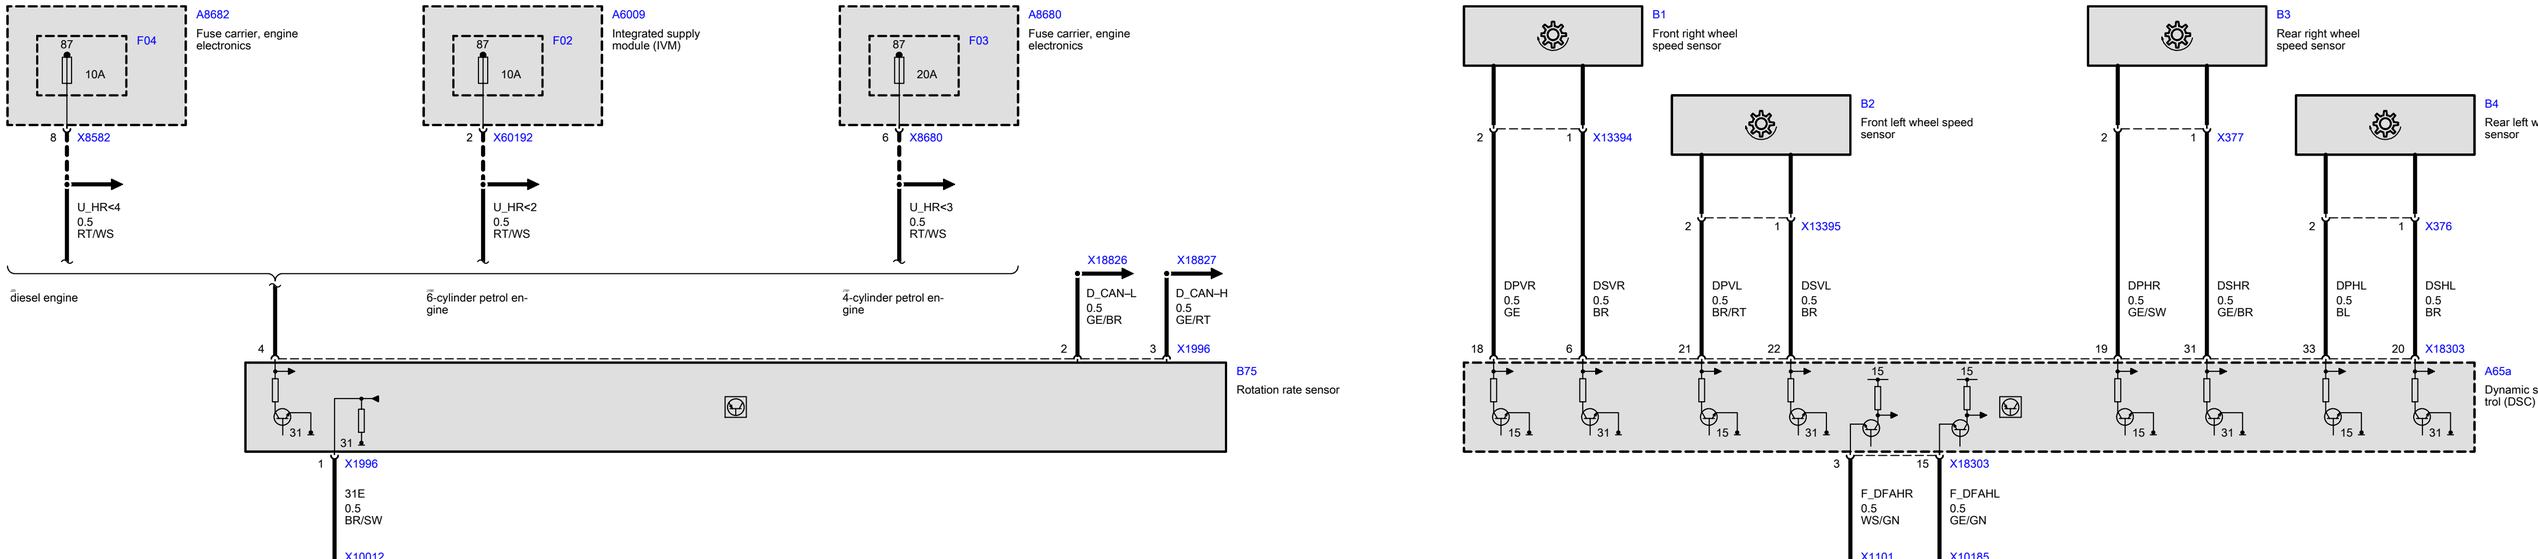
A8682
Fuse carrier, engine electronics
F04
87
10A
8
X8582
U_HR<4
0.5
RT/WS
A6009
Integrated supply module (IVM)
F02
87
10A
2
X60192
U_HR<2
0.5
RT/WS
A8680
Fuse carrier, engine electronics
F03
87
20A
6
X8680
U_HR<3
0.5
RT/WS
diesel engine
6-cylinder petrol engine
4-cylinder petrol engine
X18826
D_CAN–L
0.5
GE/BR
X18827
D_CAN–H
0.5
GE/RT
4
2
3
X1996
B75
Rotation rate sensor
31
31
1
X1996
31E
0.5
BR/SW
X10012
B1
Front right wheel speed sensor
B2
Front left wheel speed sensor
B3
Rear right wheel speed sensor
B4
Rear left w
sensor
2
1
X13394
2
1
X13395
2
1
X377
2
1
X376
DPVR
0.5
GE
DSVR
0.5
BR
DPVL
0.5
BR/RT
DSVL
0.5
BR
DPHR
0.5
GE/SW
DSHR
0.5
GE/BR
DPHL
0.5
BL
DSHL
0.5
BR
18
6
21
22
19
31
33
20
X18303
A65a
Dynamic s
trol (DSC)
15
15
15
31
15
31
15
31
15
31
15
31
3
15
X18303
F_DFAHR
0.5
WS/GN
F_DFAHL
0.5
GE/GN
X1101
X10185