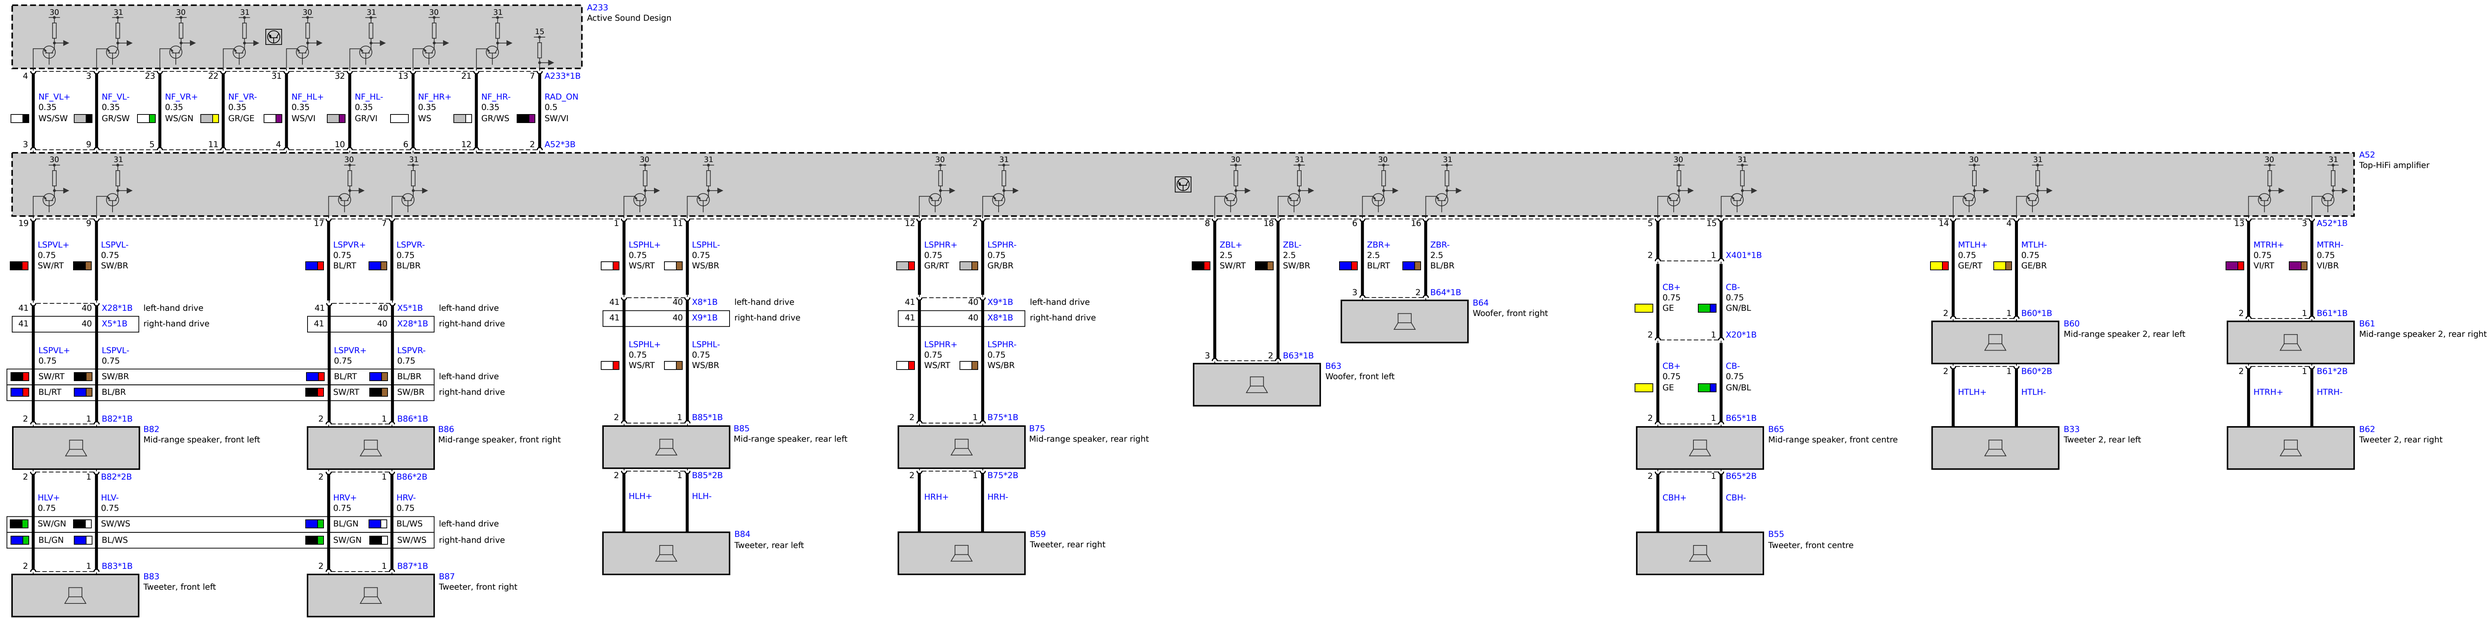
A233
Active Sound Design
A233*1B
NF_VL+ 0.35 WS/SW
NF_VL- 0.35 GR/SW
NF_VR+ 0.35 WS/GN
NF_VR- 0.35 GR/GE
NF_HL+ 0.35 WS/VI
NF_HL- 0.35 GR/VI
NF_HR+ 0.35 WS
NF_HR- 0.35 GR/WS
RAD_ON 0.5 SW/VI
A52*3B
A52
Top-HiFi amplifier
LSPVL+ 0.75 SW/RT
LSPVL- 0.75 SW/BR
X28*1B left-hand drive
X5*1B right-hand drive
B82
Mid-range speaker, front left
B82*1B
B82*2B
HLV+ 0.75
HLV- 0.75
SW/GN SW/WS
BL/GN BL/WS
B83*1B
B83
Tweeter, front left
LSPVR+ 0.75 BL/RT
LSPVR- 0.75 BL/BR
X5*1B left-hand drive
X28*1B right-hand drive
B86
Mid-range speaker, front right
B86*1B
B86*2B
HRV+ 0.75
HRV- 0.75
BL/GN BL/WS
SW/GN SW/WS
B87*1B
B87
Tweeter, front left
LSPHL+ 0.75 WS/RT
LSPHL- 0.75 WS/BR
X8*1B left-hand drive
X9*1B right-hand drive
B85
Mid-range speaker, rear left
B85*1B
B85*2B
HLH+
HLH-
B84
Tweeter, rear left
LSPHR+ 0.75 GR/RT
LSPHR- 0.75 GR/BR
X9*1B left-hand drive
X8*1B right-hand drive
B75
Mid-range speaker, rear right
B75*1B
B75*2B
HRH+
HRH-
B59
Tweeter, rear right
ZBL+ 2.5 SW/RT
ZBL- 2.5 SW/BR
B63
Woofer, front left
B63*1B
ZBR+ 2.5 BL/RT
ZBR- 2.5 BL/BR
B64
Woofer, front right
B64*1B
X401*1B
CB+ 0.75 GE
CB- 0.75 GN/BL
X20*1B
B65
Mid-range speaker, front centre
B65*1B
B65*2B
CBH+
CBH-
B55
Tweeter, front centre
MTLH+ 0.75 GE/RT
MTLH- 0.75 GE/BR
B60
Mid-range speaker 2, rear left
B60*1B
B60*2B
HTLH+
HTLH-
B33
Tweeter 2, rear left
MTRH+ 0.75 VI/RT
MTRH- 0.75 VI/BR
A52*1B
B61
Mid-range speaker 2, rear right
B61*1B
B61*2B
HTRH+
HTRH-
B62
Tweeter 2, rear right