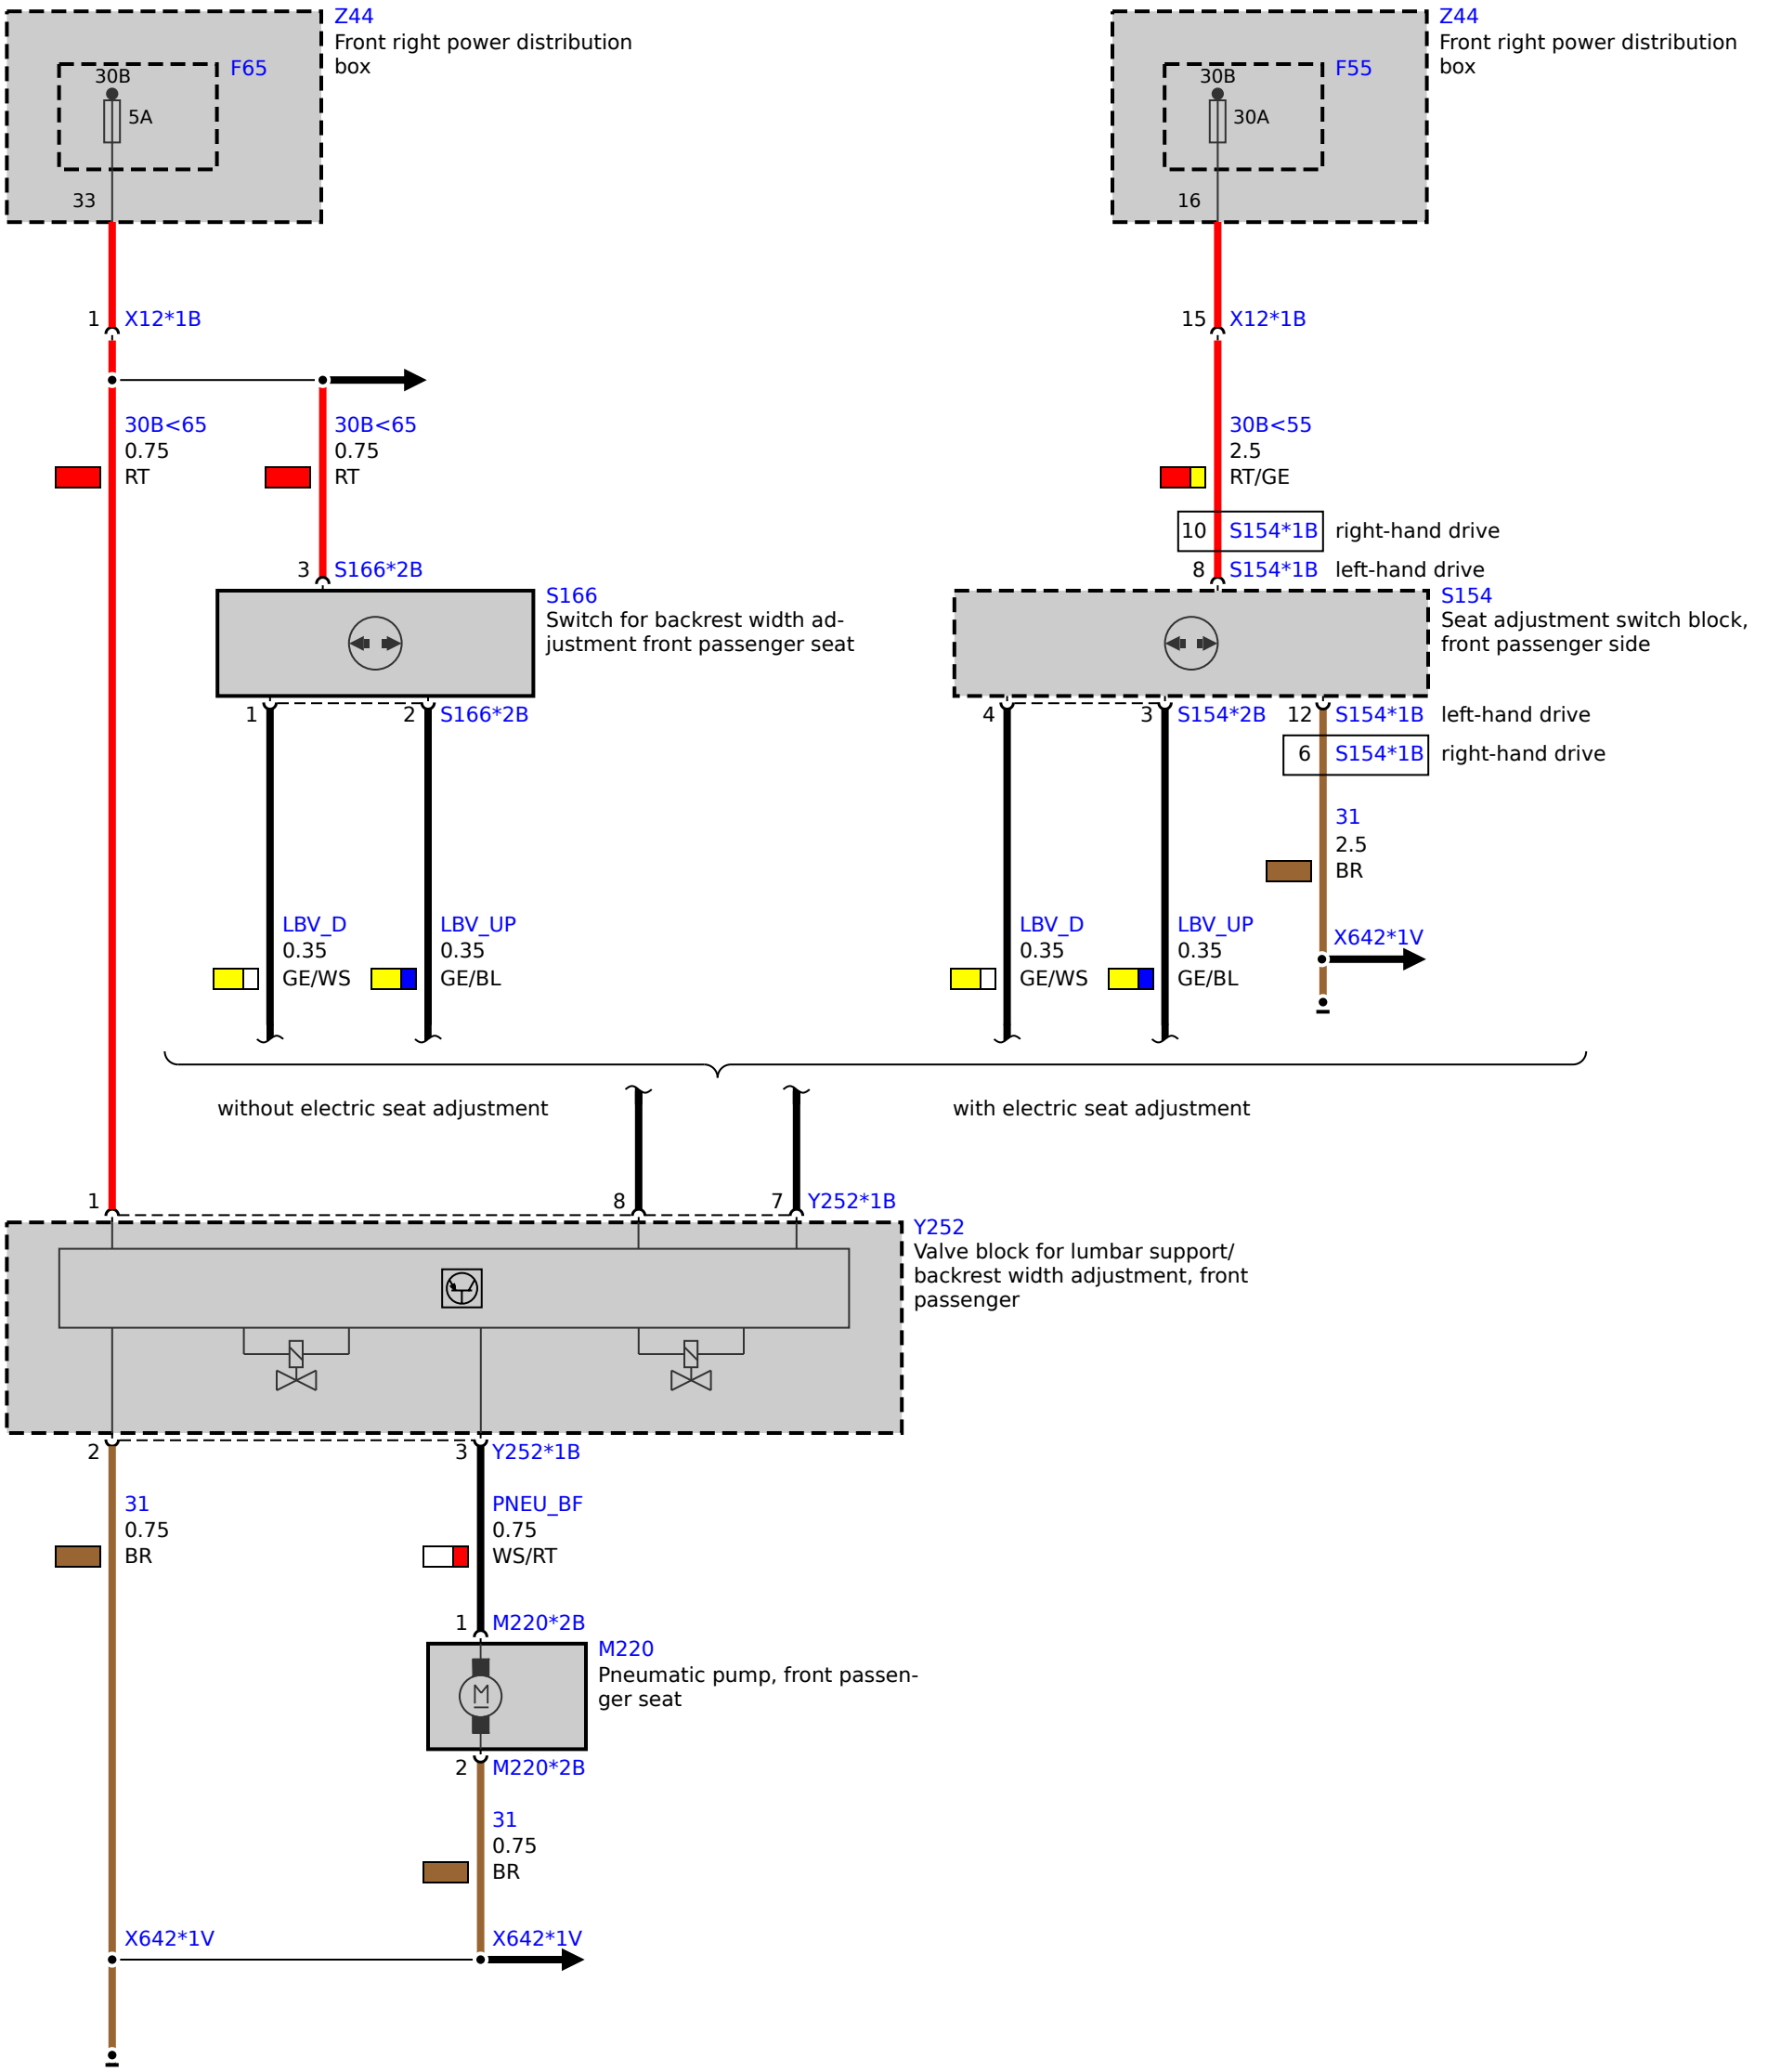
Z44
Front right power distribution box
F65
30B
5A
33
1
X12*1B
30B<65
0.75
RT
30B<65
0.75
RT
3
S166*2B
S166
Switch for backrest width adjustment front passenger seat
1
2
S166*2B
LBV_D
0.35
GE/WS
LBV_UP
0.35
GE/BL
Z44
Front right power distribution box
F55
30B
30A
16
15
X12*1B
30B<55
2.5
RT/GE
10
S154*1B
right-hand drive
8
S154*1B
left-hand drive
S154
Seat adjustment switch block, front passenger side
4
3
S154*2B
12
S154*1B
left-hand drive
6
S154*1B
right-hand drive
31
2.5
BR
X642*1V
LBV_D
0.35
GE/WS
LBV_UP
0.35
GE/BL
without electric seat adjustment
with electric seat adjustment
1
8
7
Y252*1B
Y252
Valve block for lumbar support/ backrest width adjustment, front passenger
2
3
Y252*1B
31
0.75
BR
PNEU_BF
0.75
WS/RT
1
M220*2B
M220
Pneumatic pump, front passenger seat
2
M220*2B
31
0.75
BR
X642*1V
X642*1V