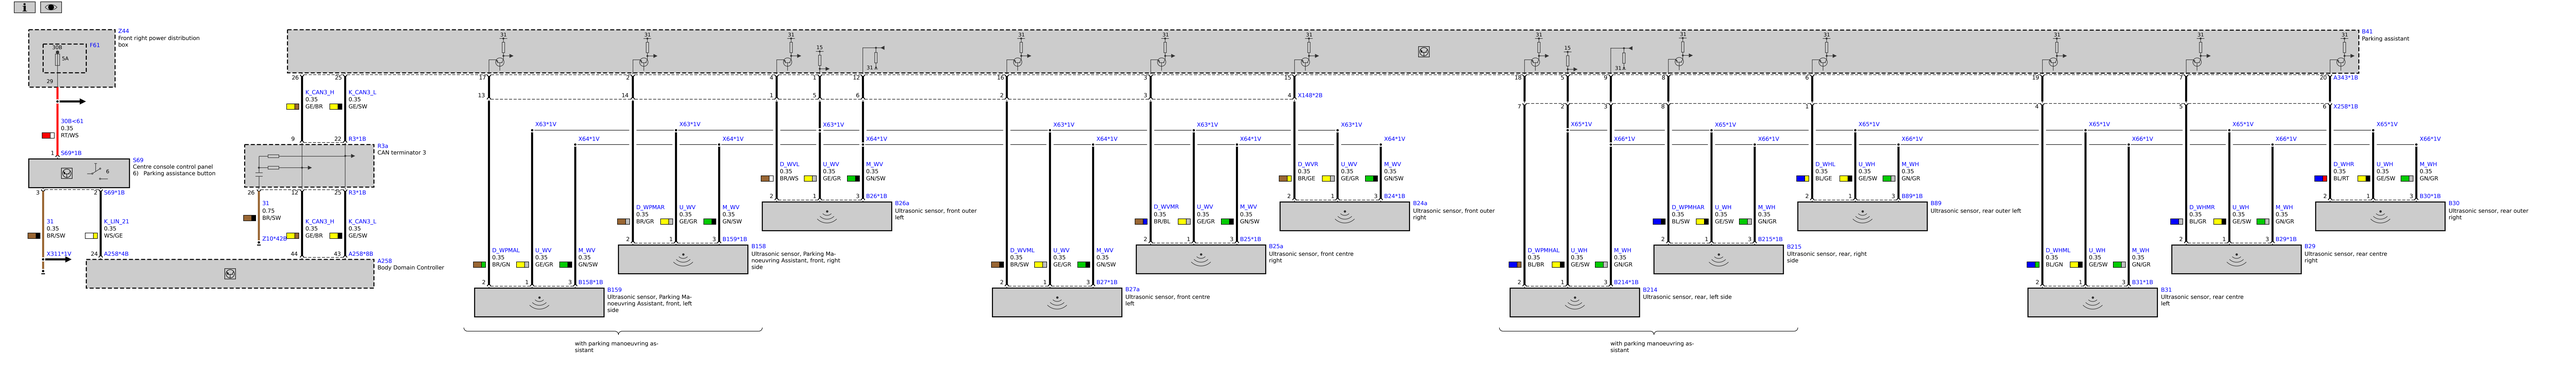
Z44
Front right power distribution box
F61
30
5A
308<61
0.35
RT/WS
S69*1B
S69
Centre console control panel
6) Parking assistance button
31
0.35
BR/SW
K_LIN_21
0.35
WS/GE
X311*1V
A258*4B
A258
Body Domain Controller
K_CAN3_H
0.35
GE/BR
K_CAN3_L
0.35
GE/SW
R3*1B
R3a
CAN terminator 3
31
0.75
BR/SW
Z10*42B
K_CAN3_H
0.35
GE/BR
K_CAN3_L
0.35
GE/SW
A258*9B
B41
Parking assistant
X63*1V
X64*1V
X65*1V
X66*1V
D_WPMAR
D_WPMAL
D_WPMHAR
D_WPMHAL
U_WV
M_WV
U_WH
M_WH
0.35
BR/GN
GE/GR
GN/SW
GE/SW
B158
Ultrasonic sensor, Parking Manoeuvring Assistant, front, right side
B159*1B
B159
Ultrasonic sensor, Parking Manoeuvring Assistant, front, left side
B158*1B
with parking manoeuvring assistant
D_WVML
D_WVMR
B27*1B
B27a
Ultrasonic sensor, front centre left
B27a*1B
B25
Ultrasonic sensor, front centre right
B25a*1B
X14B*2B
D_WVR
D_WVL
B24
Ultrasonic sensor, front outer right
B24a*1B
B24a
Ultrasonic sensor, front outer left
B26*1B
B26a
Ultrasonic sensor, front outer left
B26a*1B
B214
Ultrasonic sensor, rear, left side
B214*1B
B215
Ultrasonic sensor, rear, right side
B215*1B
B89
Ultrasonic sensor, rear outer left
B89*1B
D_WHL
D_WHR
B31
Ultrasonic sensor, rear centre left
B31*1B
B29
Ultrasonic sensor, rear centre right
B29*1B
B30
Ultrasonic sensor, rear outer right
B30*1B
X25B*1B
B43*1B