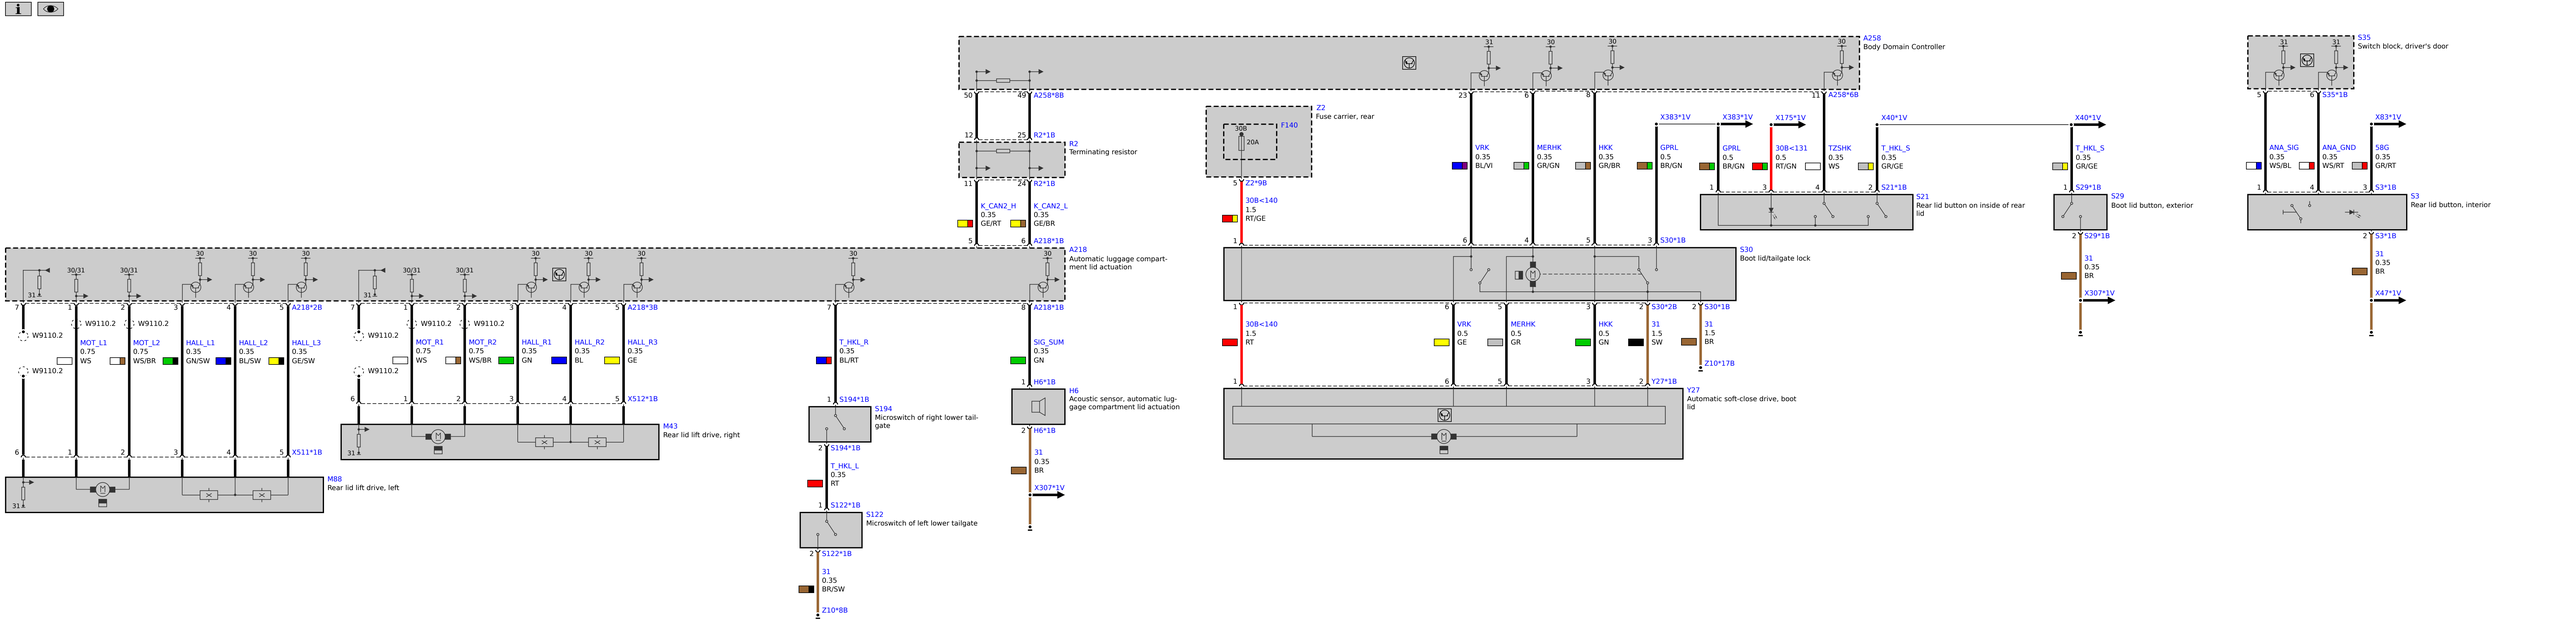
A258 Body Domain Controller
A258*8B
R2*1B
R2 Terminating resistor
K_CAN2_H 0.35 GE/RT
K_CAN2_L 0.35 GE/BR
A218*1B
A218 Automatic luggage compartment lid actuation
Z2 Fuse carrier, rear
F140 30B 20A
Z2*9B
30B<140 1.5 RT/GE
A258*6B
VRK 0.35 BL/VI
MERHK 0.35 GR/GN
HKK 0.35 GR/BR
GPRL 0.5 BR/GN
30B<131 0.5 RT/GN
TZSHK 0.35 WS
T_HKL_S 0.35 GR/GE
X383*1V
X175*1V
X40*1V
S21*1B
S21 Rear lid button on inside of rear lid
S30*1B
S30 Boot lid/tailgate lock
S29*1B
S29 Boot lid button, exterior
30B<140 1.5 RT
VRK 0.5 GE
MERHK 0.5 GR
HKK 0.5 GN
31 1.5 SW
31 1.5 BR
S30*2B
Z10*17B
Y27*1B
Y27 Automatic soft-close drive, boot lid
A218*2B
W9110.2
MOT_L1 0.75 WS
MOT_L2 0.75 WS/BR
HALL_L1 0.35 GN/SW
HALL_L2 0.35 BL/SW
HALL_L3 0.35 GE/SW
X511*1B
M88 Rear lid lift drive, left
A218*3B
MOT_R1 0.75 WS
MOT_R2 0.75 WS/BR
HALL_R1 0.35 GN
HALL_R2 0.35 BL
HALL_R3 0.35 GE
X512*1B
M43 Rear lid lift drive, right
T_HKL_R 0.35 BL/RT
S194*1B
S194 Microswitch of right lower tailgate
T_HKL_L 0.35 RT
S122*1B
S122 Microswitch of left lower tailgate
31 0.35 BR/SW
Z10*8B
SIG_SUM 0.35 GN
H6*1B
H6 Acoustic sensor, automatic luggage compartment lid actuation
X307*1V
S35 Switch block, driver's door
S35*1B
ANA_SIG 0.35 WS/BL
ANA_GND 0.35 WS/RT
58G 0.35 GR/RT
S3*1B
S3 Rear lid button, interior
X47*1V