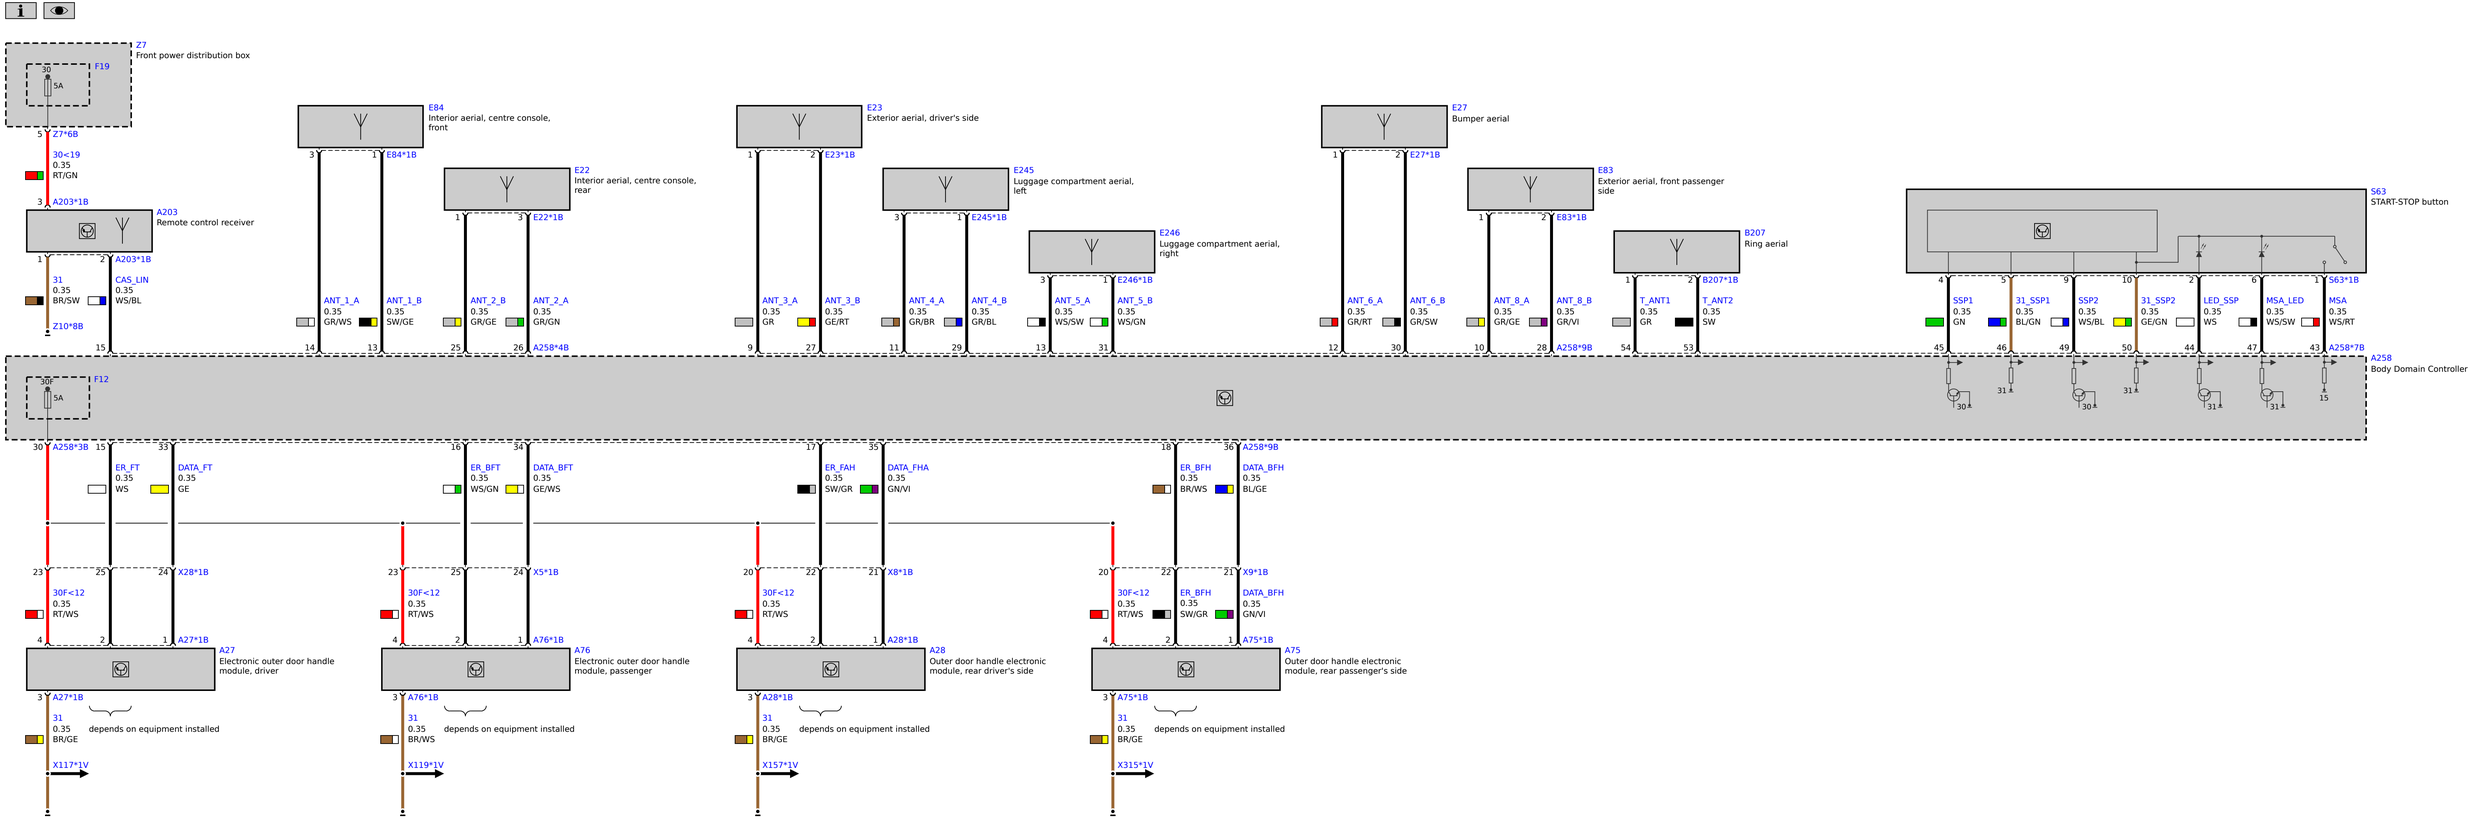
Z7
Front power distribution box
F19
30
5A
5
Z7*6B
30<19
0.35
RT/GN
3
A203*1B
A203
Remote control receiver
1
2
A203*1B
31
0.35
BR/SW
Z10*8B
CAS_LIN
0.35
WS/BL
15
E84
Interior aerial, centre console, front
3
1
E84*1B
ANT_1_A
0.35
GR/WS
ANT_1_B
0.35
SW/GE
14
13
E22
Interior aerial, centre console, rear
1
3
E22*1B
ANT_2_B
0.35
GR/GE
ANT_2_A
0.35
GR/GN
25
26
A258*4B
E23
Exterior aerial, driver's side
1
2
E23*1B
ANT_3_A
0.35
GR
ANT_3_B
0.35
GE/RT
9
27
E245
Luggage compartment aerial, left
3
1
E245*1B
ANT_4_A
0.35
GR/BR
ANT_4_B
0.35
GR/BL
11
29
E246
Luggage compartment aerial, right
3
1
E246*1B
ANT_5_A
0.35
WS/SW
ANT_5_B
0.35
WS/GN
13
31
E27
Bumper aerial
1
2
E27*1B
ANT_6_A
0.35
GR/RT
ANT_6_B
0.35
GR/SW
12
30
E83
Exterior aerial, front passenger side
1
2
E83*1B
ANT_8_A
0.35
GR/GE
ANT_8_B
0.35
GR/VI
10
28
A258*9B
B207
Ring aerial
1
2
B207*1B
T_ANT1
0.35
GR
T_ANT2
0.35
SW
54
53
S63
START-STOP button
4
5
9
10
2
6
1
SSP1
0.35
GN
31_SSP1
0.35
BL/GN
SSP2
0.35
WS/BL
31_SSP2
0.35
GE/GN
LED_SSP
0.35
WS
MSA_LED
0.35
WS/SW
MSA
0.35
WS/RT
S63*1B
45
46
49
50
44
47
43
A258*7B
30
31
30
31
31
15
A258
Body Domain Controller
F12
30F
5A
30
A258*3B
15
33
ER_FT
0.35
WS
DATA_FT
0.35
GE
16
34
ER_BFT
0.35
WS/GN
DATA_BFT
0.35
GE/WS
17
35
ER_FAH
0.35
SW/GR
DATA_FHA
0.35
GN/VI
18
36
A258*9B
ER_BFH
0.35
BR/WS
DATA_BFH
0.35
BL/GE
23
25
24
X28*1B
30F<12
0.35
RT/WS
4
2
1
A27*1B
A27
Electronic outer door handle module, driver
3
A27*1B
31
0.35
BR/GE
depends on equipment installed
X117*1V
23
25
24
X5*1B
30F<12
0.35
RT/WS
4
2
1
A76*1B
A76
Electronic outer door handle module, passenger
3
A76*1B
31
0.35
BR/WS
depends on equipment installed
X119*1V
20
22
21
X8*1B
30F<12
0.35
RT/WS
4
2
1
A28*1B
A28
Outer door handle electronic module, rear driver's side
3
A28*1B
31
0.35
BR/GE
depends on equipment installed
X115*1V
20
22
21
X9*1B
30F<12
0.35
RT/WS
ER_BFH
0.35
SW/GR
DATA_BFH
0.35
GN/VI
4
2
1
A75*1B
A75
Outer door handle electronic module, rear passenger's side
3
A75*1B
31
0.35
BR/GE
depends on equipment installed
X315*1V