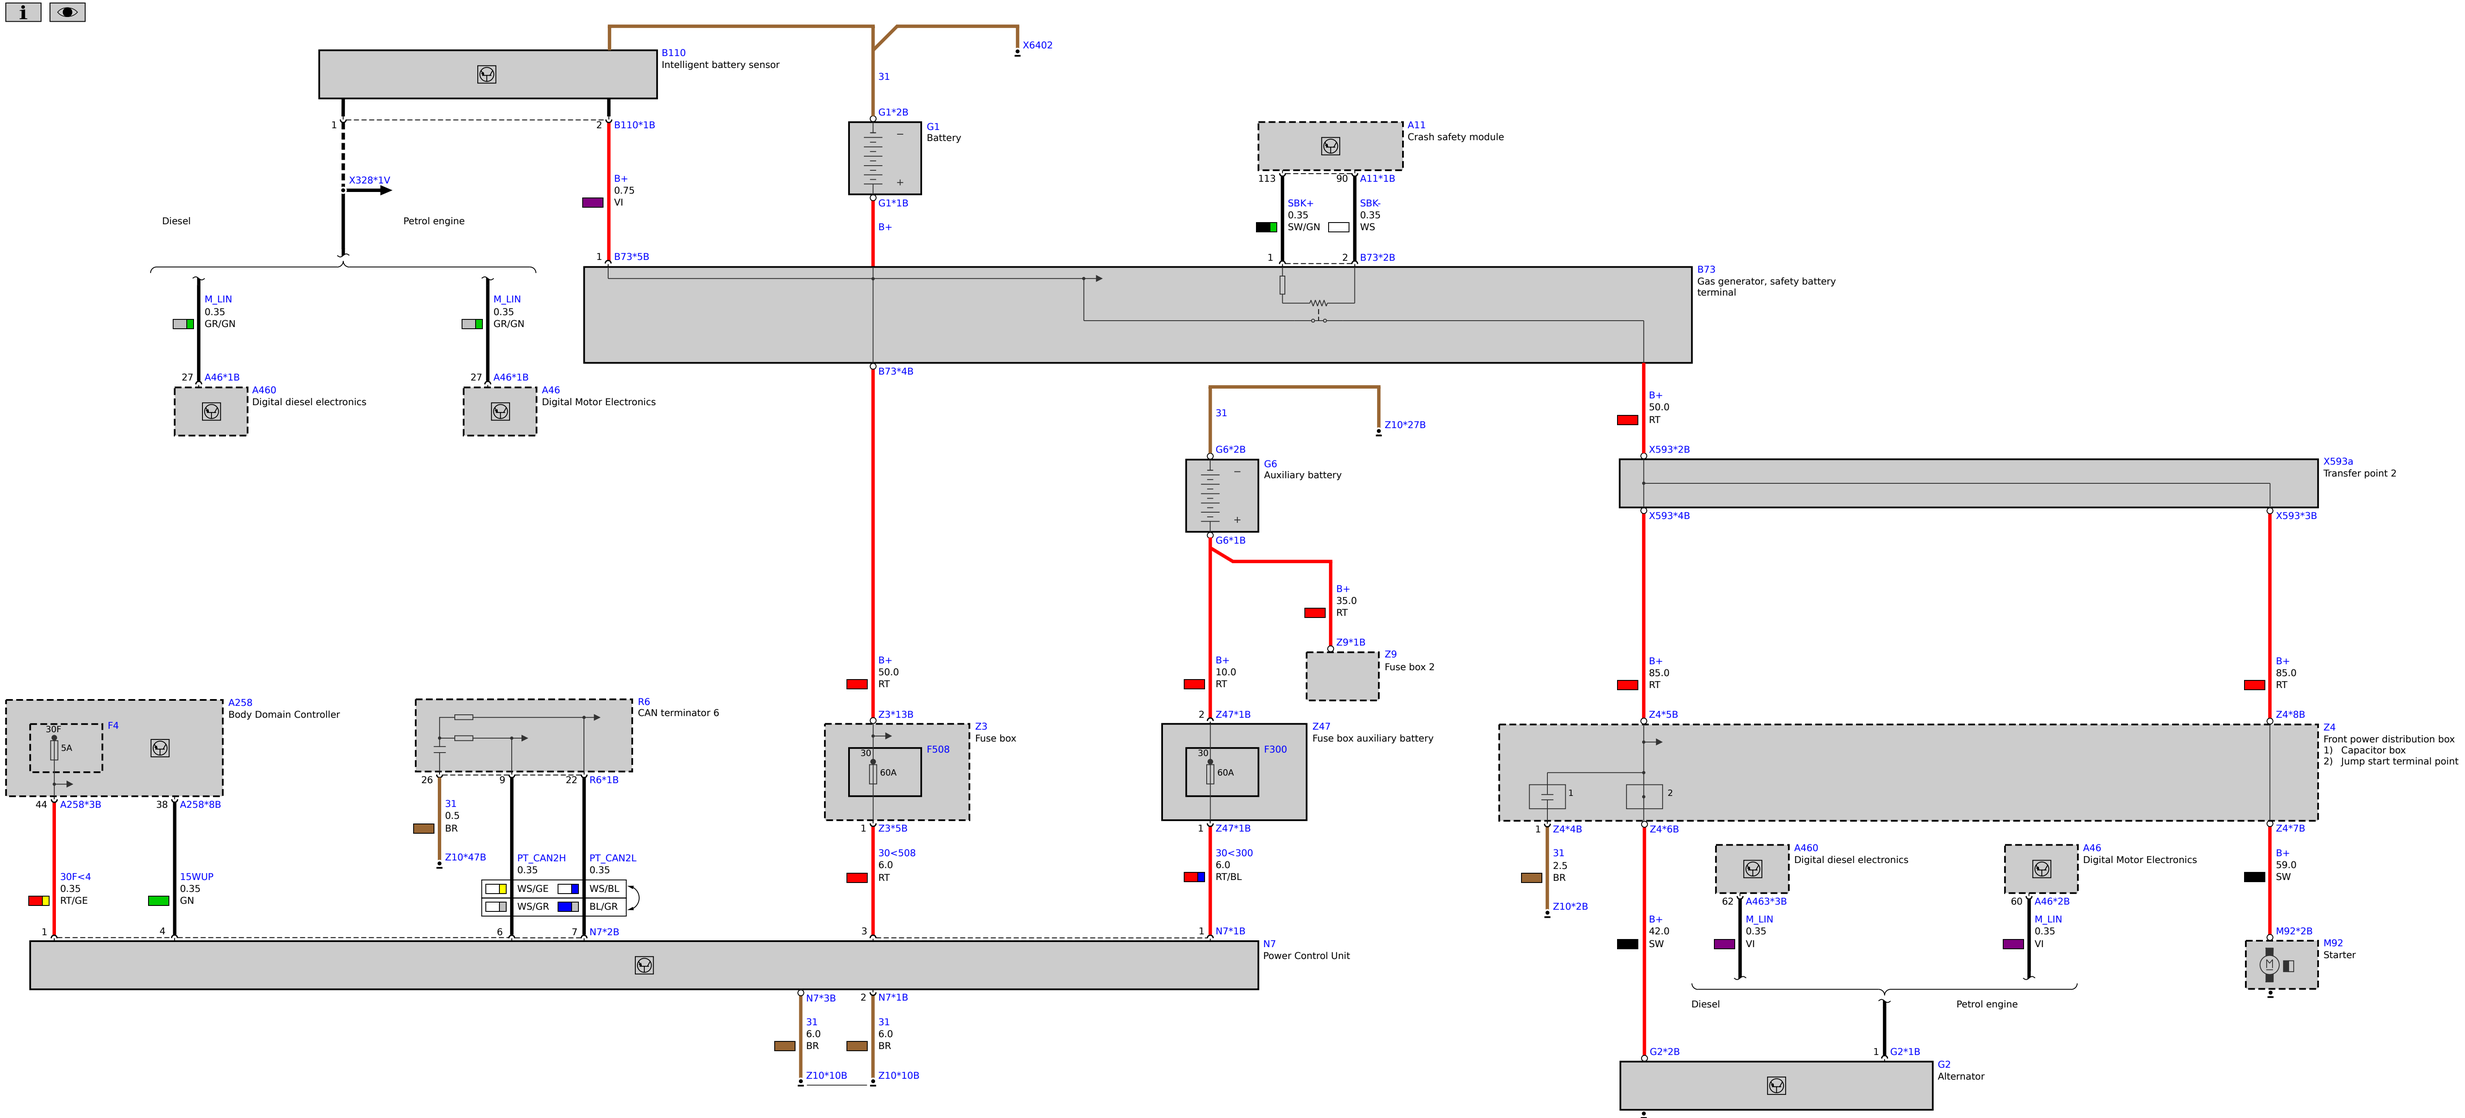
B110
Intelligent battery sensor
X6402
31
G1*2B
G1
Battery
B110*1B
B+
0.75
VI
G1*1B
B+
A11
Crash safety module
113
90
A11*1B
SBK+
0.35
SW/GN
SBK-
0.35
WS
B73*5B
B73*2B
B73
Gas generator, safety battery terminal
X328*1V
Diesel
Petrol engine
M_LIN
0.35
GR/GN
A46*1B
A460
Digital diesel electronics
A46
Digital Motor Electronics
B73*4B
31
Z10*27B
G6*2B
G6
Auxiliary battery
G6*1B
B+
35.0
RT
Z9*1B
Z9
Fuse box 2
B+
50.0
RT
X593*2B
X593a
Transfer point 2
X593*4B
X593*3B
B+
10.0
RT
B+
85.0
RT
B+
85.0
RT
A258
Body Domain Controller
F4
30F
5A
R6
CAN terminator 6
Z3*13B
Z3
Fuse box
F508
30
60A
Z47*1B
Z47
Fuse box auxiliary battery
F300
Z4*5B
Z4*8B
Z4
Front power distribution box
1) Capacitor box
2) Jump start terminal point
A258*3B
A258*8B
R6*1B
31
0.5
BR
Z10*47B
PT_CAN2H
0.35
PT_CAN2L
0.35
WS/GE
WS/BL
WS/GR
BL/GR
Z3*5B
30<508
6.0
RT
Z47*1B
30<300
6.0
RT/BL
Z4*4B
Z4*6B
Z4*7B
31
2.5
BR
Z10*2B
A460
Digital diesel electronics
A463*3B
A46
Digital Motor Electronics
A46*2B
B+
59.0
SW
30F<4
0.35
RT/GE
15WUP
0.35
GN
N7*2B
N7*1B
N7
Power Control Unit
B+
42.0
SW
M_LIN
0.35
VI
M_LIN
0.35
VI
M92*2B
M92
Starter
Diesel
Petrol engine
N7*3B
N7*1B
31
6.0
BR
31
6.0
BR
Z10*10B
Z10*10B
G2*2B
G2*1B
G2
Alternator