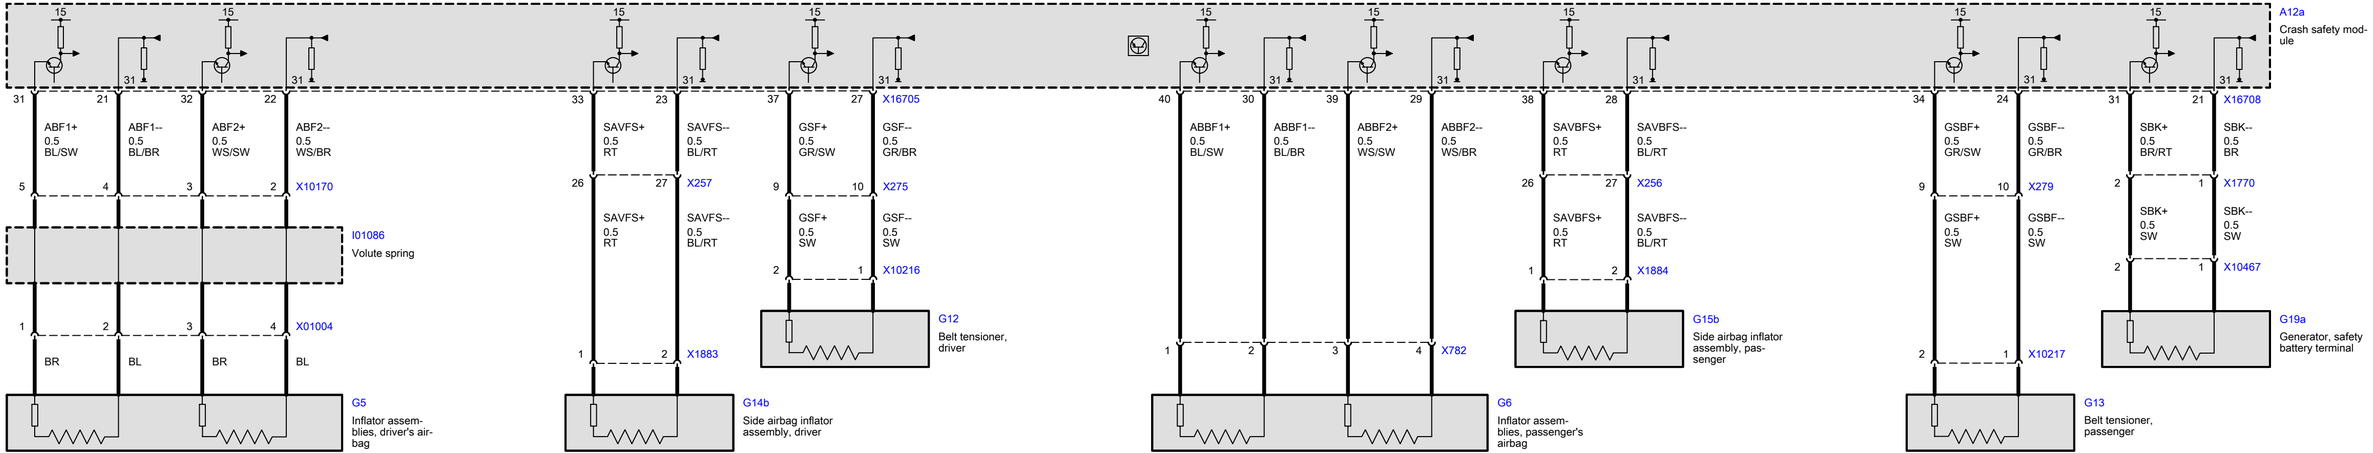
A12a
Crash safety module
15
31
ABF1+ 0.5 BL/SW
ABF1-- 0.5 BL/BR
ABF2+ 0.5 WS/SW
ABF2-- 0.5 WS/BR
X10170
I01086
Volute spring
X01004
BR
BL
BR
BL
G5
Inflator assemblies, driver's airbag
SAVFS+ 0.5 RT
SAVFS-- 0.5 BL/RT
X257
X1883
G14b
Side airbag inflator assembly, driver
GSF+ 0.5 GR/SW
GSF-- 0.5 GR/BR
X16705
GSF+ 0.5 SW
GSF-- 0.5 SW
X275
X10216
G12
Belt tensioner, driver
ABBF1+ 0.5 BL/SW
ABBF1-- 0.5 BL/BR
ABBF2+ 0.5 WS/SW
ABBF2-- 0.5 WS/BR
X782
G6
Inflator assemblies, passenger's airbag
SAVBFS+ 0.5 RT
SAVBFS-- 0.5 BL/RT
X256
X1884
G15b
Side airbag inflator assembly, passenger
GSBF+ 0.5 GR/SW
GSBF-- 0.5 GR/BR
X279
GSBF+ 0.5 SW
GSBF-- 0.5 SW
X10217
G13
Belt tensioner, passenger
SBK+ 0.5 BR/RT
SBK-- 0.5 BR
X1770
SBK+ 0.5 SW
SBK-- 0.5 SW
X10467
G19a
Generator, safety battery terminal