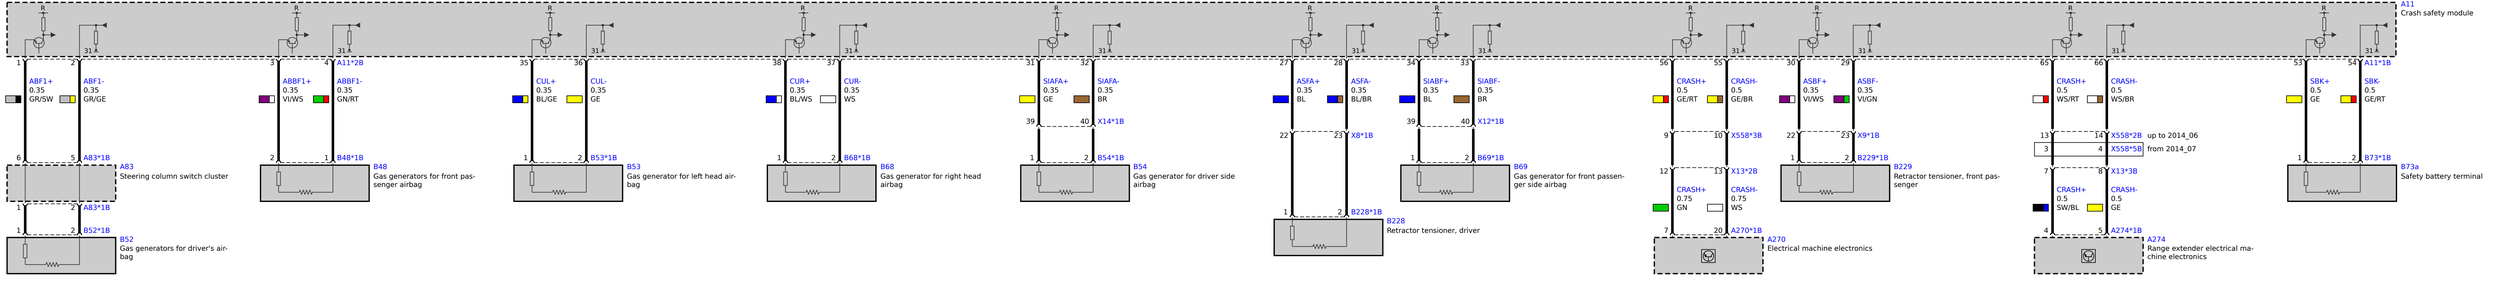
A11
Crash safety module
ABF1+
0.35
GR/SW
ABF1-
0.35
GR/GE
A83*1B
A83
Steering column switch cluster
A83*1B
B52*1B
B52
Gas generators for driver's air-bag
ABBF1+
0.35
VI/WS
ABBF1-
0.35
GN/RT
A11*2B
B48*1B
B48
Gas generators for front pas-senger airbag
CUL+
0.35
BL/GE
CUL-
0.35
GE
B53*1B
B53
Gas generator for left head air-bag
CUR+
0.35
BL/WS
CUR-
0.35
WS
B68*1B
B68
Gas generator for right head airbag
SIAFA+
0.35
GE
SIAFA-
0.35
BR
X14*1B
B54*1B
B54
Gas generator for driver side airbag
ASFA+
0.35
BL
ASFA-
0.35
BL/BR
X8*1B
B228*1B
B228
Retractor tensioner, driver
SIABF+
0.35
BL
SIABF-
0.35
BR
X12*1B
B69*1B
B69
Gas generator for front passen-ger side airbag
CRASH+
0.5
GE/RT
CRASH-
0.5
GE/BR
X558*3B
X13*2B
CRASH+
0.75
GN
CRASH-
0.75
WS
A270*1B
A270
Electrical machine electronics
ASBF+
0.35
VI/WS
ASBF-
0.35
VI/GN
X9*1B
B229*1B
B229
Retractor tensioner, front pas-senger
CRASH+
0.5
WS/RT
CRASH-
0.5
WS/BR
X558*2B
up to 2014_06
X558*5B
from 2014_07
X13*3B
CRASH+
0.5
SW/BL
CRASH-
0.5
GE
A274*1B
A274
Range extender electrical ma-chine electronics
SBK+
0.5
GE
SBK-
0.5
GE/RT
A11*1B
B73*1B
B73a
Safety battery terminal