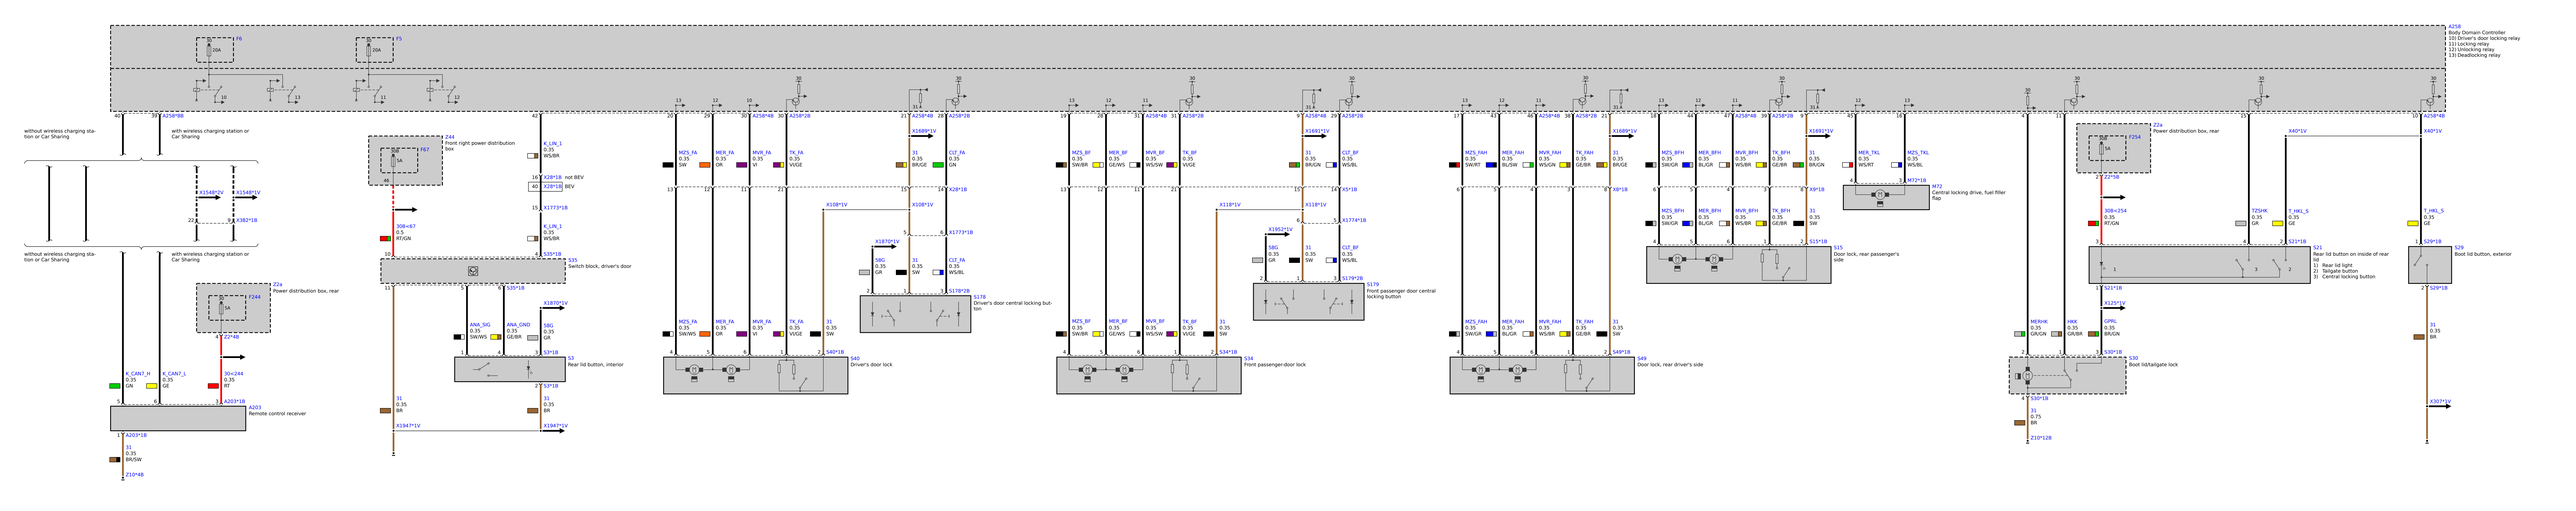
A258
Body Domain Controller
10 Driver's door locking relay
11 Locking relay
12 Unlocking relay
13 Deadlocking relay
F6 20A
F5 20A
without wireless charging station or Car Sharing
with wireless charging station or Car Sharing
A258*9B
X154B*2V
X154B*1V
X382*1B
Z2a Power distribution box, rear
F244 5A
Z2*4B
K_CAN7_H 0.35 GN
K_CAN7_L 0.35 GE
30<244 0.35 RT
A203 Remote control receiver
A203*1B
31 0.35 BK/SW
Z10*4B
F67 5A
244 Front right power distribution box
308<67 0.5 RT/GN
X135*1B
S35 Switch block, driver's door
S35*1B
ANA_SIG 0.35 SW/WS
ANA_GND 0.35 GE/BR
S36 0.35 GR
S36*1B
S1 Rear lid button, interior
S1*1B
31 0.35 BR
X194T*1V
X187*01V
X194T*1V
K_LIN_1 0.35 WS/BR
X28*1B not BEV
X28*1B BEV
X177*1B
K_LIN_1 0.35 WS/BR
X135*1B
MZS_FA 0.35 SW
MER_FA 0.35 OR
MVR_FA 0.35 VI
TK_FA 0.35 VI/GE
31 0.35 SW
S40*1B
A40 Driver's door lock
X168*01V
31 0.35 BR/GE
CLT_FA 0.35 GN
X28*1B
X108*1V
X108*1V
X187*01V
SBG 0.35 GR
31 0.35 SW
CLT_FA 0.35 WS/BL
X177*1B
S178 Driver's door central locking button
S178*2B
MZS_BF 0.35 SW/BR
MER_BF 0.35 GE/WS
MVR_BF 0.35 WS/SW
TK_BF 0.35 VI/GE
31 0.35 SW
S34*1B
A34 Front passenger-door lock
X118*01V
X185Z*01V
SBG 0.35 GR
31 0.35 SW
CLT_BF 0.35 WS/BL
X177*1B
S179 Front passenger door central locking button
S179*2B
MZS_FAH 0.35 SW/RT
MER_FAH 0.35 BL/SW
MVR_FAH 0.35 WS/GN
TK_FAH 0.35 GE/BR
31 0.35 SW
S49*1B
A49 Door lock, rear driver's side
X8*1B
MZS_BFH 0.35 SW/GR
MER_BFH 0.35 BL/GR
MVR_BFH 0.35 WS/BR
TK_BFH 0.35 GE/BR
31 0.35 BR/GN
S15*1B
S15 Door lock, rear passenger's side
MER_TKL 0.35 WS/RT
MZS_TKL 0.35 WS/BL
M72*1B
M72 Central locking drive, fuel filler flap
Z2*9B
308<254 0.35 RT/GN
F254
Z2a Power distribution box, rear
X40*1V
T_HKL_S 0.35 GE
F254*K
S23*1B
S21 Rear lid button on inside of rear lid
1) Rear lid light
2) Tailgate button
3) Central locking button
S21*1B
X125*1V
MER/HK 0.35 GR/GN
HKK 0.35 GR/BR
GPRL 0.35 BR/GN
S30*1B
S30 Boot lid/tailgate lock
S30*1B
31 0.75 BR
Z10*12B
X40*1V
T_HKL_S 0.35 GE
S29*1B
S29 Boot lid button, exterior
S29*1B
31 0.35 BR
X307*1V