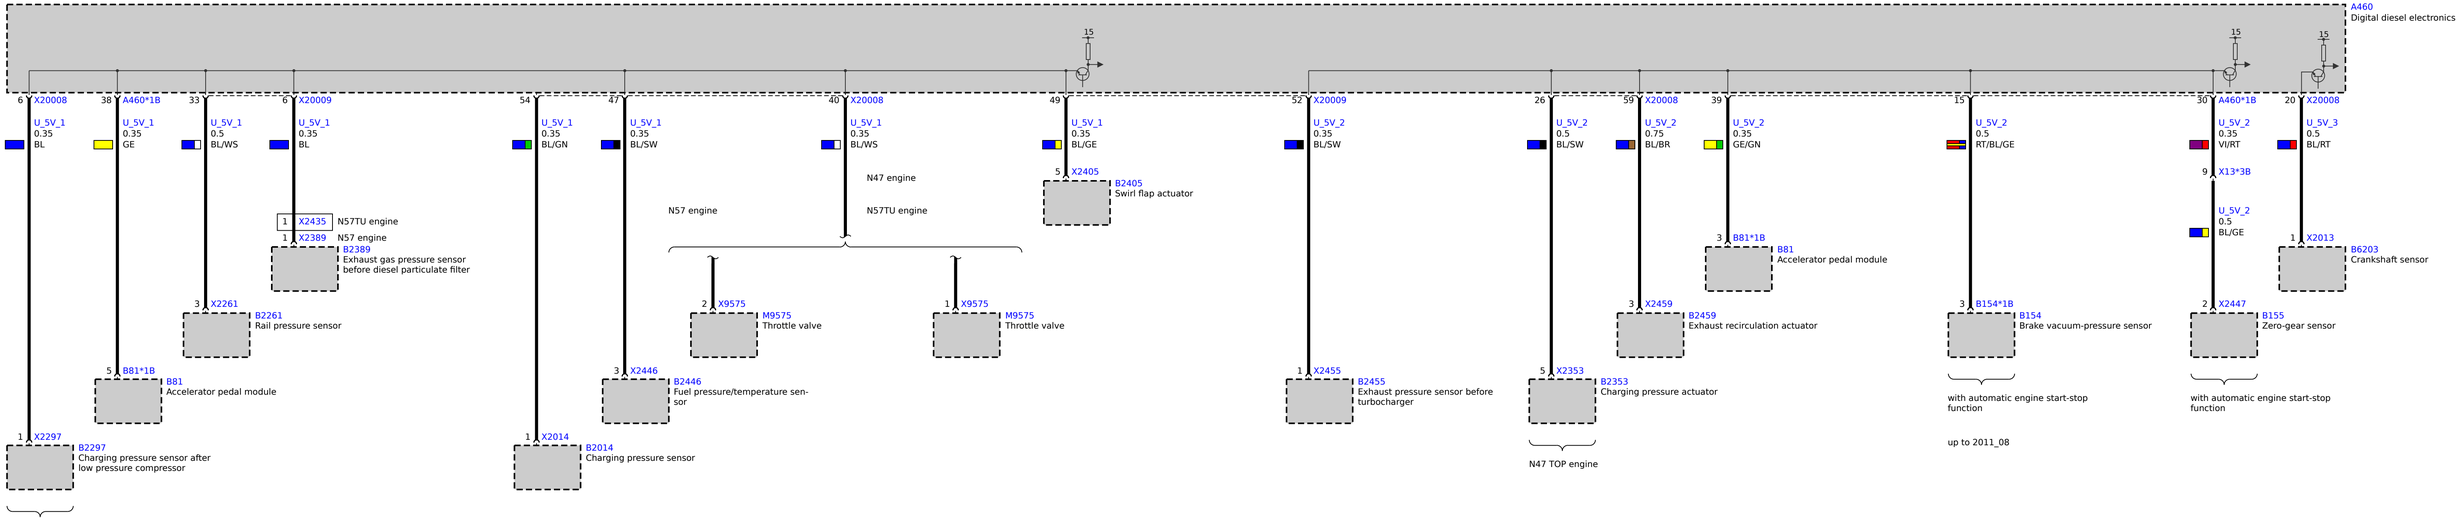
A460
Digital diesel electronics
15
6 X20008
U_5V_1
0.35
BL
1 X2297
B2297
Charging pressure sensor after low pressure compressor
N57SL engine
38 A460*1B
U_5V_1
0.35
GE
5 B81*1B
B81
Accelerator pedal module
33
U_5V_1
0.5
BL/WS
3 X2261
B2261
Rail pressure sensor
6 X20009
U_5V_1
0.35
BL
1 X2435
N57TU engine
1 X2389
N57 engine
B2389
Exhaust gas pressure sensor before diesel particulate filter
54
U_5V_1
0.35
BL/GN
1 X2014
B2014
Charging pressure sensor
47
U_5V_1
0.35
BL/SW
3 X2446
B2446
Fuel pressure/temperature sensor
N57 engine
2 X9575
M9575
Throttle valve
40 X20008
U_5V_1
0.35
BL/WS
N47 engine
N57TU engine
1 X9575
M9575
Throttle valve
49
U_5V_1
0.35
BL/GE
5 X2405
B2405
Swirl flap actuator
52 X20009
U_5V_2
0.35
BL/SW
1 X2455
B2455
Exhaust pressure sensor before turbocharger
26
U_5V_2
0.5
BL/SW
5 X2353
B2353
Charging pressure actuator
N47 TOP engine
59 X20008
U_5V_2
0.75
BL/BR
3 X2459
B2459
Exhaust recirculation actuator
39
U_5V_2
0.35
GE/GN
3 B81*1B
B81
Accelerator pedal module
15
U_5V_2
0.5
RT/BL/GE
3 B1S4*1B
B154
Brake vacuum-pressure sensor
with automatic engine start-stop function
up to 2011_08
30 A460*1B
U_5V_2
0.35
VI/RT
9 X13*3B
U_5V_2
0.5
BL/GE
2 X2447
B155
Zero-gear sensor
with automatic engine start-stop function
20 X20008
U_5V_3
0.5
BL/RT
1 X2013
B6203
Crankshaft sensor