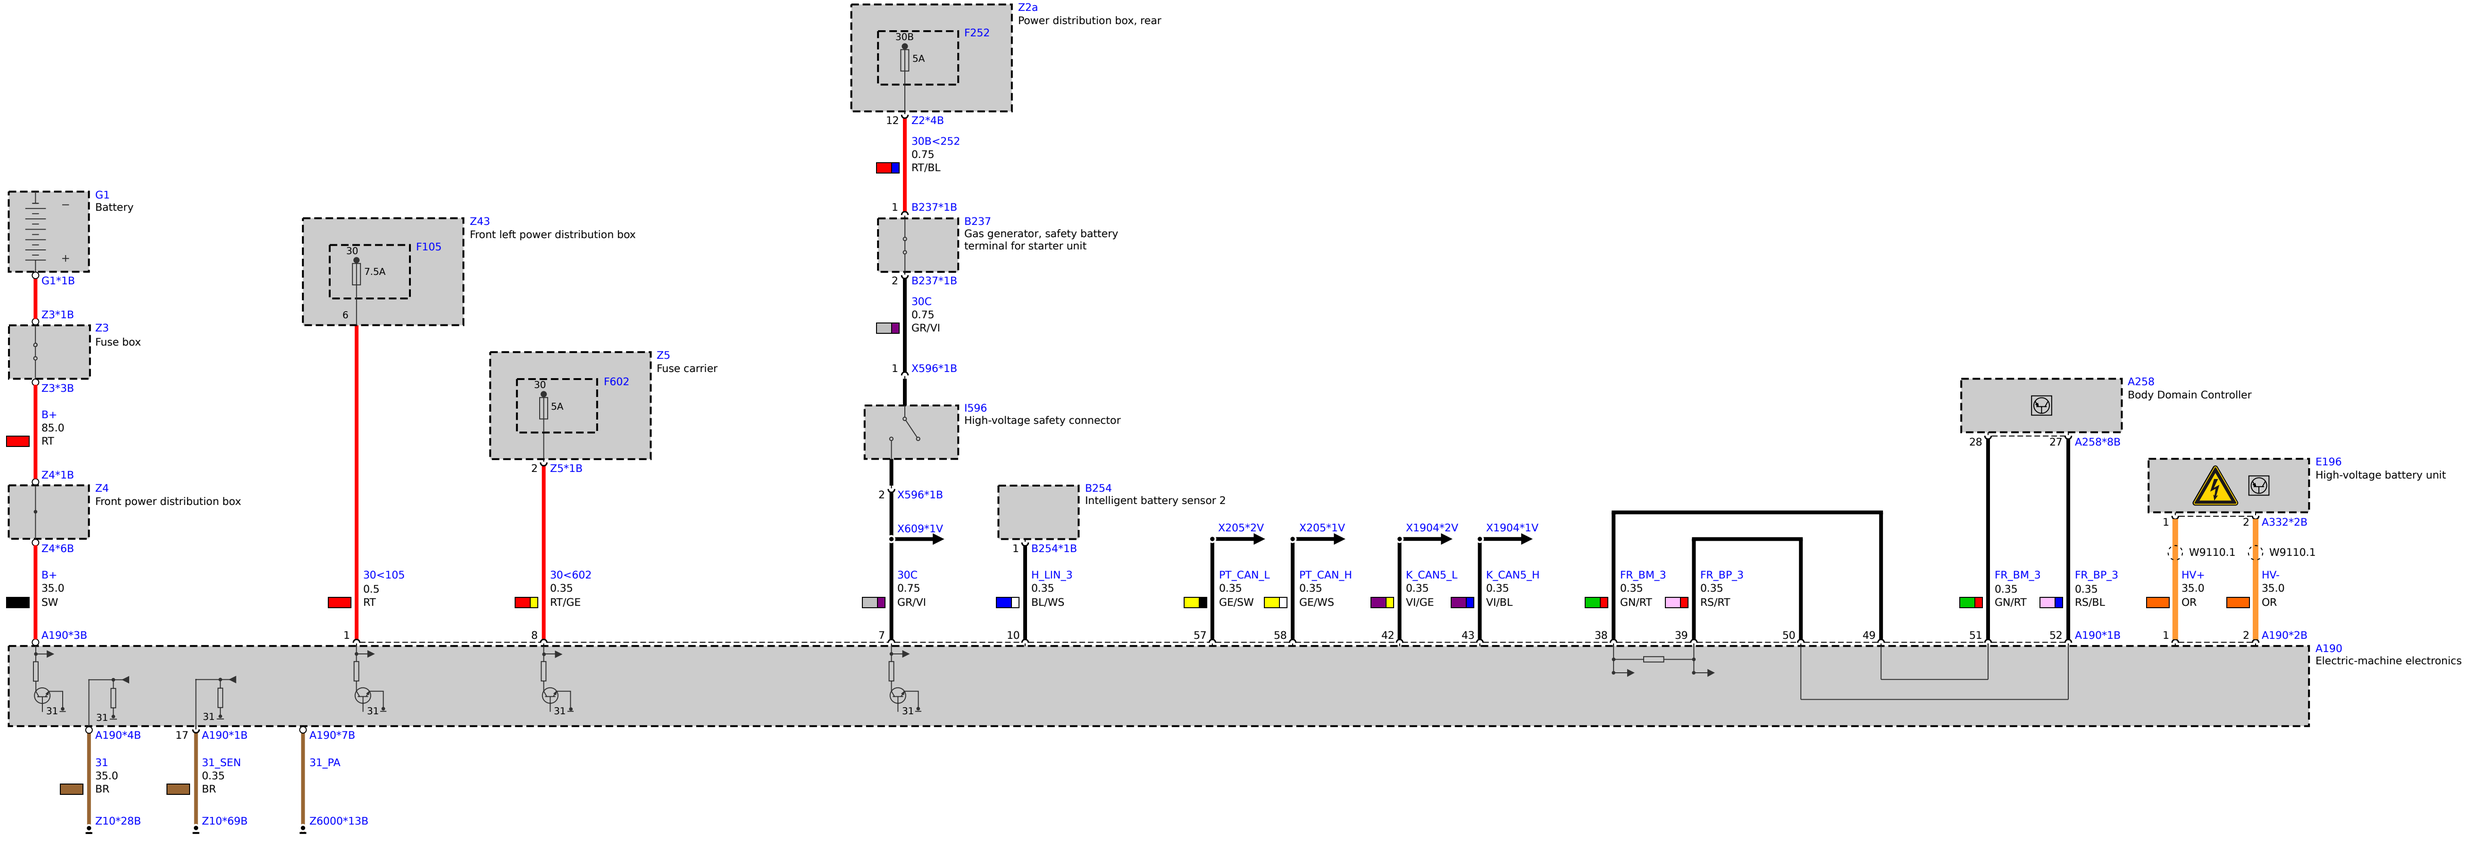
Z2a
Power distribution box, rear
30B
F252
5A
12
Z2*4B
30B<252
0.75
RT/BL
1
B237*1B
B237
Gas generator, safety battery terminal for starter unit
2
B237*1B
30C
0.75
GR/VI
1
X596*1B
I596
High-voltage safety connector
2
X596*1B
X609*1V
G1
Battery
G1*1B
Z3*1B
Z3
Fuse box
Z3*3B
B+
85.0
RT
Z4*1B
Z4
Front power distribution box
Z4*6B
B+
35.0
SW
A190*3B
Z43
Front left power distribution box
30
F105
7.5A
6
30<105
0.5
RT
1
Z5
Fuse carrier
30
F602
5A
2
Z5*1B
30<602
0.35
RT/GE
8
B254
Intelligent battery sensor 2
1
B254*1B
H_LIN_3
0.35
BL/WS
10
30C
0.75
GR/VI
7
X205*2V
X205*1V
X1904*2V
X1904*1V
PT_CAN_L
0.35
GE/SW
57
58
PT_CAN_H
0.35
GE/WS
42
K_CAN5_L
0.35
VI/GE
43
K_CAN5_H
0.35
VI/BL
38
FR_BM_3
0.35
GN/RT
39
FR_BP_3
0.35
RS/RT
50
49
A258
Body Domain Controller
28
27
A258*8B
51
FR_BM_3
0.35
GN/RT
52
FR_BP_3
0.35
RS/BL
A190*1B
E196
High-voltage battery unit
1
2
A332*2B
W9110.1
W9110.1
HV+
35.0
OR
HV-
35.0
OR
1
2
A190*2B
A190
Electric-machine electronics
31
31
31
31
31
A190*4B
17
A190*1B
A190*7B
31
35.0
BR
31_SEN
0.35
BR
31_PA
Z10*28B
Z10*69B
Z6000*13B