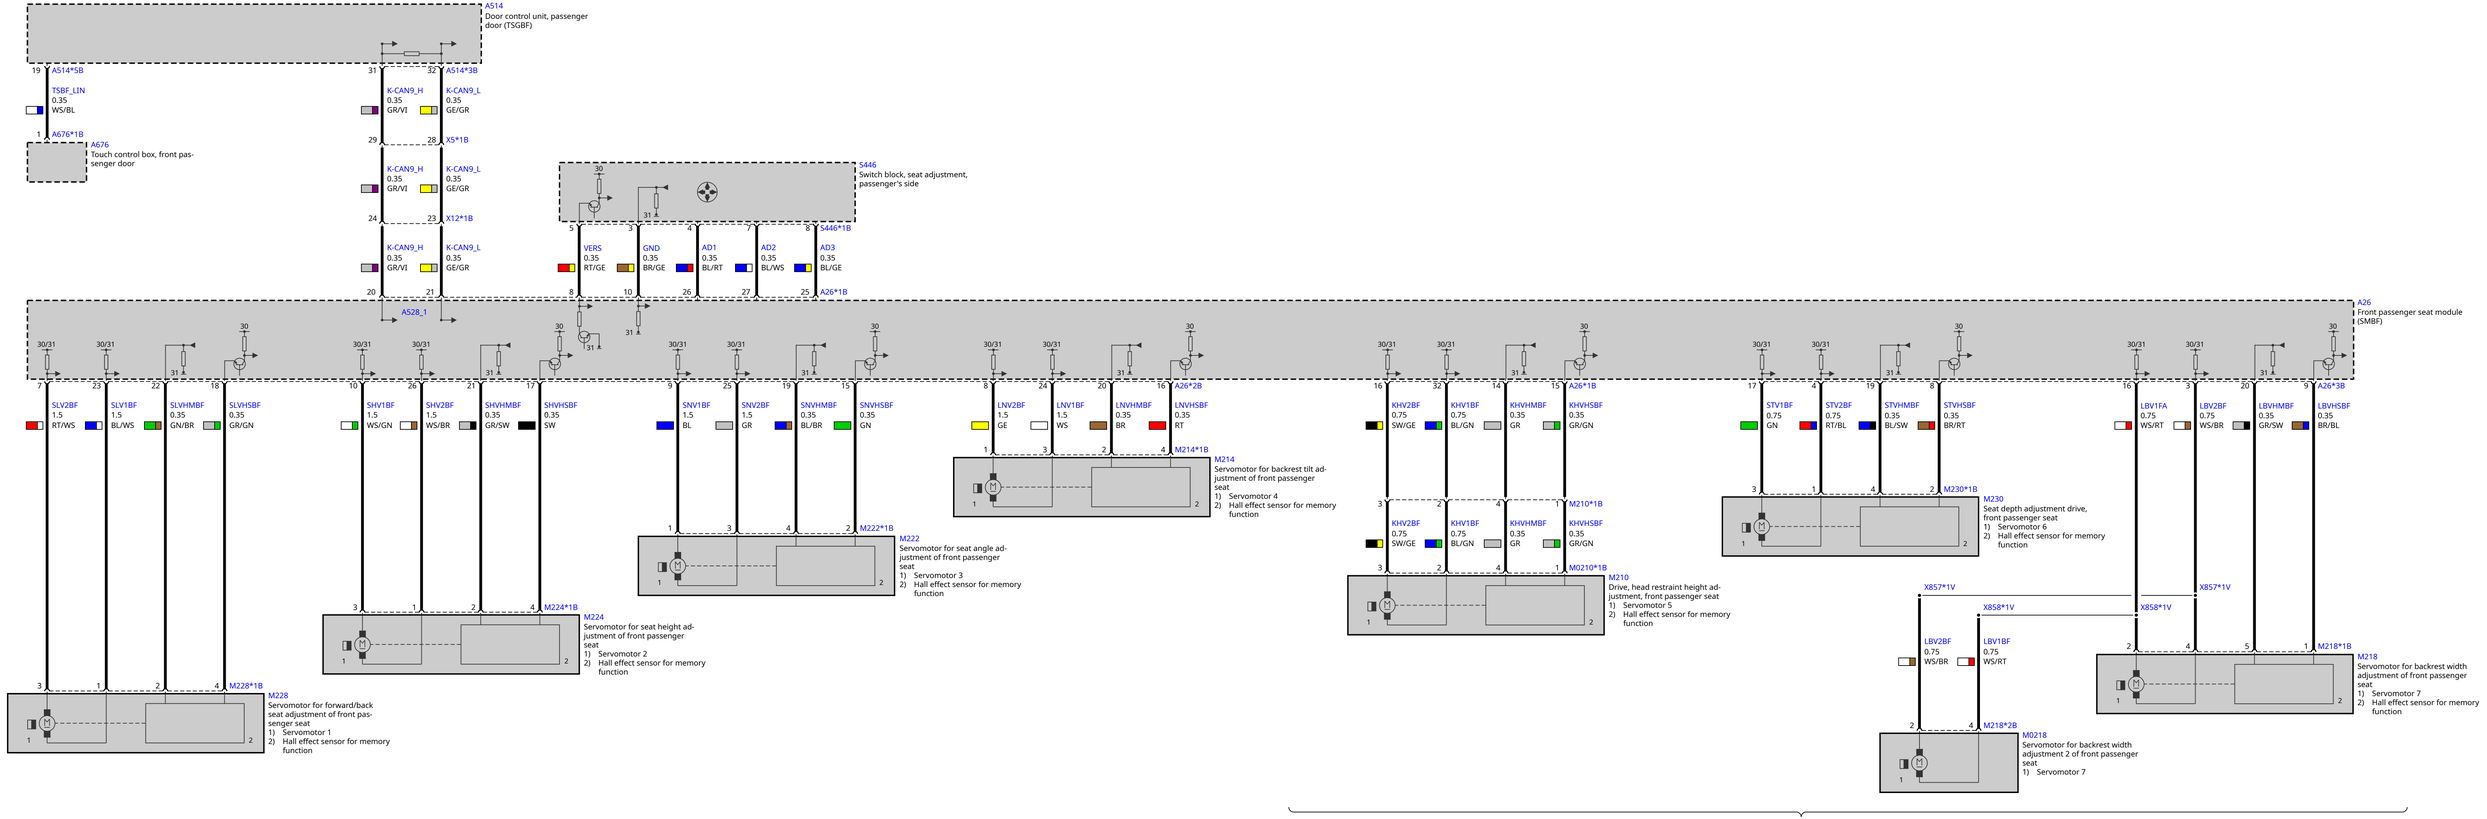
A514
Door control unit, passenger door (TSGBF)
A514*5B
TSBF_LIN
0.35
WS/BL
A676*1B
A676
Touch control box, front passenger door
A514*3B
K-CAN9_H
0.35
GR/VI
K-CAN9_L
0.35
GE/GR
X5*1B
X12*1B
S446
Switch block, seat adjustment, passenger's side
S446*1B
VERS
0.35
RT/GE
GND
0.35
BR/GE
AD1
0.35
BL/RT
AD2
0.35
BL/WS
AD3
0.35
BL/GE
A26*1B
A528_1
A26
Front passenger seat module (SMBF)
SLV2BF
1.5
RT/WS
SLV1BF
1.5
BL/WS
SLVHMBF
0.35
GN/BR
SLVHSBF
0.35
GR/GN
M228*1B
M228
Servomotor for forward/back seat adjustment of front passenger seat
1) Servomotor 1
2) Hall effect sensor for memory function
SHV1BF
1.5
WS/GN
SHV2BF
1.5
WS/BR
SHVHMBF
0.35
GR/SW
SHVHSBF
0.35
SW
M224*1B
M224
Servomotor for seat height adjustment of front passenger seat
1) Servomotor 2
2) Hall effect sensor for memory function
SNV1BF
1.5
BL
SNV2BF
1.5
GR
SNVHMBF
0.35
BL/BR
SNVHSBF
0.35
GN
M222*1B
M222
Servomotor for seat angle adjustment of front passenger seat
1) Servomotor 3
2) Hall effect sensor for memory function
LNV2BF
1.5
GE
LNV1BF
1.5
WS
LNVHMBF
0.35
BR
LNVHSBF
0.35
RT
A26*2B
M214*1B
M214
Servomotor for backrest tilt adjustment of front passenger seat
1) Servomotor 4
2) Hall effect sensor for memory function
KHV2BF
0.75
SW/GE
KHV1BF
0.75
BL/GN
KHVHMBF
0.35
GR
KHVHSBF
0.35
GR/GN
M210*1B
M0210*1B
M210
Drive, head restraint height adjustment, front passenger seat
1) Servomotor 5
2) Hall effect sensor for memory function
STV1BF
0.75
GN
STV2BF
0.75
RT/BL
STVHMBF
0.35
BL/SW
STVHSBF
0.35
BR/RT
M230*1B
M230
Seat depth adjustment drive, front passenger seat
1) Servomotor 6
2) Hall effect sensor for memory function
LBV1FA
0.75
WS/RT
LBV2BF
0.75
WS/BR
LBVHMBF
0.35
GR/SW
LBVHSBF
0.35
BR/BL
A26*3B
X857*1V
X858*1V
LBV2BF
0.75
WS/BR
LBV1BF
0.75
WS/RT
M218*1B
M218
Servomotor for backrest width adjustment of front passenger seat
1) Servomotor 7
2) Hall effect sensor for memory function
M218*2B
M0218
Servomotor for backrest width adjustment 2 of front passenger seat
1) Servomotor 7
with multifunction seat