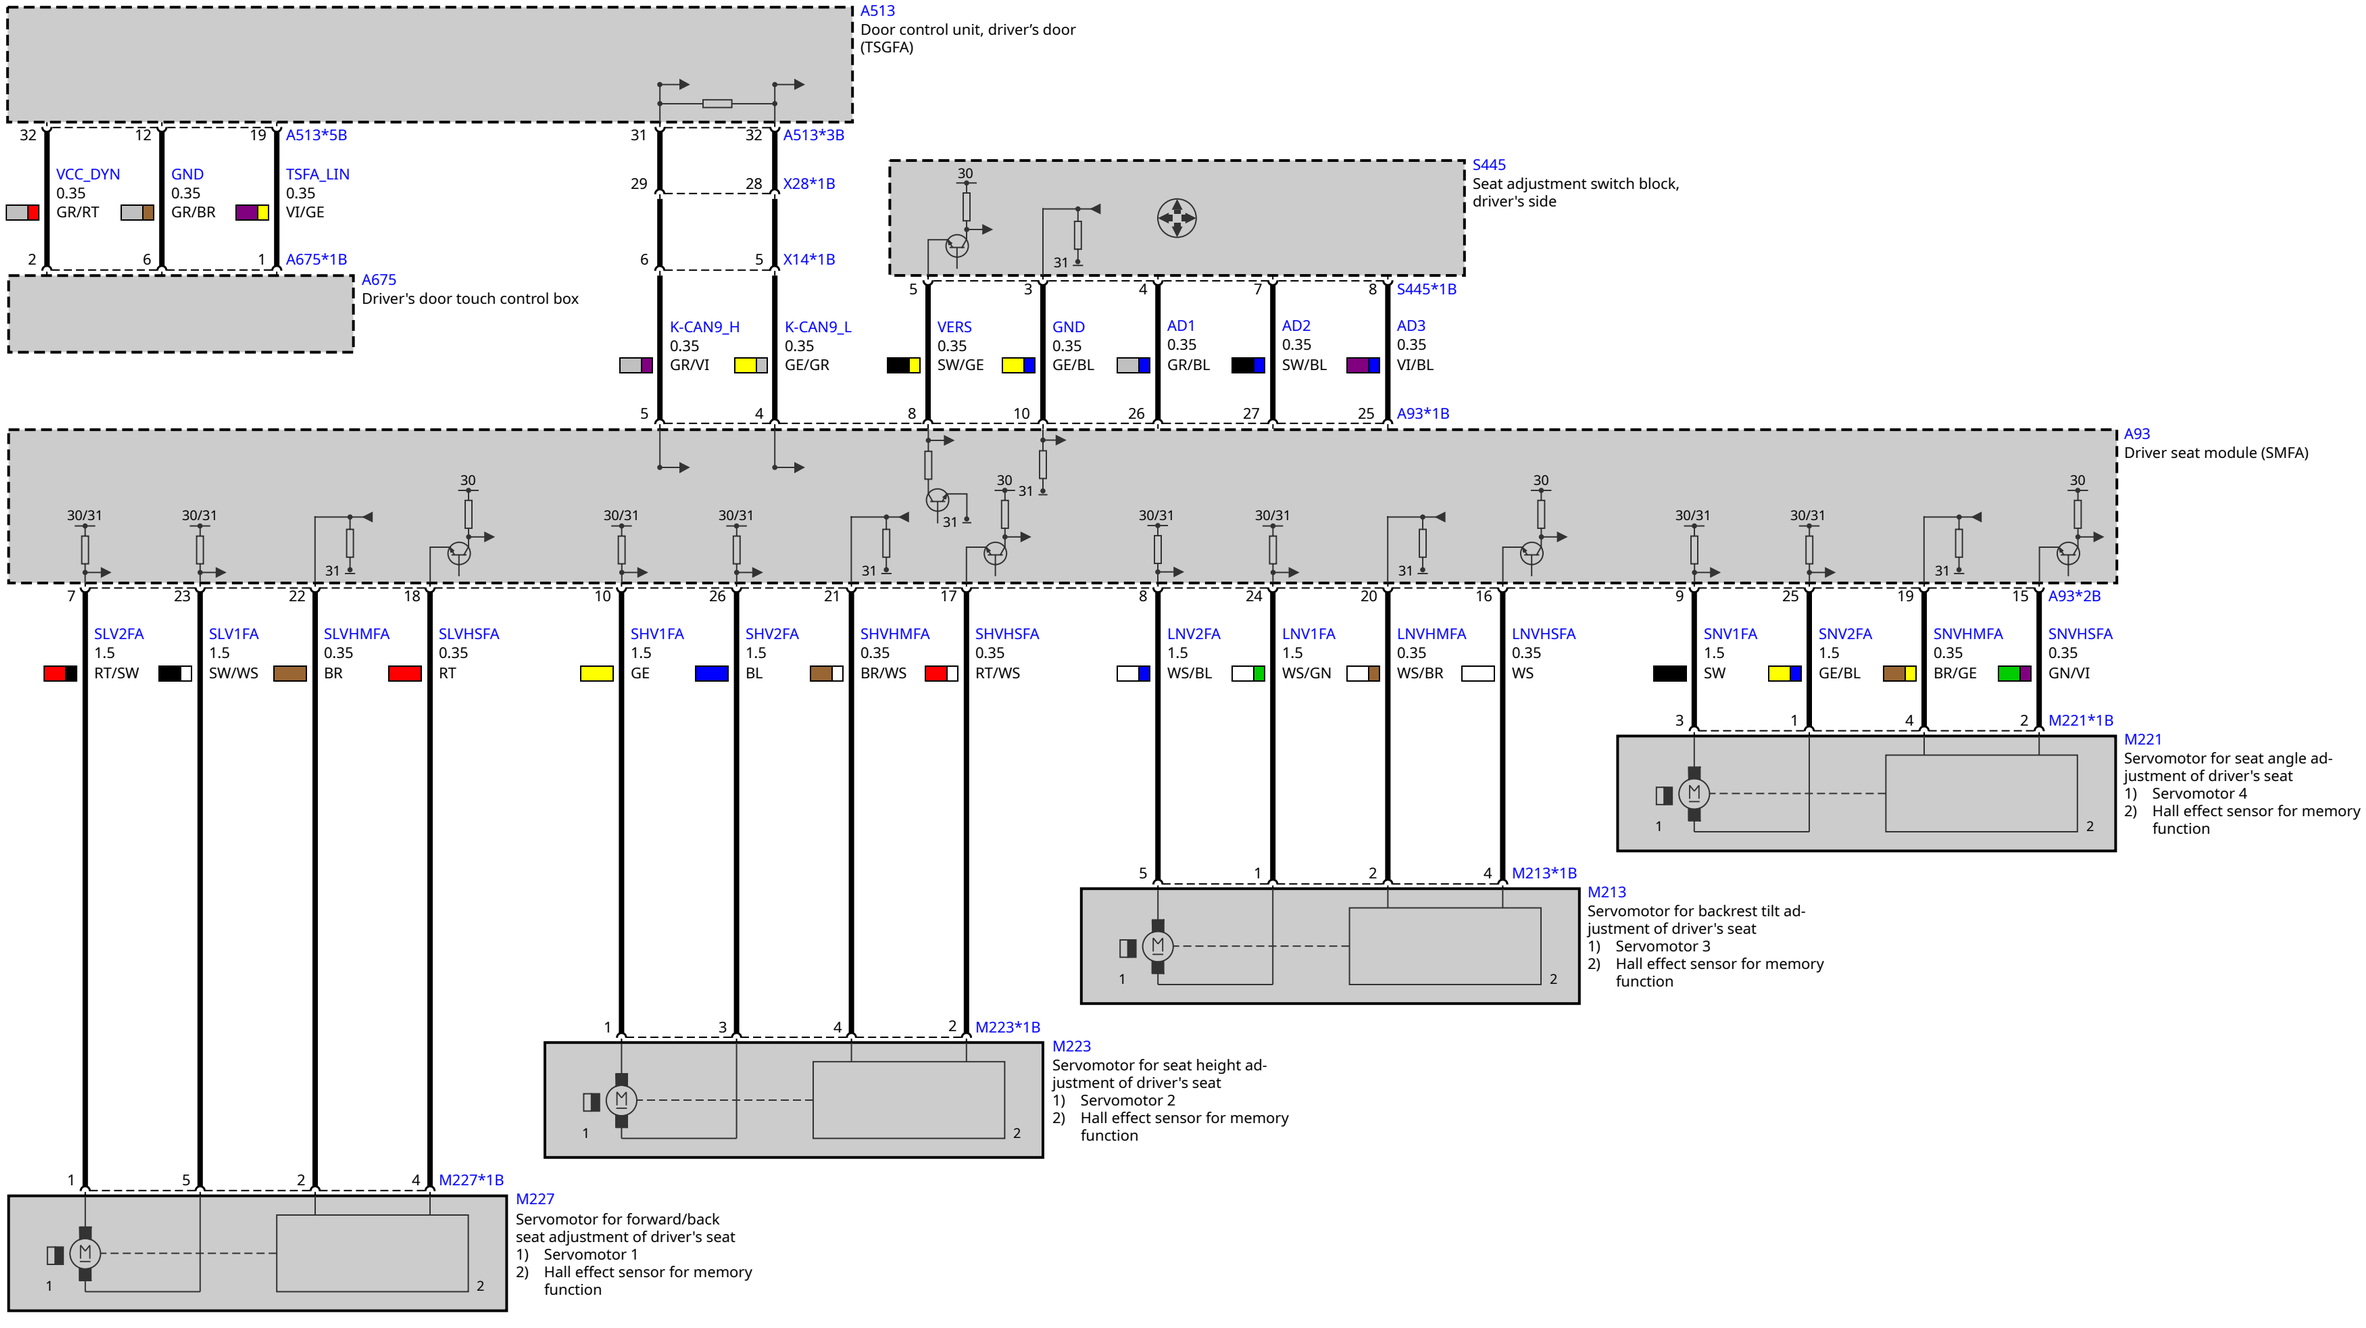
A513
Door control unit, driver's door (TSGFA)
A513*5B
A513*3B
VCC_DYN 0.35 GR/RT
GND 0.35 GR/BR
TSFA_LIN 0.35 VI/GE
A675*1B
A675
Driver's door touch control box
X28*1B
X14*1B
K-CAN9_H 0.35 GR/VI
K-CAN9_L 0.35 GE/GR
S445
Seat adjustment switch block, driver's side
S445*1B
VERS 0.35 SW/GE
GND 0.35 GE/BL
AD1 0.35 GR/BL
AD2 0.35 SW/BL
AD3 0.35 VI/BL
A93*1B
A93
Driver seat module (SMFA)
A93*2B
SLV2FA 1.5 RT/SW
SLV1FA 1.5 SW/WS
SLVHMFA 0.35 BR
SLVHSFA 0.35 RT
SHV1FA 1.5 GE
SHV2FA 1.5 BL
SHVHMFA 0.35 BR/WS
SHVHSFA 0.35 RT/WS
LNV2FA 1.5 WS/BL
LNV1FA 1.5 WS/GN
LNVHMFA 0.35 WS/BR
LNVHSFA 0.35 WS
SNV1FA 1.5 SW
SNV2FA 1.5 GE/BL
SNVHMFA 0.35 BR/GE
SNVHSFA 0.35 GN/VI
M221*1B
M221
Servomotor for seat angle adjustment of driver's seat
1) Servomotor 4
2) Hall effect sensor for memory function
M213*1B
M213
Servomotor for backrest tilt adjustment of driver's seat
1) Servomotor 3
2) Hall effect sensor for memory function
M223*1B
M223
Servomotor for seat height adjustment of driver's seat
1) Servomotor 2
2) Hall effect sensor for memory function
M227*1B
M227
Servomotor for forward/back seat adjustment of driver's seat
1) Servomotor 1
2) Hall effect sensor for memory function