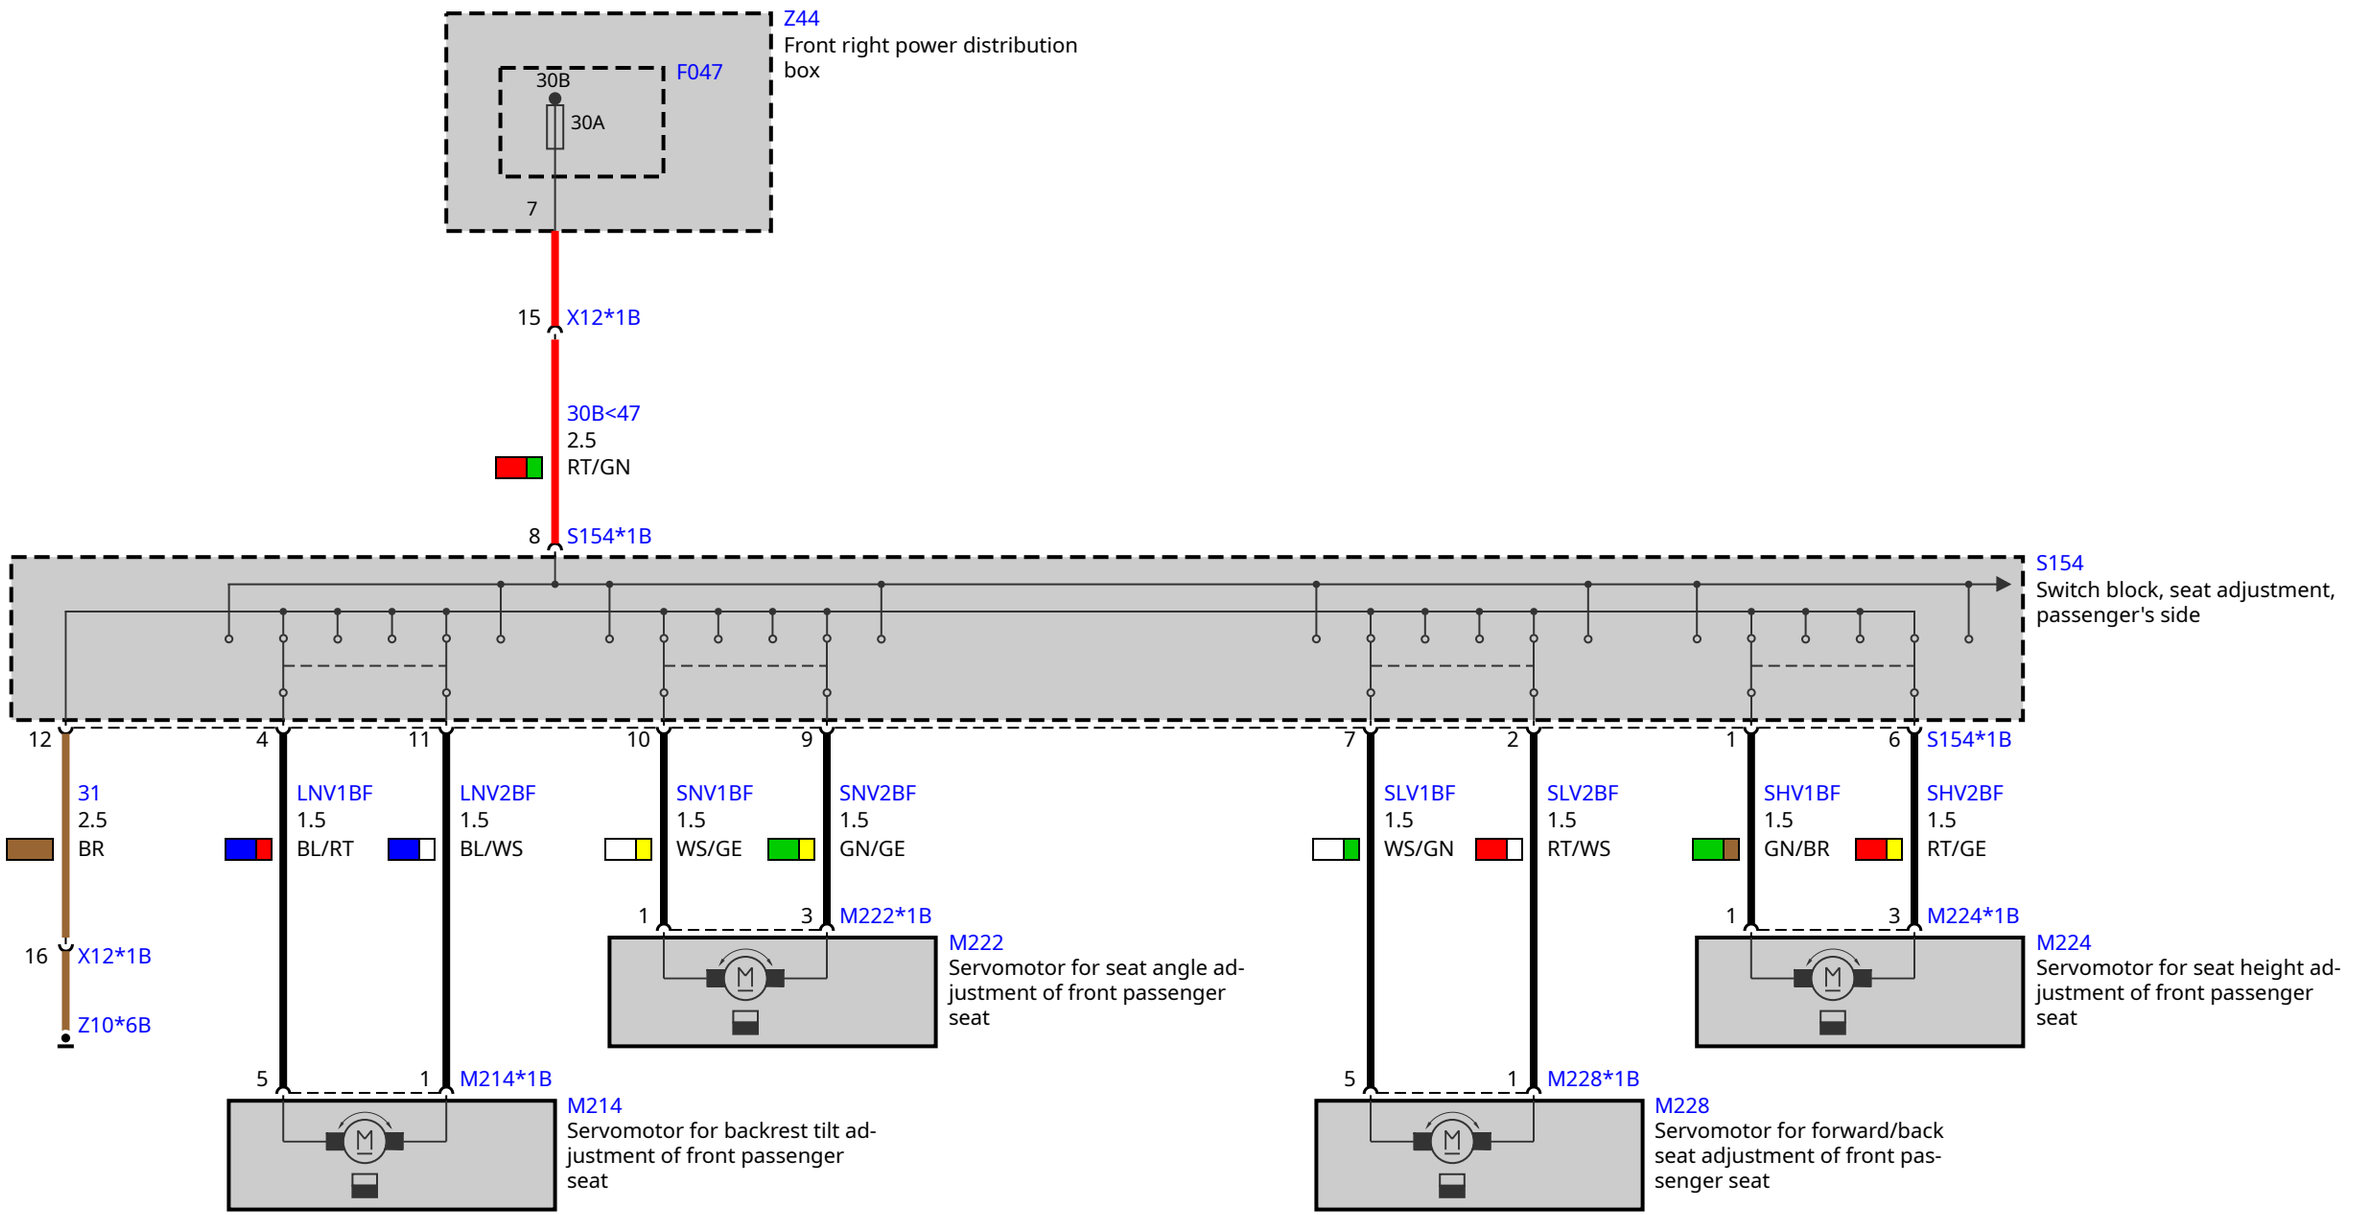
Z44
Front right power distribution box
F047
30B
30A
7
15
X12*1B
30B<47
2.5
RT/GN
8
S154*1B
S154
Switch block, seat adjustment, passenger's side
12
31
2.5
BR
16
X12*1B
Z10*6B
4
LNV1BF
1.5
BL/RT
11
LNV2BF
1.5
BL/WS
5
1
M214*1B
M214
Servomotor for backrest tilt adjustment of front passenger seat
10
SNV1BF
1.5
WS/GE
9
SNV2BF
1.5
GN/GE
1
3
M222*1B
M222
Servomotor for seat angle adjustment of front passenger seat
7
SLV1BF
1.5
WS/GN
2
SLV2BF
1.5
RT/WS
5
1
M228*1B
M228
Servomotor for forward/back seat adjustment of front passenger seat
1
SHV1BF
1.5
GN/BR
6
S154*1B
SHV2BF
1.5
RT/GE
1
3
M224*1B
M224
Servomotor for seat height adjustment of front passenger seat